

VERSYS 1000

Motorcycle

OWNER'S MANUAL

 Read this manual carefully. It contains safety information.

Kawasaki

Quick Reference Guide

This Quick Reference Guide will assist you in finding the information you're looking for.

SAFETY INFORMATION

GENERAL INFORMATION

HOW TO RIDE THE MOTORCYCLE

MAINTENANCE AND ADJUSTMENT

APPENDIX

MAINTENANCE RECORD

A Table of Contents is included after the Foreword.

Whenever you see the symbols shown below, heed their instructions! Always follow safe operating and maintenance practices.



DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

NOTE

○ *NOTE* indicates information that may help or guide you in the operation or service of the vehicle.

 **WARNING**

Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

NOTICE

THIS PRODUCT HAS BEEN MANUFACTURED FOR USE IN A REASONABLE AND PRUDENT MANNER BY A QUALIFIED OPERATOR AND AS A VEHICLE ONLY.

Foreword

Congratulations on your purchase of a new Kawasaki motorcycle. Your new motorcycle is the product of Kawasaki's advanced engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Please read this Owner's Manual carefully before riding so that you will be thoroughly familiar with the proper operation of your motorcycle's controls, its features, capabilities, and limitations. This manual offers many safe riding tips, but its purpose is not to provide instruction in all the techniques and skills required to ride a motorcycle safely. Kawasaki strongly recommends that all operators of this vehicle enroll in a motorcycle rider training program to attain awareness of the mental and physical requirements necessary for safe motorcycle operation.

To ensure a long, trouble-free life for your motorcycle, give it the proper care and maintenance described in this manual. For those who would like more detailed information on their Kawasaki Motorcycle, a Service Manual is available for purchase from any authorized Kawasaki motorcycle dealer. The Service Manual contains detailed disassembly and maintenance information. Those who plan to do their own work should, of course, be competent mechanics and possess the special tools described in the Service Manual.

Keep this Owner's Manual aboard your motorcycle at all times so that you can refer to it whenever you need information.

This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when it is sold.

All rights reserved. No part of this publication may be reproduced without our prior written permission.

This publication includes the latest information available at the time of printing. However, there may be minor differences between the actual product and illustrations and text in this manual.

All products are subject to change without prior notice or obligation.

KAWASAKI HEAVY INDUSTRIES, LTD.
Motorcycle & Engine Company

Emission Control Information

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board. Additionally, Kawasaki has incorporated an evaporative emission control system (3) in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board.

1. Crankcase Emission Control System

This system eliminates the release of crankcase vapors into the atmosphere. Instead, the vapors are routed through an oil separator to the intake side of the engine. While the engine is operating, the vapors are drawn into the combustion chamber, where they are burned along with the fuel and air supplied by the fuel injection system.

2. Exhaust Emission Control System

This system reduces the amount of pollutants discharged into the atmosphere by the exhaust of this motorcycle. The fuel, ignition and exhaust systems of this motorcycle have been carefully designed and constructed to ensure an efficient engine with low exhaust pollutant levels. The exhaust system of this model motorcycle includes a catalytic converter system.

3. Evaporative Emission Control System

The evaporative emission control system for this vehicle consists of low permeation fuel hoses and fuel tank.

3. Evaporative Emission Control System (California)

Vapors caused by fuel evaporation in the fuel system are not vented into the atmosphere. Instead, fuel vapors are routed into the running engine to be burned, or stored in a canister when the engine is stopped.

High Altitude Performance Adjustment Information

High Altitude adjustment is not required.

Maintenance and Warranty

Proper maintenance is necessary to ensure that your motorcycle will continue to have low emission levels. This Owner's Manual contains those maintenance recommendations for your motorcycle. Those items identified by the Periodic Maintenance Chart are necessary to ensure compliance with the applicable standards.

As the owner of this motorcycle, you have the responsibility to make sure that the recommended maintenance is carried out according to the instructions in this Owner's Manual at your own expense.

The Kawasaki Limited Emission Control System Warranty requires that you return your motorcycle to an authorized Kawasaki dealer for remedy under warranty. Please read the warranty carefully, and keep it valid by complying with the owner's obligations it contains.

You should keep a maintenance record for your motorcycle. To assist you in keeping this record, we have provided space on pages 185 through 190 of this manual where an authorized Kawasaki dealer, or someone equally competent, can record the maintenance. You should also retain copies of maintenance work orders, bills, etc., as verification of this maintenance.

Tampering With Noise Control System Prohibited

Federal law prohibits the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- * Replacement of the original exhaust system or muffler with a component not in compliance with Federal regulations.
- * Removal of the muffler(s) or any internal portion of the muffler(s).
- * Removal of the air box or air box cover.
- * Modifications to the muffler(s) or air intake system by cutting, drilling, or other means if such modifications result in increased noise levels.

TABLE OF CONTENTS

| | | | |
|--|----|------------------------------------|----|
| SAFETY INFORMATION | 13 | GENERAL INFORMATION | 25 |
| Read Owner's Manual | 13 | Specifications | 25 |
| Training | 13 | Serial Number Locations..... | 29 |
| Daily Checks and Periodic | | Location of Labels | 30 |
| Maintenance | 13 | Location of Parts | 39 |
| Loading and Accessories | | Meter Instruments | 42 |
| Information..... | 14 | Indicators | 43 |
| Passenger | 15 | Speedometer/Tachometer | 50 |
| Baggage and Luggage | 16 | Coolant/Outside Temperature | |
| Accessories | 16 | Meter | 51 |
| Other Load..... | 17 | Display Setting..... | 54 |
| If You are Involved in an Accident.... | 17 | Features | 61 |
| Safe Operation | 18 | Keys | 64 |
| Carbon Monoxide Hazard..... | 18 | Ignition Switch/Steering Lock..... | 65 |
| Fueling | 19 | Right Handlebar Switches..... | 66 |
| Never Ride with Drugs or Alcohol. | 19 | Left Handlebar Switches | 67 |
| Protective Gear and Clothing | 19 | Brake Lever Adjuster..... | 69 |
| Safe Riding Techniques..... | 20 | Clutch Lever Adjuster..... | 69 |
| Additional Considerations for High | | Fuel | 70 |
| Speed Operation | 23 | Fuel Requirements | 70 |

| | | | |
|---|----|---|-----|
| Filling the Tank..... | 73 | Kawasaki TRaction Control (KTRC)..... | 101 |
| Side Stand | 76 | Power Mode..... | 105 |
| Center Stand..... | 77 | KTRC and Power Mode | |
| Seat..... | 77 | Combination | 107 |
| Tool Kit Case..... | 79 | MAINTENANCE AND ADJUSTMENT | 109 |
| Storage Compartment..... | 79 | Daily Checks | 111 |
| Rear View Mirrors | 80 | Periodic Maintenance..... | 114 |
| Windshield..... | 81 | Engine Oil | 119 |
| Rear Carrier | 82 | Coolant..... | 122 |
| Tie Hooks | 84 | Air Cleaner | 127 |
| Event Data Recorder..... | 84 | Throttle Control System | 128 |
| Electric Accessory Connectors | 85 | Idle Speed | 131 |
| HOW TO RIDE THE MOTORCYCLE | 89 | Clutch | 132 |
| Break-In | 89 | Drive Chain | 133 |
| Starting the Engine | 90 | Brakes..... | 138 |
| Moving Off..... | 92 | Brake Light Switches..... | 140 |
| Shifting Gears | 93 | Suspension System | 142 |
| Braking..... | 94 | Front Fork | 142 |
| Anti-lock Brake System (ABS) | 96 | Rear Shock Absorber | 144 |
| Stopping the Engine..... | 98 | Setting Tables | 147 |
| Stopping the Motorcycle in an | | Wheels | 151 |
| Emergency | 98 | Battery..... | 154 |
| Parking..... | 99 | Headlight..... | 158 |

| | |
|----------------------------|------------|
| Fuses | 160 |
| General Lubrication..... | 161 |
| Cleaning..... | 162 |
| General Precautions | 162 |
| Where to be Careful | 166 |
| Washing Your Vehicle | 167 |
| APPENDIX | 169 |

| | |
|--------------------------------------|------------|
| Storage | 169 |
| Troubleshooting Guide..... | 172 |
| Your Warranty/Owner Satisfaction ... | 177 |
| Reporting Safety Defects | 183 |
| Environmental Protection | 184 |
| MAINTENANCE RECORD | 185 |

SAFETY INFORMATION

Read Owner's Manual

Read this Owner's Manual carefully before riding so that you will be thoroughly familiar with the proper operation of your motorcycle's controls, its features, capabilities, and limitations. This manual offers many safe riding tips, but its purpose is not to provide instruction in all of the techniques and skills required to ride a motorcycle safely.

Training

Kawasaki strongly recommends that all operators of this vehicle complete a suitable motorcycle rider training program to learn the proper skills and techniques necessary for safe motorcycle operation.

Daily Checks and Periodic Maintenance

It is important to keep your motorcycle properly maintained and in safe riding condition. Inspect your motorcycle before every ride and carry out all periodic maintenance. See the Daily Checks section and the Periodic Maintenance section in the MAINTENANCE AND ADJUSTMENT chapter for more information.

WARNING

Failure to perform these checks or to correct a problem before operation may result in serious damage or an accident. Always perform daily checks before operation.

14 SAFETY INFORMATION

To ensure your motorcycle is serviced using the latest servicing information, it is recommended that an authorized Kawasaki Dealer performs the periodic maintenance as directed in the Owner's Manual.

If you notice any irregular operating condition, have your motorcycle thoroughly checked at an authorized Kawasaki dealer as soon as possible.

Loading and Accessories Information

WARNING

Incorrect loading, improper installation or use of accessories, or modification of your motorcycle may result in an unsafe riding condition. Before you ride the motorcycle, make sure it is not overloaded and that you have followed these instructions.

Maximum Load

Weight of rider, passenger, baggage, and accessories must not exceed 220 kg (485 lb).

With the exception of genuine Kawasaki Parts and Accessories, Kawasaki has no control over the design or application of accessories. In some cases, improper installation

or use of accessories, or motorcycle modification, will void the motorcycle warranty; can negatively affect performance, stability and safety; and can even be illegal.

In selecting and using accessories, and in loading the motorcycle, you are personally responsible for your own safety and the safety of other persons involved.

NOTE

○ *Kawasaki Parts and Accessories have been specially designed for use on Kawasaki motorcycles. We strongly recommend that all parts and accessories you add to your motorcycle be genuine Kawasaki components.*

Because a motorcycle is sensitive to changes in weight and aerodynamic forces, you must take extreme care in carrying cargo, passengers and/or in

fitting additional accessories. The following general guidelines have been prepared to assist you in making your determinations.

Passenger

1. Never carry more than one passenger.
2. The passenger should only sit on the pillion.
3. Any passenger should be thoroughly familiar with motorcycle operation. The passenger can affect control of the motorcycle by improper positioning during cornering and sudden movements. It is important that the passenger sits still while the motorcycle is in motion and not interfere with the operation of the motorcycle. Do not carry animals on your motorcycle.

16 SAFETY INFORMATION

4. Do not carry passengers unless passenger footpegs are installed. Instruct any passenger before riding to keep his or her feet on the passenger footpegs and hold on to the operator or grab rail. Do not carry a passenger unless he or she is tall enough to reach the footpegs with their feet.

Baggage and Luggage

1. All baggage should be carried as low as possible to reduce the effect on the motorcycle's center of gravity. Baggage weight should also be distributed equally on both sides of the motorcycle. Avoid carrying baggage that extends beyond the rear of the motorcycle.
2. Baggage should be securely attached. Make sure that the baggage

will not move around while you are riding. Recheck baggage security as often as possible (not while the motorcycle is in motion) and adjust as necessary.

3. Do not carry heavy or bulky items on a luggage rack. It is designed for light items, and overloading can affect handling due to changes in weight distribution and aerodynamic forces.

Accessories

1. Do not install accessories or carry baggage that impairs the performance of the motorcycle. Make sure that you have not adversely affected any lighting components, road clearance, banking capability (i.e., lean angle), control operation, wheel travel, front fork movement,

or any other aspects of the motorcycle's operation.

2. Weight attached to the handlebars or front fork will increase the mass of the steering assembly and can result in an unsafe riding condition.
3. Fairings, windshields, backrests, and other large items have the capability of adversely affecting stability and handling of the motorcycle, not only due to their weight, but also due to the aerodynamic force acting on these surfaces while the motorcycle is in operation. Poorly designed or installed items can result in an unsafe riding condition.

Other Load

1. This motorcycle is not intended to be equipped with a sidecar or to be

used to tow any trailers or other vehicles. Kawasaki does not manufacture sidecars or trailers for motorcycles and cannot predict the effects of such accessories on handling or stability, but can only warn that the effects can be adverse and that Kawasaki cannot assume responsibility for the results of such unintended use of the motorcycle.

2. Furthermore, any adverse effects on motorcycle components caused by the use of such accessories will not be remedied under warranty.

If You are Involved in an Accident

Make sure of your own safety first. Determine the severity of any injuries and call for emergency assistance if needed. Always follow applicable laws

18 SAFETY INFORMATION

and regulations if any other person, vehicle or property is involved.

Do not attempt to continue riding without first evaluating your motorcycle's condition. Inspect for fluid leaks, check critical nuts and bolts, and check the handlebars, control levers, brakes, and wheels for damage and proper function. Ride slowly and cautiously - your motorcycle may have suffered damage that is not immediately apparent. Have your motorcycle thoroughly checked at a Kawasaki dealer as soon as possible.

Safe Operation

The following should be carefully observed for safe and effective vehicle operation.

Carbon Monoxide Hazard



Exhaust gas contains carbon monoxide, a colorless, odorless poisonous gas. Inhaling carbon monoxide can cause serious brain injury or death. DO NOT run the engine in enclosed areas. Operate only in a well-ventilated area.

Fueling

 **WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. To avoid a possible fire or explosion, turn the ignition switch off. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

Never Ride with Drugs or Alcohol

Alcohol and drugs impair your judgment and reaction time. Never consume alcohol or drugs before or while riding motorcycles.

Protective Gear and Clothing

Helmet

Kawasaki strongly recommends both the operator and passenger wear a DOT-approved helmet even if this is not a legal requirement.

- Make sure that your helmet fits correctly and is properly fastened.
- Choose a motorcycle helmet that meets DOT safety standards. Ask your motorcycle dealer to advise you if necessary.

20 SAFETY INFORMATION

Eye Protection

Always use eye protection. If your helmet does not have a visor installed, wear goggles.

Gloves

Wear gloves which have suitable protection for your hands, especially against abrasion.

Clothing

Wear the riding wear which have protectors for each parts of the body (chest, shoulders, back, elbows and knees, etc.) as much as possible, or wear protectors for them.

- Always wear a long-sleeved jacket and long trousers which are abrasion resistant and keep you warm.
- Wear clothing that allows freedom of movement.
- Avoid wearing clothes which have loose cuffs or other fastenings

which could interfere with the controls of your motorcycle.

- Wear bright, highly visible clothing.

Boots

Wear proper protective boots that fit properly and do not interfere with gear shifting or braking.

Safe Riding Techniques

Keep Hands on Handlebars

When riding always keep both hands on the handlebars and both feet on the footpegs. Removing your hands from the handlebars or feet from the footpegs while riding can be hazardous. If you remove even one hand or foot, you reduce your ability to control the motorcycle.

Look Over Your Shoulder

Before changing lanes, look over your shoulder to make sure the way is clear. Do not rely solely on the rear view mirror; you may misjudge a vehicle's distance and speed, or you may not see it at all.

Accelerate and Brake Smoothly

In general your actions should be smooth as sudden acceleration, braking or turning may cause loss of control, especially when riding in wet conditions or on loose road surfaces, when the ability to maneuver will be reduced.

Select Correct Gear Speeds

When going up steep slopes, shift to a lower gear so that there is power to spare rather than overloading the engine.

Use Both Front and Rear Brakes

When applying the brakes, use both the front and rear brakes. Applying only one brake for sudden braking may cause the motorcycle to skid and lose control.

Use Engine Brake

When going down long slopes, help control vehicle speed by closing the throttle so that the engine can act as an auxiliary brake. Use the front and rear brakes for primary braking.

Riding in Wet Conditions

Rely more on the throttle to control vehicle speed and less on the front and rear brakes. The throttle should also be used judiciously to avoid skidding the rear wheel from too rapid acceleration or deceleration.

Braking performance is also reduced in wet conditions. Carefully ride at a

22 SAFETY INFORMATION

slow speed and apply the brakes several times to help dry and restores them to normal operating performance.

Lubricate the drive chain after wet-weather riding to prevent rust and corrosion.

Ride Prudently

Riding at the proper speed and avoiding unnecessarily fast acceleration are important not only for safety and low fuel consumption but also for long vehicle life and quieter operation.

Riding on Rough Roads

Exercise caution, slow down, and grip the fuel tank with the knees for better stability.

Acceleration

When quick acceleration is necessary to pass another vehicle, shift to a lower gear to obtain the necessary power.

Downshifting

To avoid engine damage and rear wheel lock-up do not downshift at high rpm.

Avoid Unnecessary Weaving

Unnecessary weaving jeopardizes the safety of both the rider and other motorists.

Additional Considerations for High Speed Operation

 **WARNING**

Handling characteristics of a motorcycle at high speeds may vary from those you are familiar with at legal highway speeds. Do not attempt high speed operation unless you have received sufficient training and have the required skills. Do not operate at high speeds on public roads.

Brakes

The importance of the brakes, especially during high speed operation, cannot be overemphasized. Check to

see that they are correctly adjusted and functioning properly.

Steering

Looseness in the steering can cause loss of control. Check to see that the handlebars turn freely but has no play.

Tires

High speed operation is hard on tires, and good tires are crucial for safe riding. Examine their overall condition, inflate them to the proper pressure, and check the wheel balance.

Fuel

Have sufficient fuel for the high fuel consumption during high speed operation.

Engine Oil

To avoid engine seizure and resulting loss of control, make sure that the oil level is at the upper level line.

24 SAFETY INFORMATION

Coolant

To avoid overheating, check that the coolant level is at the upper level line.

Electrical Equipment

Make sure that the headlight, tail/brake light, turn signals, horn, etc., all work properly.

Miscellaneous

Make sure that all nuts and bolts are tight and that all safety related parts are in good condition.

GENERAL INFORMATION

Specifications

PERFORMANCE

| | |
|------------------------|-----------------|
| Minimum Turning Radius | 3.0 m (118 in.) |
|------------------------|-----------------|

DIMENSIONS

| | |
|----------------|----------------------|
| Overall Length | 2 270 mm (89.37 in.) |
|----------------|----------------------|

| | |
|---------------|-------------------|
| Overall Width | 895 mm (35.2 in.) |
|---------------|-------------------|

| | |
|------------------------------|---|
| Overall Height/High Position | 1 400 mm (55.12 in.)/1 465 mm (57.68 in.) |
|------------------------------|---|

| | |
|-----------|----------------------|
| Wheelbase | 1 520 mm (59.84 in.) |
|-----------|----------------------|

| | |
|----------------|-------------------|
| Road Clearance | 150 mm (5.91 in.) |
|----------------|-------------------|

| | |
|-----------|-----------------|
| Curb Mass | 249 kg (549 lb) |
|-----------|-----------------|

ENGINE

| | |
|------|---|
| Type | DOHC, 4-cylinder, 4-stroke, liquid-cooled |
|------|---|

| | |
|--------------|--------------------------------------|
| Displacement | 1 043 cm ³ (63.64 cu in.) |
|--------------|--------------------------------------|

| | |
|---------------|----------------------------------|
| Bore × Stroke | 77.0 × 56.0 mm (3.03 × 2.20 in.) |
|---------------|----------------------------------|

| | |
|-------------------|--------|
| Compression Ratio | 10.3:1 |
|-------------------|--------|

26 GENERAL INFORMATION

| | |
|--|--|
| Starting System | Electric starter |
| Cylinder Numbering Method | Left to right, 1-2-3-4 |
| Firing Order | 1-2-4-3 |
| Fuel System | FI (Fuel Injection) |
| Ignition System | Battery and coil (transistorized ignition) |
| Ignition Timing (Electronically advanced) | 10° BTDC @1 100 r/min (rpm) ~ 40.2 ° BTDC @5 200 r/min (rpm) |
| Spark Plug: | Type NGK CR9EIA-9 |
| | Gap 0.8 ~ 0.9 mm (0.031 ~ 0.035 in.) |
| Lubrication System | Forced lubrication (wet sump) |
| Engine Oil: | Type API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2 |
| | Viscosity SAE 10W-40 |
| | Capacity 4.0 L (4.2 US qt) |
| Coolant Capacity | 2.6 L (2.7 US qt) |

TRANSMISSION

| | |
|-------------------|--------------------------------------|
| Transmission Type | 6-speed, constant mesh, return shift |
| Clutch Type | Wet, multi disc |

| | |
|-------------------------|-------------------|
| Driving System | Chain drive |
| Primary Reduction Ratio | 1.627 (83/51) |
| Final Reduction Ratio | 2.867 (43/15) |
| Overall Drive Ratio | 4.471 (Top gear) |
| Gear Ratio: | 1st 2.692 (35/13) |
| | 2nd 1.950 (39/20) |
| | 3rd 1.529 (26/17) |
| | 4th 1.304 (30/23) |
| | 5th 1.136 (25/22) |
| | 6th 0.958 (23/24) |

FRAME

| | |
|------------|----------------------------|
| Caster | 27.0° |
| Trail | 106 mm (4.17 in.) |
| Tire Size: | Front 120/70ZR17 M/C (58W) |
| | Rear 180/55ZR17 M/C (73W) |
| Rim Size: | Front 17M/C x MT3.50 |
| | Rear 17M/C x MT5.50 |

28 GENERAL INFORMATION

| | | |
|--------------------|-------|-------------------|
| Fuel Tank Capacity | | 21 L (5.5 US gal) |
| Brake Fluid: | Front | DOT4 |
| | Rear | DOT4 |

ELECTRICAL EQUIPMENT

| | | |
|------------------|-----------|-------------------|
| Battery | | 12 V 8 Ah (10 HR) |
| Headlight: | High Beam | 12 V 55 W × 2 |
| | Low Beam | 12 V 55 W |
| Brake/Tail Light | | LED |


Even if only one element of LED (Light Emitting Diode) light does not go on, consult with an authorized Kawasaki dealer.

Specifications are subject to change without notice.

Serial Number Locations


The engine and frame serial numbers are used to register the motorcycle. They are the only means of identifying your particular machine from others of the same model type. These serial numbers may be needed by your dealer when ordering parts. In the event of theft, the investigating authorities will require both numbers as well as the model type and any peculiar features of your machine that can help them identify it.

Engine No.

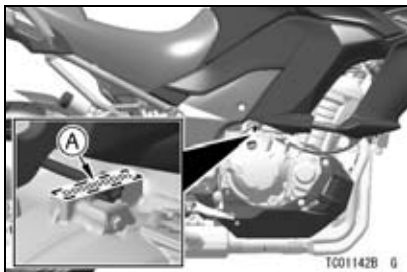

A. Engine Number

Frame No.

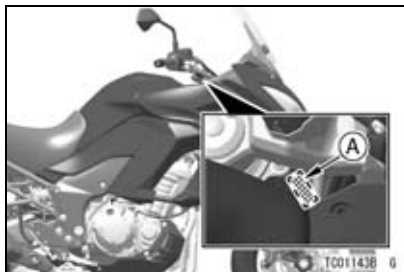

A. Frame Number

Location of Labels


All warning labels which are on your vehicle are repeated here. Read labels on your vehicle and understand them thoroughly. They contain information which is important for your safety and the safety of anyone else who may operate your vehicle. Therefore, it is very important that all warning labels be on your vehicle in the locations shown. If any label is missing, damaged, or worn, get a replacement from your Kawasaki dealer and install it in the correct position.

NOTE



- *The sample warning labels in this section have part numbers to help*

you and your dealer obtain the correct replacement.

- *Refer to the actual vehicle label for model specific data grayed out in the illustration.*



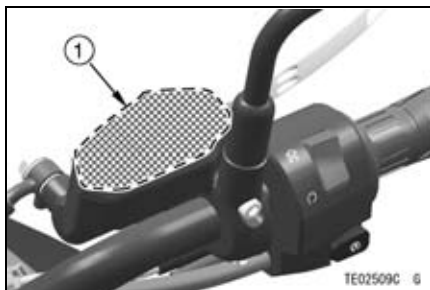


1. Brake Fluid (Front)

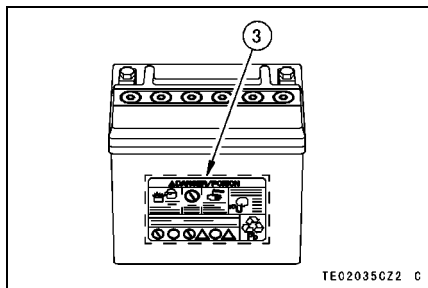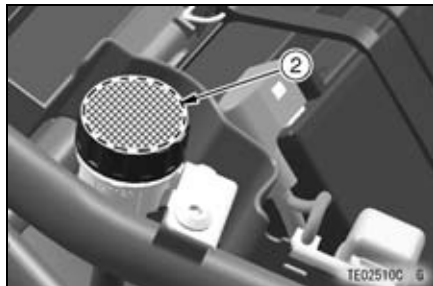


- 2. Brake Fluid (Rear)
- 3. Battery Poison/Danger
- 4. Rear Shock Absorber Warning

32 GENERAL INFORMATION

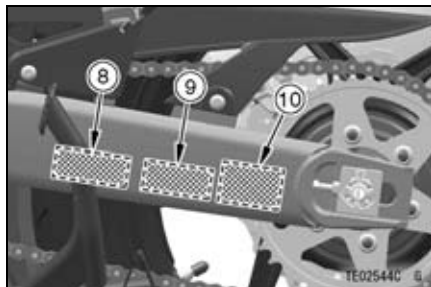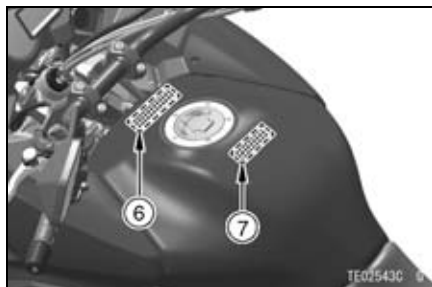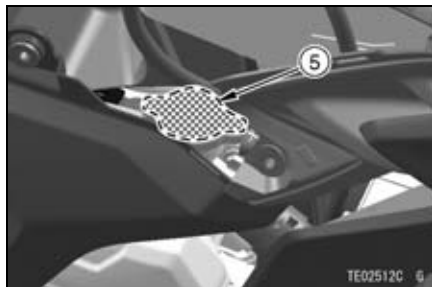

- 5. Radiator Cap Danger
- *6. Fuel Level
- 7. Fuel Notice
- 8. Noise Emission Control Information
- 9. Important Drive Chain Information
- 10. Tire and Load Data

*: only on California model

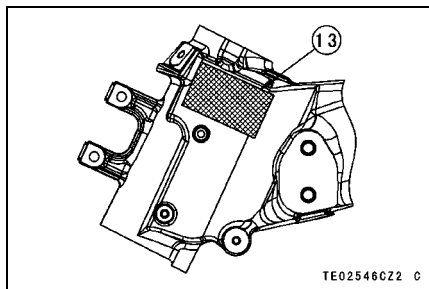


- 11. Vehicle Emission Control Information
- *12. Vacuum Hose Routing Diagram
- 13. Weight and Manufacture
- 14. Rear Carrier Load Limit Warning

*: only on California model

34 GENERAL INFORMATION

1)

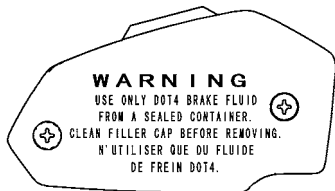

TE03841BN9 C

2)




TE03491DN9 C

3)

| ⚠ DANGER/POISON | | | |
|--|--|---|--|
| SHIELD EYES EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY. | NO SPARKS FLAMES • SMOKING | SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS | FLUSH EYES IMMEDIATELY WITH WATER GET MEDICAL HELP FAST |
| KEEP OUT OF REACH OF CHILDREN | | | |
| IN U.S.A., YUASA BATTERY, INC. SERVICED BY : READING, PA. 19605 | | | |
| | | | LEAD RECYCLE Pb RETURN |


TE03459D S

4)

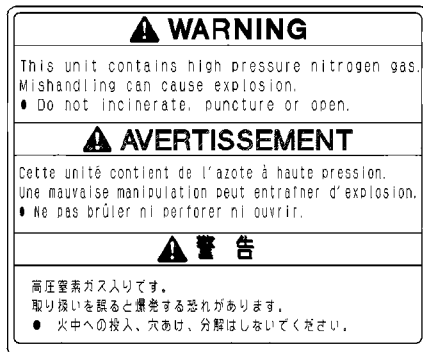

TE03352D S

5)

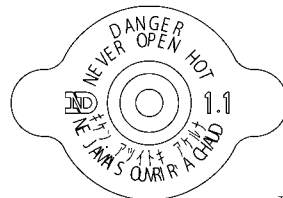

TE03353D S

 
6) only on California model



56071-0158

TE03142C S

7)




TE03172CN9 C

8)




 9)



TF03427F S

 10)



TF03429F S

11)

| | |
|---|--|
| VEHICLE EMISSION CONTROL INFORMATION | |
| ENGINE FAMILY CODE | PERMANENT FAMILY |
| MODEL(S) | |
| EXHAUST EMISSION CONTROL SYSTEM | |
| DISPLACEMENT | |
| TUNE UP SPECIFICATIONS | |
| IGNITION TIMING | 20 DEGR. AT 1000 RPM |
| VALVE CLEARANCE | NO ADJUSTMENT |
| INTAKE VALVE | IN. 1 |
| EXHAUST VALVE | IN. 1 |
| SPARK PLUG | SPARK PLUG GAP 0.04 IN. |
| FUEL | CATALYST WITH 4-WAY VALVE |
| ENGINE OIL | SERVICE RATING: API 10W-40, 15W-40, 20W-50 |
| VISCOUSITY - SEE USER'S MANUAL FOR ENGINE OIL INFORMATION. | |
| THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 1988 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO THE FOLLOWING EMISSION STANDARDS IN CALIFORNIA. | |
| HARSHEN HEAVY INDUSTRIES, LTD. | |


TE03300D S

11) only on California model

| | |
|--|--|
| VEHICLE EMISSION CONTROL INFORMATION | |
| ENGINE FAMILY CODE | PERMANENT FAMILY |
| MODEL(S) | |
| EXHAUST EMISSION CONTROL SYSTEM | |
| DISPLACEMENT | |
| TUNE UP SPECIFICATIONS | |
| IGNITION TIMING | 20 DEGR. AT 1000 RPM |
| VALVE CLEARANCE | NO ADJUSTMENT |
| INTAKE VALVE | IN. 1 |
| EXHAUST VALVE | IN. 1 |
| SPARK PLUG | SPARK PLUG GAP 0.04 IN. |
| FUEL | CATALYST WITH 4-WAY VALVE |
| ENGINE OIL | SERVICE RATING: API 10W-40, 15W-40, 20W-50 |
| VISCOUSITY - SEE USER'S MANUAL FOR ENGINE OIL INFORMATION. | |
| THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 1988 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO THE FOLLOWING EMISSION STANDARDS IN CALIFORNIA. | |
| HARSHEN HEAVY INDUSTRIES, LTD. | |

TE03301D S


12) only on California model

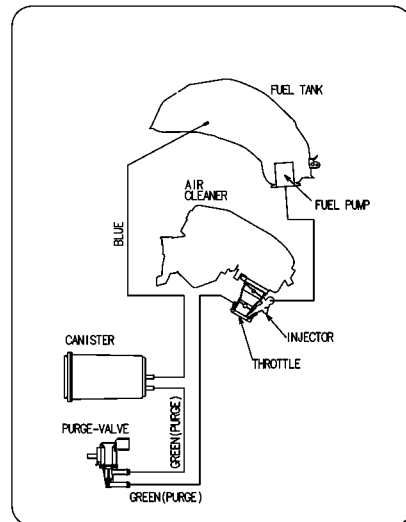

TE03129E S


38 GENERAL INFORMATION

13)

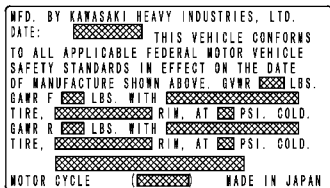

TE03303D S

14)

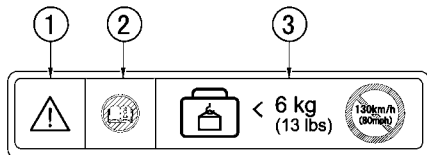


56071-0554

TE03228E S

1. Warning
2. Read Owner's Manual, see page 13
3. Rear carrier load, see page 82


Location of Parts

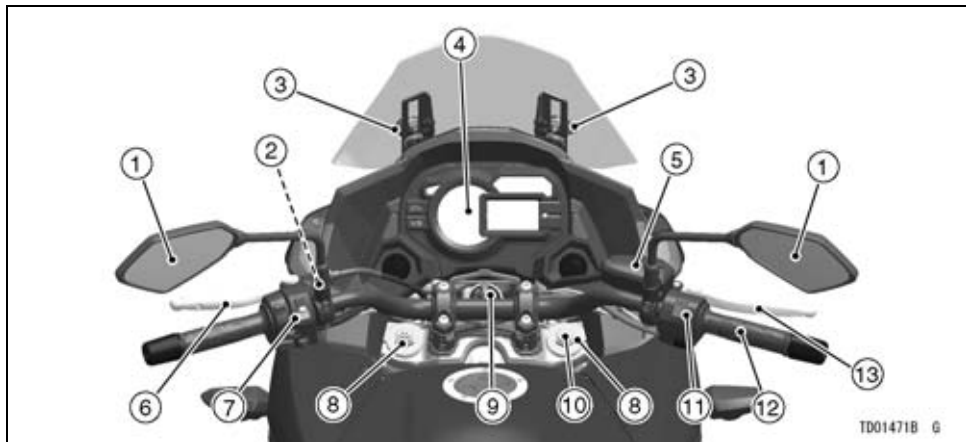

- 1. Rear View Mirrors
- 2. Starter Lockout Switch
- 3. Windshield Adjusting Knobs
- 4. Meter Instrument
- 5. Brake Fluid Reservoir (Front)
- 6. Clutch Lever
- 7. Left Handlebar Switches

- 8. Spring Preload Adjuster
- 9. Ignition Switch/Steering Lock
- 10. Rebound Damping Force Adjuster
- 11. Right Handlebar Switches
- 12. Throttle Grip
- 13. Front Brake Lever

40 GENERAL INFORMATION

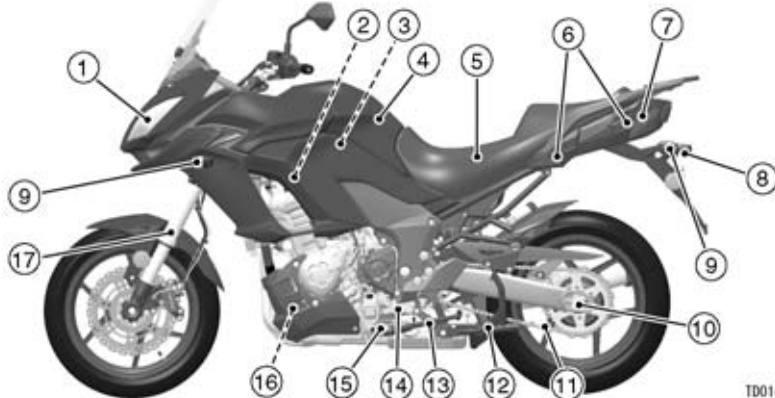


TD01474B G

- 1. Headlight
- 2. Spark Plugs
- 3. Air Cleaner
- 4. Fuel Tank
- 5. Seat
- 6. Tie Hooks

- 7. Seat Lock
- 8. License Plate Light
- 9. Turn Signal Lights
- 10. Chain Adjuster
- 11. Drive Chain
- 12. Center Stand

- 13. Side Stand
- 14. Shift Pedal
- 15. Side Stand Switch
- 16. Oil Filter
- 17. Front Fork

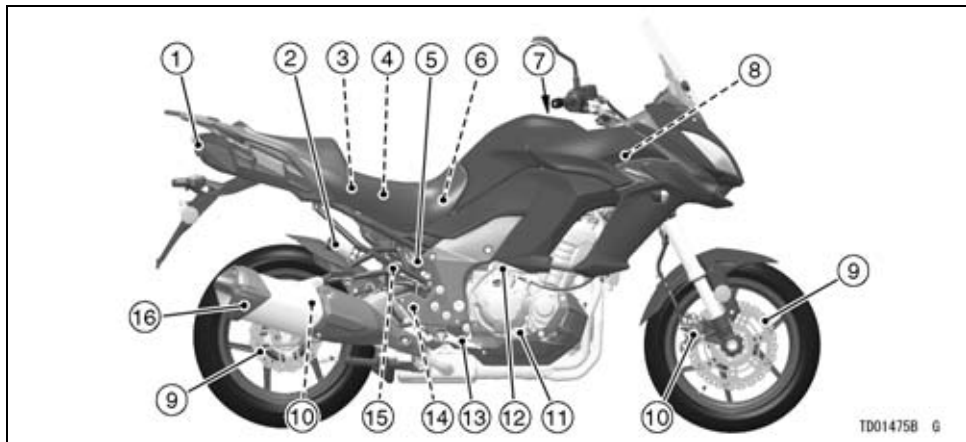


1. Tail/Brake Light
2. Spring Preload Adjuster
3. Brake Fluid Reservoir (Rear)
4. Battery
5. Rear Shock Absorber
6. Fuse Boxes
7. Fuel Tank Cap
8. Coolant Reserve Tank

9. Brake Discs
10. Brake Calipers
11. Oil Level Inspection Window
12. Idle Adjusting Screw
13. Rear Brake Pedal
14. Rear Brake Light Switch
15. Rebound Damping Force Adjuster
16. Muffler







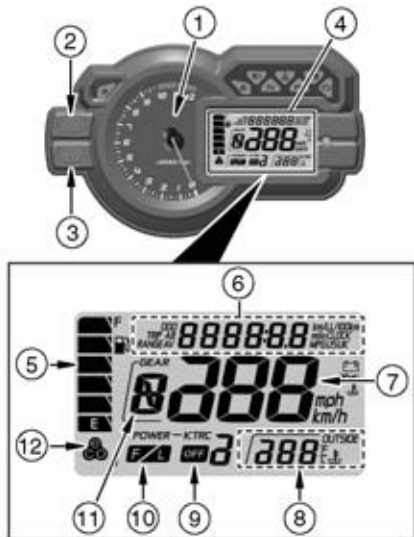




Meter Instruments


1. Tachometer
2. Upper Meter Button
3. Lower Meter Button
4. Multifunction Meter
5. Fuel Gauge
6. Multifunction Display
 - Odometer
 - Trip Meter A/B
 - Current Mileage/Average Mileage/Cruising Range
 - Clock
7. Speedometer
8. Coolant/Outside Temperature Meter
9. KTRC Mode Indicator
10. Power Mode Indicator
11. Gear Position Indicator
12. Economical Riding Indicator

 When the ignition switch is turned on, all LCD functions are shown for a few seconds, then the multifunction meter turns to operational mode.




Indicators

 1.  Left Turn Signal Indicator (Green)
2.  Right Turn Signal Indicator (Green)
3.  High Beam Indicator (Blue)
4.  Neutral Indicator (Green)
5.  KTRC Warning Indicator (Yellow)
6.  KTRC Indicator (Yellow)
7.  ABS Indicator (Yellow)
8.  Engine Warning Indicator (Yellow)
9.  Battery Warning Indicator
10.  Oil Pressure Warning Indicator
11.  Warning Indicator (Red)
12.  Coolant Temperature Warning Indicator
13.  Fuel Level Warning Indicator

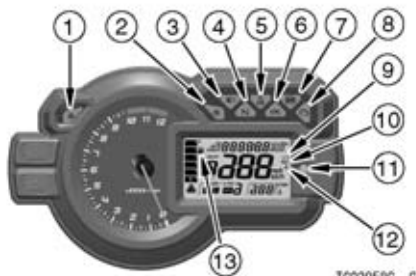


Indicator Initial Operation

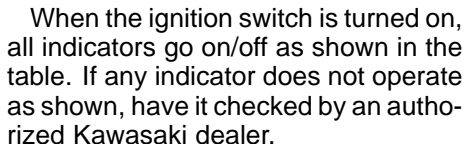

ON: When ignition switch is turned on.

🕒 : When engine starts.




■ : Goes off.

* :  goes off shortly after the motorcycle starts moving.




When Warning Indicators Go On or Blink



When warning indicators appear, there could be a problem with vehicle function. Follow actions in the table after stopping the vehicle in a safe place.

*: The numbers in this column corresponds to reference numbers on page 43.

| *No. | Indi- cators | Status | Actions |
|------|---|------------------|--|
| 5 |  | ON | The KTRC system is not working and the KTRC and Power mode indicators* ¹ blink. Have the system checked by an authorized Kawasaki dealer. |
| 7 |  | ON* ² | The ABS has malfunctioned. ABS will not work but conventional brakes function. Have the ABS checked by an authorized Kawasaki dealer. |
| 8 |  | ON | The DFI system has malfunctioned. Have it checked by an authorized Kawasaki dealer. |

46 GENERAL INFORMATION

| *No. | Indicators | Status | Actions |
|----------|---|--------|---|
| 11 10 |  | ON | These indicators go on whenever the oil pressure is dangerously low or the ignition switch is in the "ON" position with the engine not running. If these indicators go on when the engine speed is above idle, stop the engine immediately and check the engine oil level. If the amount of engine oil is insufficient, add engine oil. If the oil level is good, have the engine checked by an authorized Kawasaki dealer. |
| 11 12 |  | ON | These indicators go on whenever the coolant temperature rises to about 115°C (239°F). Refer to the Coolant/Outside Temperature Meter section for more information and follow instructions in it. |
| 11 9 |  | ON | These indicators go on if the battery voltage is less than 11.0 V or more than 16.0 V. If the voltage is less than 11.0 V, charge the battery. If the voltage is more than 16.0 V, or if indicators still go on after charging the battery, have the battery and/or charging system checked by an authorized Kawasaki dealer. |

| *No. | Indicators | Status | Actions |
|------|---|--------------------------------|--|
| 13 |  | Blink | The lowest segment and fuel level warning indicator blink in the multifunction display when approximately 3.9 L (1.0 US gal) of usable fuel remains. Refuel at the earliest opportunity. If the vehicle is on the side stand, the warning indicator cannot estimate the amount of fuel in the tank. Stand the vehicle upright to check the fuel level. |
| |  | Blink (including all segments) | The fuel level warning system has malfunctioned. Have the fuel level warning system checked by an authorized Kawasaki dealer. |

48 GENERAL INFORMATION




*1: Refer to the Meter Instruments section for indicator position.

*2: ABS indicator may go on:


- After continuous riding on a rough road.
- When the engine is started with the stand raised and the transmission engaged, and the rear wheel turns.
- When accelerating so abruptly that the front wheel leaves the ground.
- When the ABS has been subjected to strong electrical interference.
- When tire pressure is abnormal. Adjust tire pressure.
- When a tire different in size from the standard size is being used. Replace with standard size.
- When the wheel is deformed. Replace the wheel.

If this happens, first turn the ignition switch off, and then back on, and ride the motorcycle at 5 km/h (3.1 mph) or more. The ABS indicator should then go off. If it does not, have the ABS checked by an authorized Kawasaki dealer.

Other Indicators

| *No. | Indicators | Status |
|------|---|--|
| 1 |  | When the turn signal switch is pushed to the left, this indicator blinks. |
| 2 |  | When the turn signal switch is pushed to the right, this indicator blinks. |
| 3 |  | When the headlight is on high beam, this indicator goes on. |
| 4 | N | When the transmission is in neutral, this indicator goes on. |
| 6 | KTRC | When the KTRC functions, this indicator goes on. |

Speedometer/Tachometer

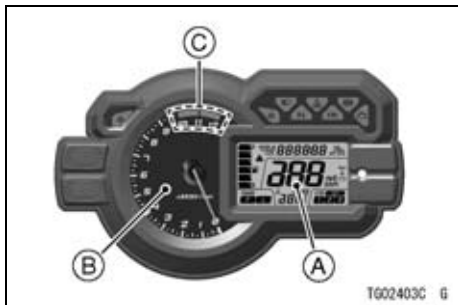

- A. Speedometer
- B. Tachometer
- C. Red Zone

Speedometer

The speedometer is digital and can be set for km/h or mph.

The unit setting can be changed according to local regulations. Make sure

the unit setting (km/h or mph) is correctly displayed before riding.

Refer to the Unit Setting in the Display Setting section.

Tachometer

The tachometer shows the engine speed in revolutions per minute (r/min, rpm).

NOTICE

Engine speed should not be allowed to enter the red zone; operation in the red zone will overstress the engine and may cause serious engine damage.

When the ignition switch is turned on, the tachometer needle momentarily sweeps from the minimum to the maximum reading, then back the minimum reading to check its operation. If

the tachometer does not operate correctly, have it checked by an authorized Kawasaki dealer.


Coolant/Outside Temperature Meter

This meter shows the coolant temperature or outside temperature.

- Push the lower meter button to select the display modes. The display modes can be shifted in the following order.

NOTE

- *You can also select desired display modes with the multifunction button on the left handlebar switches.*

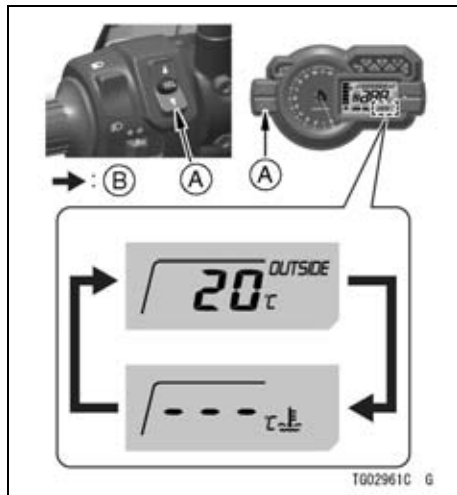

- A. Lower Button/Lower Meter Button
- B. Flow when pushing lower or lower meter button


52 GENERAL INFORMATION

NOTE

- The coolant/outside temperature meter and clock cannot be shifted while adjusting the clock.


Coolant Temperature Meter

The coolant temperature meter indicates temperature of the engine coolant.

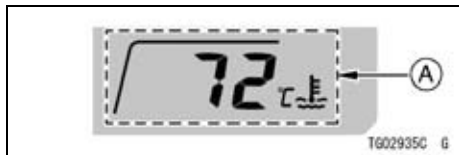


A. Coolant Temperature Meter

If the coolant temperature is below 40°C (104°F), “— — —” is displayed.

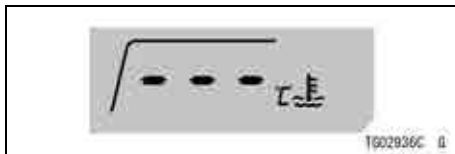

If the coolant temperature rises to above 115°C (239°F) and below 120°C (248°F), the numerical value of the current coolant temperature starts blinking, the warning indicator/immobilizer indicator and coolant temperature warning indicator also go on. This warns the operator that the coolant temperature is high.

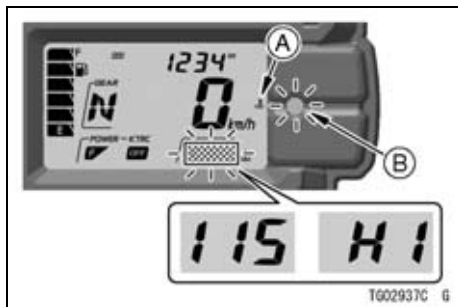

A. Coolant Temperature Warning Indicator
 B. Warning Indicator/Immobilizer Indicator (Red)

If the coolant temperature rises to 120°C (248°F) or more, “HI” is displayed and starts blinking, the warning indicator/immobilizer indicator and coolant temperature warning indicator also go on. Stop the engine and check the coolant level in the reserve tank after the engine cools down. If the amount of the coolant is insufficient,

add coolant to the reserve tank. If the coolant level is good, have the cooling system checked by an authorized Kawasaki dealer.

NOTICE

Stop the engine if the coolant temperature shows “HI.” Prolonged engine operation will result in severe engine damage from overheating.


NOTE

- *The outside temperature meter shift to the coolant temperature meter automatically if the coolant temperature rises to above 115°C (239°F).*
- *When the battery is reconnected, the meter display is set to coolant temperature meter by default.*

54 GENERAL INFORMATION

Outside Temperature Meter

This display shows the outside temperature by numerical value. The outside temperature display is renewed every 5 seconds.

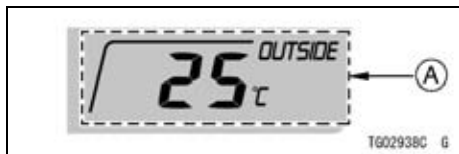

A. Outside Temperature Meter

NOTE

- *The outside temperature can be displayed from -20°C (-4°F) to 60°C (140°F).*
- *The outside temperature may not be displayed correctly in this meter when the speed is 20 km/h (12 mph) or less, or the outside temperature sensor gets wet. The display value*

of the outside temperature does not increase when the speed is 20 km/h (12 mph) or less.

- *The outside temperature meter shift to the coolant temperature meter automatically if the coolant temperature rises to above 115°C (239°F). In this case, the meter cannot be shifted to the outside temperature meter until the warning indicator goes off.*


Display Setting

Meter Buttons and Multifunction Buttons

The meter buttons and multifunction buttons on the left handlebar switches are used to operate the various functions displayed in the multifunction meter.

⚠ WARNING

For safety, do not operate the meter buttons while riding the motorcycle.

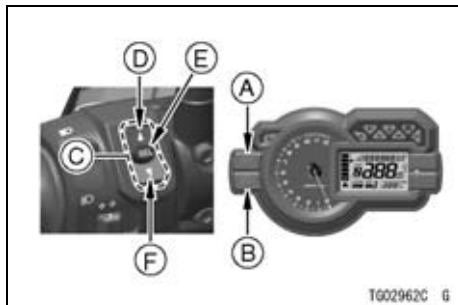

- A. Upper Meter Button
- B. Lower Meter Button
- C. Multifunction Buttons
- D. Upper Button
- E. "SEL" Button
- F. Lower Button

With these buttons you can select desired functions. Refer to each section for procedure for selection.


| Functions | Meter Buttons | Multi-function Buttons |
|-----------------------------|---------------|------------------------|
| Multifunction Display Mode | ● | ● |
| Coolant/Outside Temperature | ● | ● |
| Unit Setting | ● | — |
| KTRC Mode | — | ● |
| Power Mode | — | ● |

Multifunction Display

- Push the upper meter button to select the display modes. The display modes can be shifted in the following order.

NOTE

- The multifunction display is displayed in the unit depending on the unit mode setting.
- You can also select desired display modes with the multifunction button on the left handlebar switches.

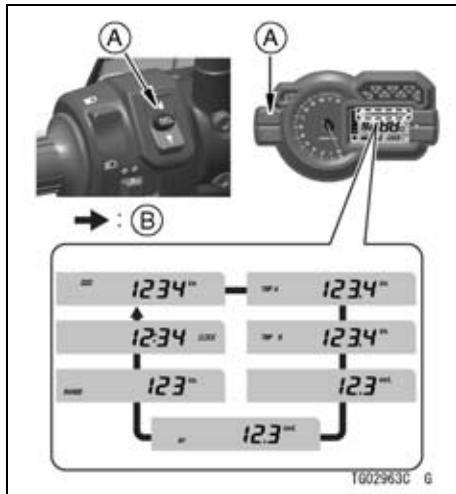

- A. Upper Button/Upper Meter Button
- B. Flow when pushing upper or upper meter button

Odometer

The odometer shows the total distance. This meter cannot be reset.



NOTE

- When the figures come to 999999, the display is stopped and locked.

Trip Meter



To reset the trip meter:

- Push the upper meter button or upper button and hold it in until the display turns to 0.0.

NOTE

- When the trip meter reaches 9999.9 while riding, the meter resets to 0.0 and continues counting.

Current Mileage

The current mileage display is renewed every 4 seconds.



NOTE

- When the ignition switch is turned on, the numerical value shows “- -.-.”

58 GENERAL INFORMATION

After a few seconds of riding the numerical value is displayed.

Average Mileage

This display mode shows the average fuel consumption from the reset. The average mileage display is renewed every 5 seconds.



To reset the average mileage:

- Push the upper meter button or upper button and hold it in until the average mileage values resets to “—.—.”

NOTE

- When the battery is disconnected, the average mileage resets to “—.—.”

- After resetting the average mileage, the numerical value is not displayed until the vehicle has travelled 100 m (328 ft).

Cruising Range

This display shows the cruising range by numerical value, and indicates the cruising range from the remaining fuel in the fuel tank. This cruising range display is renewed every 20 seconds.



NOTE


- The cruising range value is no longer shown if the fuel level gets too low after the fuel level warning indicator starts blinking.

- *To recover the cruising range value display add fuel to at least the level needed for the fuel level warning indicators to stop blinking. The cruising range may still be displayed with a low fuel level, but it will not be accurate until enough fuel is added to stop the fuel level warning indicator from blinking.*

Clock

To adjust the clock:

- Push the upper meter button or upper button to display the clock.
- Push the lower meter button and hold it until both the hour and minute displays blink.
- Push the lower meter button and hold it until “12h” or “24h” is appeared on the display.
- Push the upper meter button to select “12h” or “24h.”
- Push the lower meter button to select the hour or minute digits.
- Push the upper meter button to adjust the hour or minute digits.
- To finish the adjustment, push the upper meter button when both the hour and minute digits blink.

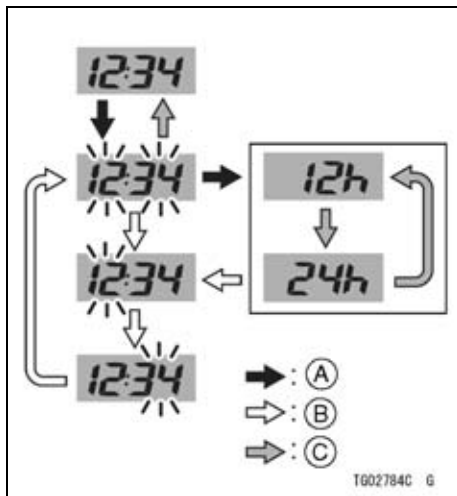


- A. Flow when pushing and holding lower meter button
 B. Flow when pushing lower meter button
 C. Flow when pushing upper meter button

NOTE

- When the battery is disconnected, the clock is reset to 1:00 ("24h" display: 13:00) and starts working again when the battery is connected.


Unit Setting

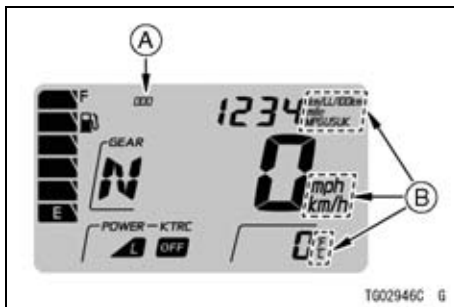

- A. Odometer
 B. Units

- Display the odometer in the multi-function display.

- Push the lower meter button while pushing the upper meter button to select the meter display units. The display units can be shifted in the following order.

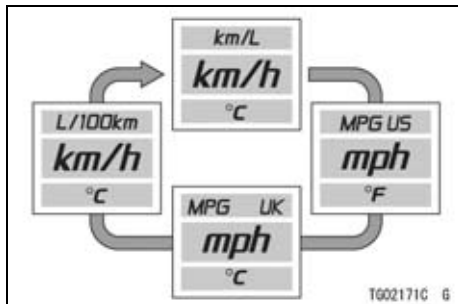

Features

Gear Position Indicator

This display shows the corresponding gear position when the transmission is shifted. As the transmission is shifted, the corresponding gear position (1st ~ 6th) is shown in this display. When the transmission is in neutral, "N" is displayed, and the neutral indicator goes on.

62 GENERAL INFORMATION

| | |
|---|---|
| 1 | When the transmission is in 1st gear, "1" is displayed. |
| 2 | When the transmission is in 2nd gear, "2" is displayed. |
| 3 | When the transmission is in 3rd gear, "3" is displayed. |
| 4 | When the transmission is in 4th gear, "4" is displayed. |
| 5 | When the transmission is in 5th gear, "5" is displayed. |
| 6 | When the transmission is in 6th gear, "6" is displayed. |



A. Gear Position Indicator

B. Neutral Indicator


NOTE

○ If the gear position display in the multifunction meter blinks "–," the transmission is not properly shifted to 1st. Be sure to shift the transmission.

Economical Riding Indicator

When riding the motorcycle efficiently, the economical riding indicator

appears on the multifunction meter to indicate favorable fuel consumption. Monitoring the economical riding indicator can help the rider maximize fuel efficiency.

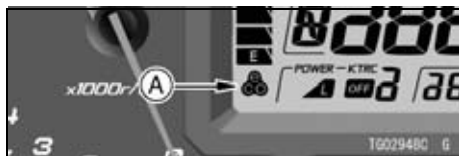


A. Economical Riding Indicator

WARNING

Failing to properly observe the road ahead increases the chance of an accident resulting in severe injury or death. Do not concentrate on the economical riding indicator by taking your eyes off the road; observe using peripheral vision.

Fuel Gauge

The fuel in the fuel tank is shown by the number of segments displayed.

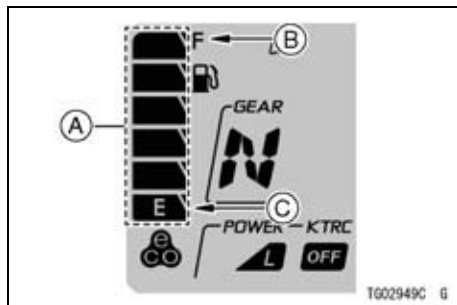

- A. Segments
- B. F (Full)
- C. E (Empty)

NOTE

- When the fuel tank is full, all the segments are displayed. As the fuel

64 GENERAL INFORMATION

level in the tank goes down, the segments disappear one by one from F (full) to E (empty).

- When the fuel level warning indicator and lowest segment blink, refer to the “When Warning Indicators Go On or Blink” of Indicators in this chapter.

Power Mode Indicator


Refer to the Power Mode section in the HOW TO RIDE THE MOTORCYCLE chapter.

KTRC Mode Indicator

Refer to the Kawasaki TRaction Control (KTRC) section in the HOW TO RIDE THE MOTORCYCLE chapter.

Keys

You will need the key number or spare key to have a duplicate made.

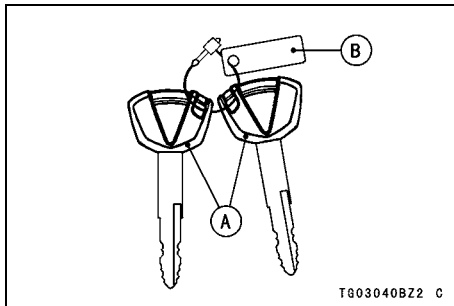

A. Ignition Key

B. Key Number Tag


If you lose all keys and the key number, you will need to replace the ignition switch and all other locks operated by that key.

Contact your Kawasaki dealer to purchase additional spare keys.

Ignition Switch/Steering Lock

This is a three-position, key-operated switch.


The key can be removed when it is in the "OFF" or "LOCK" position.

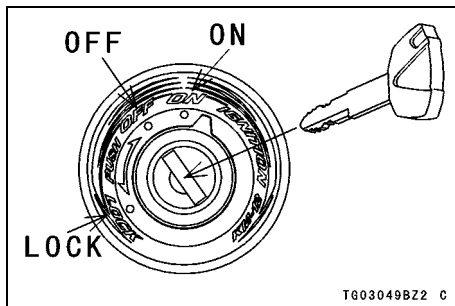

| | |
|-------------|--|
| ON | <ul style="list-style-type: none"> ● Engine can be started. ● All electrical equipment can be used. ● Key cannot be removed. |
| OFF | <ul style="list-style-type: none"> ● Engine off. ● Electrical equipment is off. ● Key can be removed. |
| LOCK | <ul style="list-style-type: none"> ● Steering locked. ● Engine off. ● Electrical equipment is off. ● Key can be removed. |

For locking:

1. Turn the handlebars fully to the left.
2. Push the key down in the "OFF" position and turn it to "LOCK."

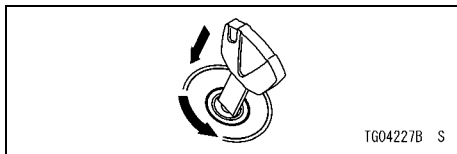

⚠ WARNING


Turning the ignition switch to the “OFF” position while riding the motorcycle shuts down the entire electrical system (headlight, brake light, turn signal light, etc) and the engine will stop, which could cause an accident resulting in severe injury or death. Never operate the ignition switch while riding the motorcycle; only operate it when the motorcycle is at a standstill.

NOTE

- The tail, city and license plate lights are on whenever the ignition key is in the “ON” position. The headlight goes on when the starter button is released after starting the engine.
- Do not leave the ignition switch at the “ON” position for an extended time

with the engine stopped, or the battery may become totally discharged.

Right Handlebar Switches

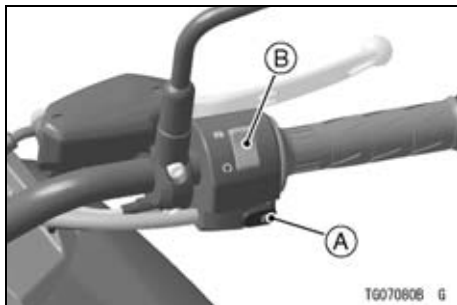


A. Starter Button


B. Engine Stop Switch

Starter Button ①

Refer to the Starting the Engine section for starting instructions.

Engine Stop Switch


To stop the engine in an emergency, move the engine stop switch to the  position.

Ordinarily, the engine stop switch must be in the  position for the motorcycle to operate.

NOTE

- Ordinarily, the ignition switch should be used to stop the engine.
- Although the engine stop switch stops the engine, it does not turn off all the electrical circuits and eventually the battery will be discharged.


Left Handlebar Switches

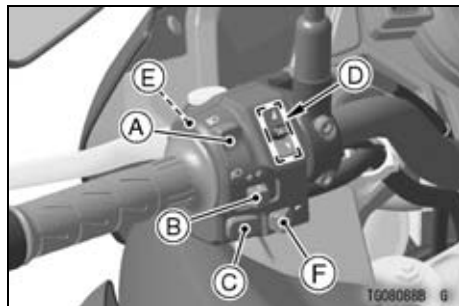


- A. Dimmer Switch
- B. Turn Signal Switch
- C. Horn Button
- D. Multifunction Button
- E. Passing Button
- F. Hazard Switch

Dimmer Switch

High or low beam can be selected with the dimmer switch.

High beam...  (High beam indicator: see Meter Instruments section)



68 GENERAL INFORMATION

Low beam...  (Single light goes on)

NOTE

- *Do not allow anything to cover the headlight lens when the headlight is on. If covered, heat can build up in the headlight lens causing lens discoloration or melting, as well as damage to the item covering the lens.*

Turn Signal Switch

When the turn signal switch is turned to the left () or right () the corresponding turn signal lights and turn signal indicator blinks. To cancel the turn signal, push the switch in.

Horn Button

When the horn button is pushed, the horn sounds.

Multifunction Button

The multifunction button is used for setting the meter and KTRC/Power mode.

Meter setting : Refer to the Display Setting section

KTRC setting : Refer to the Kawasaki TRaction Control (KTRC) section in the HOW TO RIDE THE MOTORCYCLE chapter

Power mode setting : Refer to the Power Mode section in the HOW TO RIDE THE MOTORCYCLE chapter

Passing Button ^{PASS}

The high beam turns on only while the passing button is pushed.

Hazard Switch

Push in the hazard switch with the ignition switch in the “ON” position. All the turn signal lights and turn signal indicators will blink.

NOTE


- *Be careful not to use the hazard lights for an extended period of time, otherwise the battery may become totally discharged.*

Brake Lever Adjuster

While pushing the brake lever forward, rotate the adjuster and choose a suitable lever position from the six positions.

[Brake Lever Adjustment]

| | | | | | | |
|-------------------|-------|---|---|---|---|------|
| Adjuster Position | 1 | 2 | 3 | 4 | 5 | 6 |
| Lever Position | Far ← | | — | | → | Near |

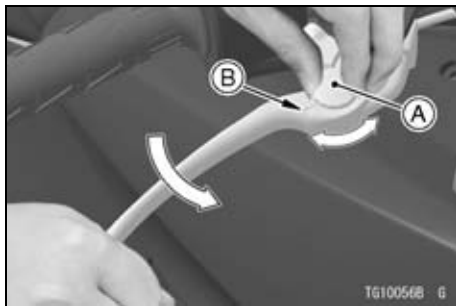

A. Adjuster
B. Mark

Clutch Lever Adjuster


While pushing the clutch lever forward, rotate the adjuster and choose a

70 GENERAL INFORMATION

suitable lever position from the five positions.

[Clutch Lever Adjustment]

| | | | | | |
|-------------------|-----|---|---|---|------|
| Adjuster Position | 1 | 2 | 3 | 4 | 5 |
| Lever Position | Far | ← | — | → | Near |

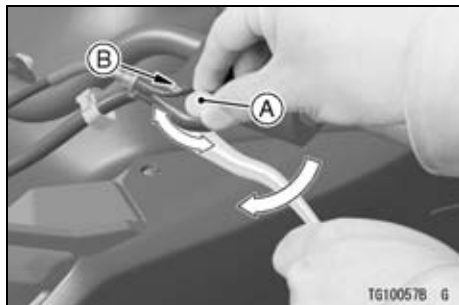

A. Adjuster
B. Mark

Fuel

WARNING

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Turn the ignition switch off.

Do not smoke.

Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

Fuel Requirements

Use clean, fresh unleaded gasoline with the following conditions.

Antiknock Index of 90 or more

Up to 10% of ethanol contained

NOTICE

Use only unleaded gasoline. Never use leaded gasoline. Leaded gasoline significantly reduces the capability of the catalytic converter in the exhaust system.

NOTICE

Use minimum of 90 octane gasoline only to prevent severe engine damage.

NOTICE

If engine “knocking” or “pinging” occurs, use a different brand of gasoline of a higher octane rating. If this condition is allowed to continue it can lead to severe engine damage. Gasoline quality is important. Fuels of low quality or not meeting standard industry specifications may result in unsatisfactory performance. Operating problems that result from the use of poor quality or nonrecommended fuel may not be covered under your warranty.

NOTICE

Avoid using blends of unleaded gasoline and methanol (wood alcohol) whenever possible, and never use “gasohol” containing more than 5% methanol.

Fuel system damage and performance problems may result.

NOTE

- *Other oxygenates approved for use in unleaded gasoline include TAME (up to 16.7%) and ETBE (up to 17.2%). Fuel containing these oxygenates can also be used in your Kawasaki.*

NOTICE

Never use gasoline with an octane rating lower than the minimum specified by Kawasaki. Never use “gasohol” with more than 10% ethanol, or more than 5% methanol.

Gasoline containing methanol must also be blended with cosolvents and corrosion inhibitors. Certain ingredients of gasoline may cause paint fading or damage. Be extra careful not to spill gasoline or gasoline oxygenate blends during refueling.

When not operating your Kawasaki for 30 to 60 days, mix a fuel stabilizer (such as STA-BIL) with the gasoline in the fuel tank. Fuel stabilizer additives inhibit oxidation of the fuel which minimizes gummy deposits.

Fuel Type and Octane Rating

Use clean, fresh unleaded gasoline.

The Antiknock Index is posted on service station pumps. The octane rating of a gasoline is a measure of its resistance to detonation or “knocking.” The Antiknock Index is an average of the Research Octane Number (RON) and the Motor Octane Number (MON) as shown in the table.

| | |
|-----------------|-------------------|
| Fuel Type | Unleaded Gasoline |
| Ethanol Content | E10 or less |
| Antiknock Index | 90 or more |

NOTICE

Do not use any fuel that contains more ethanol or other oxygenates than specified for E10 fuel* in this vehicle. Damage to the engine and fuel system, or engine starting and/or performance problems may result from the use of improper fuel.

*E10 means fuel containing up to 10% ethanol.

Filling the Tank

Avoid filling the tank in the rain or where heavy dust is blowing so that the fuel does not get contaminated.

 **WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Turn the ignition switch off. Do not smoke.

Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light. Never fill the tank completely to the top.


If the tank is filled completely to the top, heat may cause the fuel to expand and overflow through the vents in the tank cap.

After refueling, make sure the tank cap is closed securely. If gasoline is spilled on the fuel tank, wipe it off immediately.

NOTICE


California model only: Never fill the tank so the fuel level rises into the filler neck. If the tank is overfilled, heat may cause the fuel to expand and flow into the Evaporative Emission Control System resulting in hard starting, engine hesitation and non-compliance with the emission regulation.

- Lift the key hole cover.
- Insert the ignition key into the fuel tank cap.
- Turn the key clockwise while pushing down the fuel tank cap.

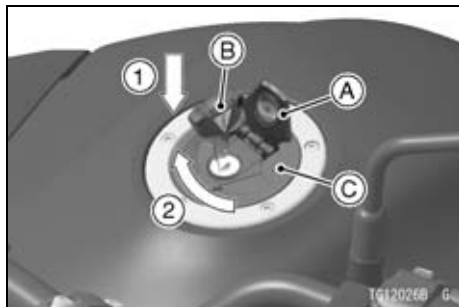

- A. Key Hole Cover
- B. Ignition Key
- C. Fuel Tank Cap

- Open the fuel tank cap.
- Add fuel.

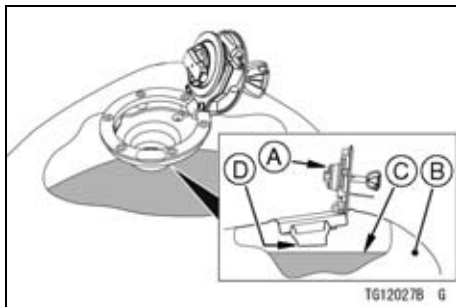

- A. Tank Cap
- B. Fuel Tank
- C. Top Level
- D. Bottom of Filler Neck (Maximum Fuel Level)

NOTE

- *Do not exceed the maximum fuel level as shown.*
- Push the fuel tank cap down into place with the key inserted.

76 GENERAL INFORMATION

- The key can be removed by turning counterclockwise to the original position.
- Close the key hole cover.

NOTICE

Never fill the tank completely to the top.

If the tank is filled completely to the top, heat may cause the fuel to expand and overflow through the vents in the tank cap.

After refueling, make sure the tank cap is closed securely.

If gasoline is spilled on the fuel tank, wipe it off immediately.

NOTE

- *The fuel tank cap cannot be closed without the key inserted, and the key*

cannot be removed unless the cap is locked properly.

- *Do not push on the key to close the cap, or the cap cannot be locked.*

Side Stand

Always kick the stand fully up before moving the motorcycle. The engine will stop automatically if the motorcycle is in gear and the clutch is released with the side stand down.

NOTE

- *When using the side stand, turn the handlebars to the left.*
- *Make sure the side stand is down securely before leaving the motorcycle.*
- *Do not sit on the motorcycle while it is on its side stand.*


Center Stand

To set the center stand

- Step down firmly on the stand, and then lift the motorcycle up and to the rear using the grab rail as a hand-hold.

NOTE

- *Do not pull up on the seat to lift as this will damage the seat.*

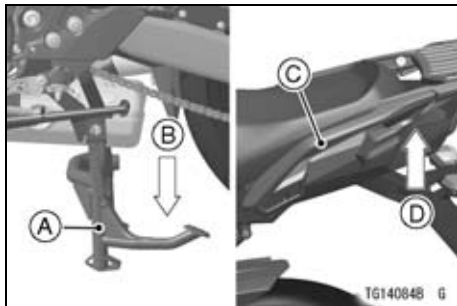

- A. Center Stand
- B. Step down.
- C. Grab Rail
- D. Lift up.

Seat


The seat can be removed using the ignition key.

Seat Removal

- Insert the ignition key into the seat lock.

78 GENERAL INFORMATION

- Lift the rear part of the seat while turning the key clockwise.
- Remove the seat backward.
- Remove the ignition key.

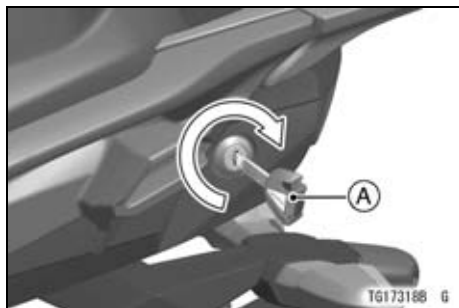


A. Ignition Key

Seat Installation

- Insert the tabs at the front part of the seat under the fuel tank bracket.
- Insert the hooks of the seat into the guides on the frame.

- Insert the hook at the rear part of the seat into the latch hole on the frame.
- Push down the rear part of the seat until the lock clicks.

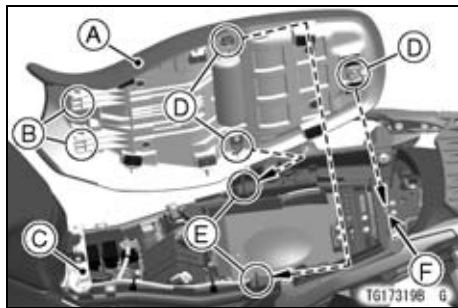

- A. Seat
- B. Tabs
- C. Fuel Tank Bracket
- D. Hooks
- E. Guides
- F. Latch Hole


- Pull up the front and rear ends of the seat to make sure they are securely locked.

Tool Kit Case

The tool kit case is located at the underside of the seat.

Keep the tool kit in this case.

- Remove the seat (see Seat section).
- Remove the bolt and open the tool kit case.

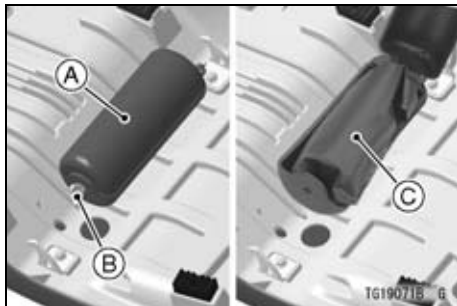

A. Tool Kit Case

B. Bolt


C. Tool Kit

Storage Compartment

The storage compartment is located under the seat.

The compartment is used to store light items.

80 GENERAL INFORMATION

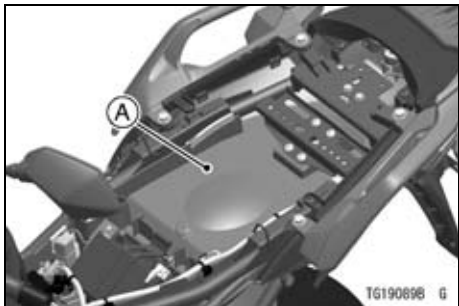

A. Storage Compartment

Rear View Mirrors

Rear View Mirror Adjustment

- Adjust the rear view mirror by slightly moving only the mirror portion of the assembly.

- If the rear visibility cannot be assured by moving the mirror, loosen the upper hexagonal area and turn the stay by hand.

NOTE

- *The upper hexagonal area (locknut) has left hand threads.*


Tightening Torque

Lower Hexagonal Area:

30 N·m (3.1 kgf·m, 22 ft·lb)

Upper Hexagonal Area:

18 N·m (1.8 kgf·m, 13 ft·lb)

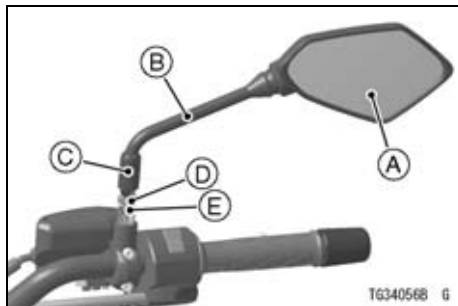

- A. Rear View Mirror
- B. Stalk
- C. Rubber Boot
- D. Upper Hexagonal Area
- E. Lower Hexagonal Area

NOTE


- If a torque wrench is not available, this item should be serviced by a Kawasaki dealer.

Windshield

The windshield can be adjusted up to about 75 mm (3.0 in.) in height to suit the rider's preference.

Windshield Height Adjustment

- Loosen the adjusting knobs on the windshield.

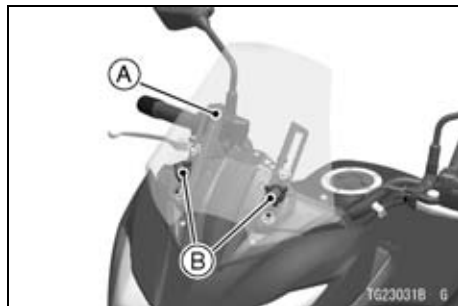

- A. Windshield
- B. Windshield Adjusting Knobs

- When moving the windshield up or down.

82 GENERAL INFORMATION

- Tighten the adjusting knobs on the windshield.
- Be sure the windshield is fixed securely.

Rear Carrier

This motorcycle is equipped with carriers on the rear.




A. Rear Carrier

 **WARNING**

Overloading the motorcycle with cargo and/or passengers, and/or not balancing the weight of items carried on the rear carrier may cause adverse handling, loss of control and an accident resulting in serious injury or death. Do not carry loads of more than 6 kg (13 lb) on the rear carrier. Do not exceed the total payload limit of 220 kg (485 lb), including rider, passenger, baggage, and accessories. Do not exceed the vehicle speed of 130 km/h (80 mph) when carrying a passenger and/or cargo. Also reduce speed according to road or weather condition, etc. Failure to adjust the speed to compensate for added weight and other conditions may result in a loss of control and subsequent accident.

Tie Hooks

When securing light loads to the seat and carrier, use the tie hooks located at the left and right grab rails.

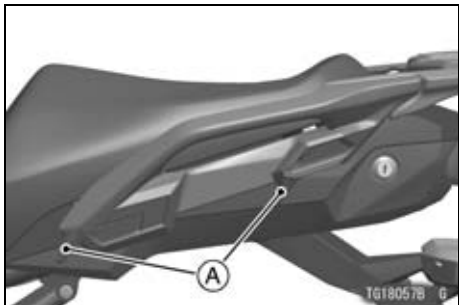

A. Tie Hooks

Event Data Recorder

In common with many other vehicle manufacturers, Kawasaki has equipped this motorcycle with an event data recorder (EDR). The purpose of

this device is to record data that assists with understanding of how some of the vehicle's systems were performing during a short period of time immediately before and during an accident or similar event involving minor damage. Due to accident variables, all vehicle performance data may not be stored on the EDR.

NOTE

- *During normal riding, data is recorded but not saved unless the vehicle is involved in an accident event.*
- *At no time other than in the event of an accident or similar event involving minor damage is it possible for EDR data to be stored for retrieval.*
- *Depending on the type of accident event, it is possible that the EDR may not record some or all of the data,*

or it may not record if the EDR is damaged.

- *This device does not collect or store personal data or information (e.g. name, gender, age).*

The EDR in this vehicle is designed to record only data that is relevant to the vehicle's running condition at the time of an accident like, but not limited to, vehicle speed, engine crankshaft rotational speed and throttle opening, etc.

This data can help provide a better understanding for both the rider and the manufacturer of how the vehicle was performing at the time of an accident or near accident-like situation.

To access information on an EDR, special equipment and access to the EDR is required. Kawasaki will not share EDR information without obtaining your consent, unless required by government authorities, or acting pursuant to lawful authority.

Electric Accessory Connectors

The electric power of the battery can be used through the electric accessory connectors.


- When using the electric accessory connectors, the electric accessory connection to the connectors should be done by an authorized Kawasaki dealer.

NOTICE

Do not connect the accessories other than specified accessories.

Accessory Connector (Grip Heater)

| Location | Purpose |
|------------------------|-------------|
| Back of Side Cover | Grip Heater |
| Maximum Current: 2.3 A | |

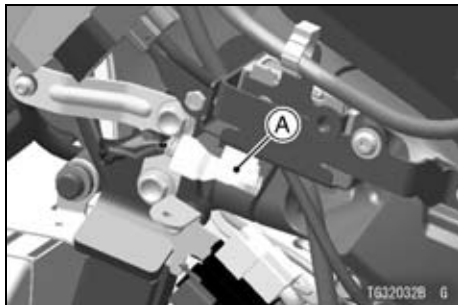

A. Accessory Connector (Grip Heater)

NOTICE

This accessory circuit has electrical accessory circuit (15 A fuse) for the connector. Always install a fuse 15 A or less for the circuit. Do not connect more than 28 W of load to this accessory circuit or the battery may become discharge, even with the engine running.

Accessory Connector (Fog Light)


| Location | Purpose |
|------------------------|-----------|
| Back of Headlight | Fog Light |
| Maximum Current: 1.3 A | |



A. Accessory Connector (Fog Light)

Accessory Connector (Accessory Socket)

| Location | Polarity | Wire Color |
|------------------------|----------|-------------|
| Back of Headlight | (+) | White/Black |
| | (-) | Black |
| Maximum Current: 3.3 A | | |

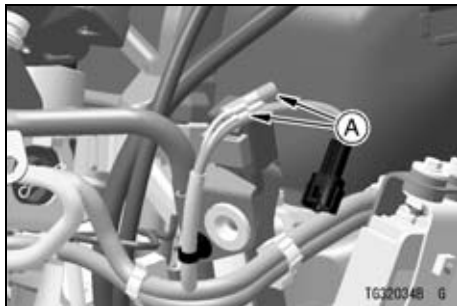

A. Accessory Connectors (Accessory Socket)

NOTICE

This accessory circuit has electrical accessory circuit (7.5 A fuse) for the connector and socket. Always install a fuse 7.5 A or less for the circuit. Do not connect more than 56 W of load to this accessory circuit or the battery may become discharge, even with the engine running.

HOW TO RIDE THE MOTORCYCLE

Break-In

The first 1 600 km (1 000 mile) that the motorcycle is ridden is designated as the break-in period. If the motorcycle is not used carefully during this period, you may very well end up with a “broken down” instead of a “broken in” motorcycle after a few thousand kilometers.

The following rules should be observed during the break-in period.

- The table shows maximum recommended engine speed during the break-in period.

| Distance traveled | Maximum engine speed |
|-----------------------------------|----------------------|
| 0 ~ 800 km (0 ~ 500 mile) | 4 000 r/min (rpm) |
| 800 ~ 1 600 km (500 ~ 1 000 mile) | 6 000 r/min (rpm) |

NOTE

- *When operating on public roadways, keep maximum speed under traffic law limits.*
- Do not start moving or race the engine immediately after starting it, even if the engine is already warm. Run the engine for two or three minutes at idle speed to give the oil a chance to work up into all the engine parts.

90 HOW TO RIDE THE MOTORCYCLE


- Do not race the engine while the transmission is in neutral.


⚠ WARNING

New tires are slippery and may cause loss of control and injury. A break-in period of 160 km (100 miles) is necessary to establish normal tire traction. During break-in, avoid sudden and maximum braking and acceleration, and hard cornering.

In addition to the above, at 1 000 km (600 mile) it is extremely important that the owner has the initial maintenance service performed by an authorized Kawasaki dealer.


Starting the Engine

- Check that the engine stop switch is in the  position.

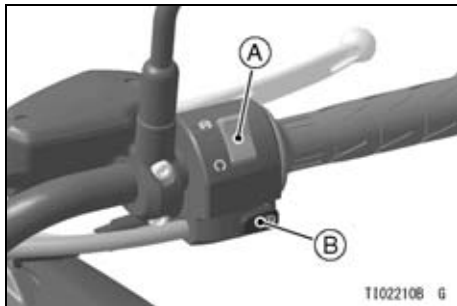


- A. Engine Stop Switch**
B. Starter Button

- Turn the ignition key to “ON” position.
- Make sure the transmission is in neutral.

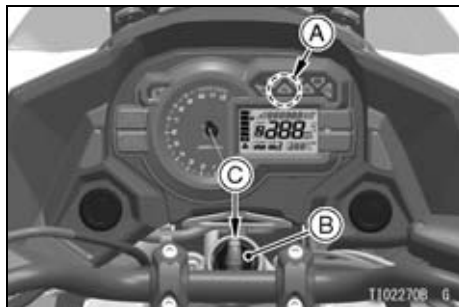

- A. Neutral Indicator (Green)
- B. Ignition Switch
- C. ON Position

NOTE

- While the engine is cold, the fast idle system automatically raises the engine idling speed. At this time, the engine warning indicator () may go on if you operate the throttle grip unnecessarily.


- The motorcycle is equipped with a vehicle-down sensor which causes the engine to stop automatically if the motorcycle falls down. After righting the motorcycle, first turn the ignition key to “OFF” and then back to “ON” before starting the engine.
- Without holding the throttle grip, push the starter button to start the engine.

NOTICE

Do not operate the starter continuously for more than 5 seconds, or the starter will overheat and the battery power will drop temporarily. Wait 15 seconds between each operation of the starter to let it cool and the battery power recover.

NOTE

- *The motorcycle is equipped with a starter lockout switch. This switch is designed so that the engine does not start if the transmission is in gear and the side stand is down. However, the engine can be started if the clutch lever is pulled and the side stand is fully up.*

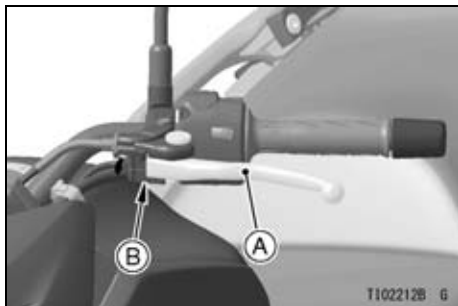

A. Clutch Lever
B. Starter Lockout Switch

NOTICE

Do not let the engine idle longer than 5 minutes, or engine overheating and damage may occur.

Moving Off

- Check that the side stand is up.
- Pull in the clutch lever.
- Shift into 1st gear.
- Open the throttle a little, and start to let out the clutch lever very slowly.
- As the clutch starts to engage, open the throttle a little more, giving the engine just enough fuel to keep it from stalling.


NOTE

- *The motorcycle is equipped with a side stand switch. This switch is designed so that the engine does not*

start if the transmission is in gear and the side stand is down.

Shifting Gears

- Close the throttle while pulling in the clutch lever.
- Shift into the next higher or lower gear.

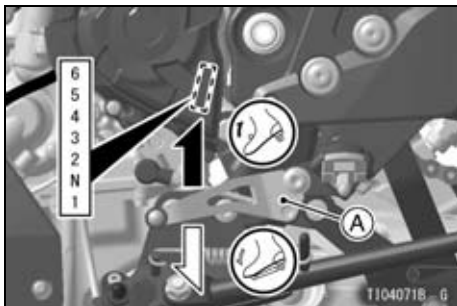

A. Shift Pedal

- Open the throttle part way, while releasing the clutch lever.
- For smooth riding, each gear position should cover the proper rate of speed shown in the table.

WARNING

Downshifting to a lower gear at high speed causes engine rpm to increase excessively, potentially damaging the engine and it may also cause the rear wheel to skid and cause an accident. Downshifting should be done below the vehicle speeds for each gear shown in the table.

Vehicle speed when shifting

| Shifting up | km/h (mph) |
|-------------|------------|
| 1st → 2nd | 15 (9) |
| 2nd → 3rd | 25 (15) |
| 3rd → 4th | 35 (21) |
| 4th → 5th | 45 (27) |
| 5th → 6th | 55 (34) |

| Shifting down | km/h (mph) |
|---------------|------------|
| 6th → 5th | 30 (19) |
| 5th → 4th | 25 (15) |
| 4th → 3rd | 20 (12) |
| 3rd → 2nd | 15 (9) |
| 2nd → 1st | 15 (9) |

NOTE

- *The transmission is equipped with a positive neutral finder. When the motorcycle is standing still, the transmission cannot be shifted past neutral from 1st gear. To use the positive neutral finder, shift down to 1st gear, then lift up on the shift pedal while standing still. The transmission will shift only into neutral.*


Braking

- Close the throttle completely, leaving the clutch engaged (except when shifting gears) so that the engine will help slow down the motorcycle.
- Shift down one gear at a time so that you are in 1st gear when you come to a complete stop.
- When stopping, always apply both brakes at the same time. Normally


the front brake should be applied a little more than the rear. Shift down or fully disengage the clutch as necessary to keep the engine from stalling.

- Never lock the brakes, or it will cause the tires to skid. When turning a corner, it is better not to brake at all. Reduce your speed before you get into the corner.
- For emergency braking, disregard downshifting, and concentrate on applying the brakes as hard as possible without skidding.
- Even in motorcycles equipped with ABS, braking during cornering may cause wheel slip. When turning a corner, it is better to limit braking to

the light application of both brakes or not to brake at all. Reduce your speed before you get into the corner.

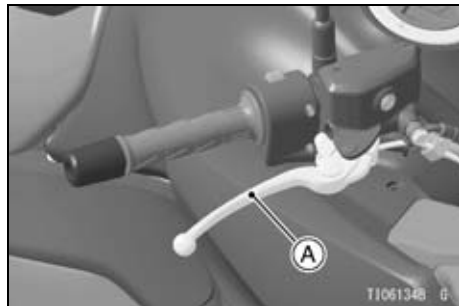

A. Front Brake Lever

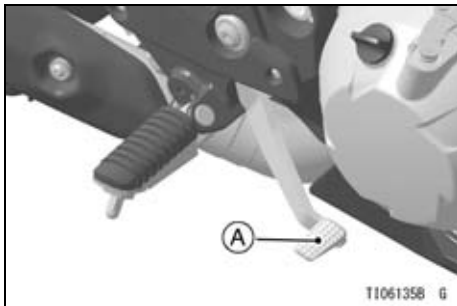

A. Rear Brake Pedal

Anti-lock Brake System (ABS)

ABS is designed to help prevent the wheels from locking up when the brakes are applied hard while running straight. The ABS automatically regulates brake force. Intermittently gaining gripping force and braking force helps

prevent wheel lock-up and allows stable steering control while stopping.

Brake control function is identical to that of a conventional motorcycle. The brake lever is used for the front brake and the brake pedal for the rear brake.

Although the ABS provides stability while stopping by preventing wheel lock-up, remember the following characteristics:

- To apply the brake effectively, use the front brake lever and rear brake pedal simultaneously in the same manner as conventional motorcycle brake system.
- ABS cannot compensate for adverse road conditions, misjudgment or improper application of brakes. You must take the same care as with motorcycles not equipped with ABS.
- ABS is not designed to shorten the braking distance. On loose, uneven or downhill surfaces, the stopping

distance of a motorcycle with ABS may be longer than that of an equivalent motorcycle without ABS. Use special caution in such areas.

- ABS will help prevent wheel lock-up when braking in a straight line, but it cannot control wheel slip which may be caused by braking during cornering. When turning a corner, it is better to limit braking to the light application of both brakes or not to brake at all. Reduce your speed before you get into the corner.
- Same as conventional brake system, an excessive sudden braking may cause wheel lock up that makes it harder to control a motorcycle.
- During braking, ABS will not prevent the rear wheel lifting.

WARNING

ABS cannot protect the rider from all possible hazards and is not a substitute for safe riding practices. Be aware of how the ABS system operates and its limitations. It is the rider's responsibility to ride at appropriate speeds and manner for weather, road surface and traffic conditions.

- The computers integrated in the ABS compare vehicle speed with wheel speed. Since non-recommended tires can affect wheel speed, they may confuse the computers, which can extend braking distance.

 **WARNING**

Use of non-recommended tires may cause malfunctioning of ABS and can lead to extended braking distance. The rider could have an accident as a result. Always use recommended standard tires for this motorcycle.

NOTE

- *When the ABS is functioning, you may feel a pulsing in the brake lever or pedal. This is normal. You need not suspend applying brakes.*
- *ABS does not function at speeds of approx. 5 km/h (3.1 mph) or below.*
- *ABS does not function if the battery is discharged. When riding with an insufficiently charged battery, ABS may not function. Keep the battery*

in good condition according to the "Battery Maintenance" section.

Stopping the Engine

- Close the throttle completely.
- Shift the transmission into neutral.
- Turn the ignition key to "OFF."
- Support the motorcycle on a firm, level surface with the side stand.
- Lock the steering.

Stopping the Motorcycle in an Emergency

Your Kawasaki Motorcycle has been designed and manufactured to provide you optimum safety and convenience. However, in order to fully benefit from Kawasaki's safety engineering and craftsmanship, it is essential that you, the owner and operator, properly

maintain your motorcycle and become thoroughly familiar with its operation. Improper maintenance can create a dangerous situation known as throttle failure. Two of the most common causes of throttle failure are:

1. An improperly serviced or clogged air cleaner may allow dirt and dust to enter the throttle body and stick the throttle open.
2. During removal of the air cleaner, dirt is allowed to enter and jam the fuel injection system.

In an emergency situation such as throttle failure, your vehicle may be stopped by applying the brakes and disengaging the clutch. Once this stopping procedure is initiated, the engine stop switch may be used to stop

the engine. If the engine stop switch is used, turn off the ignition switch after stopping the motorcycle.

Parking

WARNING

Operating or parking the vehicle near flammable materials can cause a fire, and can result in property damage or severe personal injury.

Do not idle or park your vehicle in an area where tall or dry vegetation, or other flammable materials could come into contact with the muffler or exhaust pipe.

 **WARNING**

The engine and exhaust system get extremely hot during normal operation and can cause serious burns.

Never touch a hot engine, exhaust pipe, or muffler during operation or after stopping the engine.

- Shift the transmission into neutral and turn the ignition key to “OFF.”
- Support the motorcycle on a firm, level surface with the side stand.

NOTICE

Do not park on a soft or steeply inclined surface, or the motorcycle may fall over.

- If parking inside a garage or other structure, be sure it is well ventilated

and the motorcycle is not close to any source of flame or sparks; this includes any appliance with a pilot light.

 **WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Turn the ignition switch off. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Lock the steering to help prevent theft.

Kawasaki TRaction Control (KTRC)

KTRC is an intelligent system that calculates the slip level of the rear wheel (wheelspin) during acceleration and controls the optimum slip ratio to suit the riding conditions. KTRC can contribute to a stable ride not only for sports riding but also when riding on a rough or slippery road surface.

KTRC is designed for use on public roads. KTRC cannot respond to every condition. Acceleration may be delayed under certain conditions.

WARNING

KTRC cannot protect the rider from all possible hazards and is not a substitute for safe riding practices. Be aware of how the KTRC system operates and its limitations. It is the rider's responsibility to ride at appropriate speeds and manner for weather, road surface and traffic conditions.

If a wheelie occurs due to excessive acceleration, KTRC will control the engine output to make the front wheel contact the road surface. In this case, slightly release the throttle grip so that the front wheel stays in contact with the road surface.

 **WARNING**

Use of nonrecommended tires could cause a malfunction or improper operation of KTRC. Always use recommended standard tires for this motorcycle.

KTRC determines the traction control characteristics with three mode selections. KTRC can also be set to OFF.

KTRC and the Power mode can be set separately. By combining each setting, the rider can get various riding feelings. For further details on the combined use of the KTRC and the Power mode, refer to KTRC and Power Mode Combination section.

Mode 1:

KTRC least intervenes among the three modes. This mode gives maximum acceleration for sport riding.

Mode 2:


KTRC intervention is at the intermediate level between the mode 1 and mode 3.

Mode 3:

KTRC intervenes early enough to prevent the rear wheel from spinning whenever possible. This mode is used in low grip situations.

KTRC mode setting

- Close the throttle grip completely.
- Push the “SEL” button to select the KTRC mode indicator. When the KTRC mode indicator is selected, it blinks.

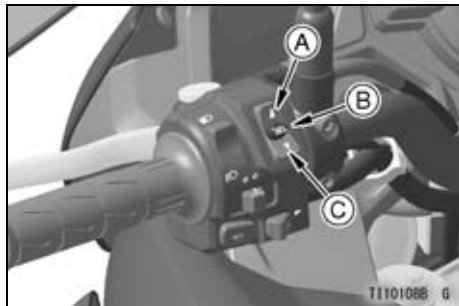

A. Upper Button

B. "SEL" Button

C. Lower Button


- Push the Upper or Lower button to select the KTRC mode. The KTRC OFF can be selected only when the motorcycle is at a stop.

Upper Button:

Mode 3 → Mode 2 → Mode 1 → OFF

Lower Button:

OFF → Mode 1 → Mode 2 → Mode 3

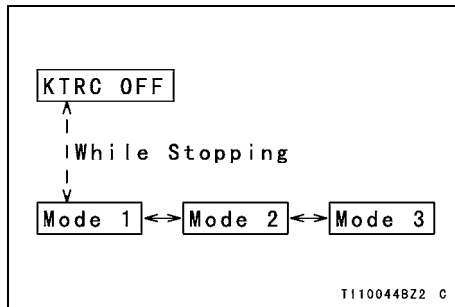


NOTE

- When changing the mode, stop the motorcycle.
- When 30 seconds have passed or the throttle is opened after the KTRC mode indicator starts blinking, it stops blinking and the selected mode is fixed.
- The mode can be changed only when the throttle grip is closed completely.

104 HOW TO RIDE THE MOTORCYCLE

- *The display/mode is switched when the button is released. When the button is held for more than two seconds, the switching function does not work.*
- *Operate the throttle carefully while the KTRC is OFF because wheel-spin of the rear wheel cannot be controlled.*
- Check the KTRC mode indicator to make sure that the mode has been changed. When the traction control is activated rear wheel starts to break traction, the KTRC indicator goes on.

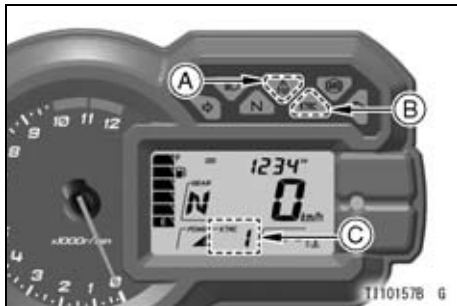

- A. KTRC Warning Indicator (Yellow)
- B. KTRC Indicator (Yellow)
- C. KTRC Mode Indicator

For more detailed information about the KTRC warning indicator and the KTRC indicator, see “Indicators” section in the GENERAL INFORMATION chapter.

NOTE

- *In the KTRC mode 1-3, the selected mode is maintained even when the*

ignition switch is turned to “OFF” position, or the battery is discharged or removed.

- *In the KTRC OFF, the mode is automatically switched to 1, whenever the ignition switch is turned to “OFF” position. Also, the mode is automatically switched to 1, when the ignition switch is turned to “ON” position after the battery is discharged or removed.*

Power Mode

The Power mode determines the engine power output characteristics and has two settings.

The Power mode and the KTRC can be set separately. By combining each setting, the rider can get various riding feelings. For further details on the combined use of the Power mode and the

KTRC, refer to KTRC and Power Mode Combination section.

Mode F (Full Power):


The highest engine power output is achieved. The rider can feel the full throttle response of the engine.

Mode L (Low Power):

About 75% of the highest engine power output is achieved. The throttle response is milder than F mode.

Power mode setting

- Close the throttle grip completely.
- Push the “SEL” button to select the Power mode indicator. When the Power mode indicator is selected, it blinks.

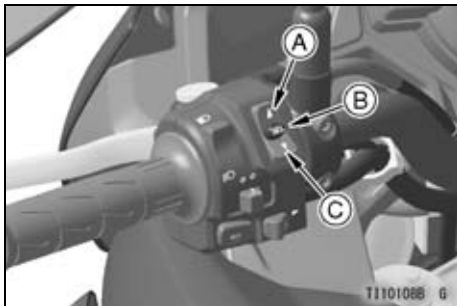

A. Upper Button

B. "SEL" Button

C. Lower Button

- Push the Upper or Lower button to select the Power mode.

Upper Button: Mode F (Full Power)

Lower Button: Mode L (Low Power)

NOTE

- When changing the mode, stop the motorcycle.
- When 30 seconds have passed or the throttle is opened after the Power mode indicator starts blinking, it stops blinking and the selected mode is fixed.
- The mode can be changed only when the throttle grip is closed completely.
- The display/mode is switched when the button is released. When the button is held for more than two seconds, the switching function does not work.
- Check the Power mode indicator to make sure that the mode has been changed.



A. Power Mode Indicator

NOTE

- The Power mode setting is maintained if the ignition switch is turned to "OFF" position, or if the battery is disconnected.


KTRC and Power Mode Combination

By combining the KTRC mode and Power mode, the eight-pattern settings are available to suit the various conditions. For example, on a slippery road surface, combining the Power mode "L" with the KTRC mode "3" can reduce the rear wheelspin.

The combination of each mode should be decided according to the driving skill and road conditions. Set the combination with reference to the following table.

108 HOW TO RIDE THE MOTORCYCLE

examples of mode combinations

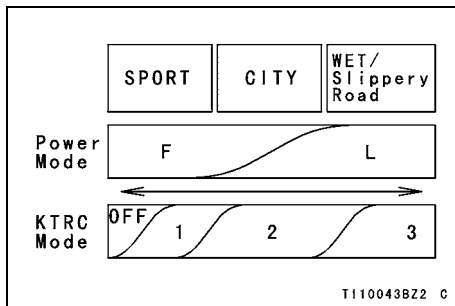

MAINTENANCE AND ADJUSTMENT

The maintenance and adjustments outlined in this chapter must be carried out in accordance with the Daily Checks and Periodic Maintenance to keep the motorcycle in good running condition and to reduce air pollution. **The initial maintenance is vitally important and must not be neglected.**

WARNING

Failure to perform these checks or to correct a problem before operation may result in serious damage or an accident. Always perform daily checks before operation.

With a basic knowledge of mechanics and the proper use of tools, you should be able to carry out many of the maintenance items described in this chapter. If you lack proper experience or doubt your ability, all adjustments, maintenance, and repair work should be completed by a qualified technician.

Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect or improper adjustment made by the owner.

 **DANGER**

Exhaust gas contains carbon monoxide, a colorless, odorless poisonous gas. Inhaling carbon monoxide can cause serious brain injury or death. **DO NOT** run the engine in enclosed areas. Operate only in a well-ventilated area.

 **WARNING**

The cooling fan spins at high speed and can cause serious injuries. Keep your hands and clothing away from the cooling fan blades at all times.

NOTE

- *If a torque wrench is not available, the maintenance items which require a specific torque value should be serviced by an authorized Kawasaki dealer.*

Daily Checks

Check the following items each day before you ride. The time required is minimal, and habitual performance of these checks will help ensure you a safe, reliable ride.

If any irregularities are found during these checks, refer to the MAINTENANCE AND ADJUSTMENT chapter or see your dealer for the action required to return the motorcycle to a safe operating condition.

| Operation | See Page |
|---|----------|
| Fuel | |
| Adequate supply in tank, no leaks | — |
| Engine oil | |
| Oil level between level lines | 119 |
| Tires | |
| Air pressure (when cold), install the air valve cap | 151 |
| Tire wear | 152 |
| Drive chain | |
| Slack | 134 |
| Lubricate if dry | 133 |

112 MAINTENANCE AND ADJUSTMENT

| Operation | See Page |
|--|----------|
| Bolts, nuts and fasteners | |
| Check for loose and/or missing bolts, nuts and fasteners | — |
| Steering | |
| Action smooth but not loose from lock to lock | — |
| No binding of control cables | — |
| Brakes | |
| Brake pad wear | 139 |
| Brake fluid level | 138 |
| No brake fluid leakage | — |
| Throttle | |
| Throttle grip free play | 128 |
| Clutch | |
| Clutch lever free play | 132 |
| Clutch lever operates smoothly | — |
| Coolant | |
| No coolant leakage | — |

| Operation | See Page |
|--|----------|
| Coolant level between level lines (when engine is cold) | 122 |
| Electrical equipment All lights (head, city, tail/brake, turn signal, license plate, warning/indicator) and horn work | — |
| Engine stop switch Stops engine | — |
| Side stand and center stand Return to its fully up position by spring tension Return spring not weak or not damaged | — — |
| Rear view mirrors Rear view sight | — |


Periodic Maintenance


- *A: Service at number of years shown or indicated odometer reading intervals, whichever comes first.
- *B: For higher odometer readings, repeat at the frequency interval established here.
- *C: Service more frequently when operating in severe conditions: dusty, wet, muddy, high speed, or frequent starting/stopping.
- *D: California model only
- : Emission Related Item


: Inspection



: Dealer Inspection

: Change or Replace

: Dealer Change or Replace






















: Lubrication

: Dealer Lubrication
































| Items | | year (*A) | Odometer Reading (*B) × 1 000 km (× 1 000 mile) | | | | | See Page |
|-----------------------|--|--|--|------------|-------------|---|--------------|-------------|
| | | | 1 (0.6) | 6 (3.8) | 12 (7.6) | 18 (11.4) | 24 (15.2) | |
| <input type="radio"/> | Air cleaner element (*C) | | | | |  | | 127 |
| <input type="radio"/> | Idle speed | | Q | | Q | | Q | 131 |
| <input type="radio"/> | Throttle control system (play, smooth return, no drag) | Q:1 | Q | | Q | | Q | 128 |
| <input type="radio"/> | Engine vacuum synchronization | | | | Q | | Q | — |
| | Fuel system | Q:1 | Q | | Q | | Q | — |
| | Fuel hose |  :5 | | | | | | — |
| <input type="radio"/> | Evaporative emission control system (*D) | | Q | Q | Q | Q | Q | — |
| | Coolant level | | Q | | Q | | Q | 122 |
| | Cooling system | Q:1 | Q | | Q | | Q | — |

116 MAINTENANCE AND ADJUSTMENT

| Items | year (*A) | Odometer Reading (*B) × 1 000 km (× 1 000 mile) | | | | | See Page |
|--|--------------|--|------------|-------------|--------------|--------------|-------------|
| | | 1 (0.6) | 6 (3.8) | 12 (7.6) | 18 (11.4) | 24 (15.2) | |
| Coolant, water hoses and O-rings | :3 | : every 36 000 km (22 500 mile) | | | | | — |
| ○ Valve clearance | | | | | | | — |
| ○ Air suction system | | | | | | | — |
| Clutch operation (play, engagement, disengagement) | | | | | | | 132 |
| Engine oil (*C) | :1 | | | | | | 120 |
| Engine oil filter (*C) | :1 | | | | | | 122 |
| Tire air pressure | :1 | | | | | | 151 |
| Wheels and tires | :1 | | | | | | 151 |
| Wheel bearing damage | :1 | | | | | | — |

| Items | | year (*A) | Odometer Reading (*B) × 1 000 km (× 1 000 mile) | | | | | See Page |
|-------|--|--|--|------------|---|--------------|---|-------------|
| | | | 1 (0.6) | 6 (3.8) | 12 (7.6) | 18 (11.4) | 24 (15.2) | |
| | Drive chain lubrication condition (*C) | |  : every 600 km (400 mile) | | | | | 133 |
| | Drive chain slack (*C) | |  : every 1 000 km (600 mile) | | | | | 134 |
| | Drive chain wear (*C) | | | |  | |  | — |
| | Drive chain guide wear | | | |  | |  | — |
| | Brake system |  :1 |  | |  | |  | — |
| | Brake operation (effectiveness, play, no drag) |  :1 |  | |  | |  | — |
| | Brake fluid level |  :1 |  | |  | |  | 138 |
| | Brake fluid (front and rear) |  :2 | | | | |  | — |
| | Brake hose |  :4 | | | | | | |

118 MAINTENANCE AND ADJUSTMENT

| Items | year (*A) | Odometer Reading (*B) × 1 000 km (× 1 000 mile) | | | | | See Page |
|---|--|--|---|--|---|---|-------------|
| | | 1 (0.6) | 6 (3.8) | 12 (7.6) | 18 (11.4) | 24 (15.2) | |
| Rubber parts of brake master cylinder and caliper |  :4 |  : every 48 000 km (30 000 mile) | | | | | — |
| Brake pad wear (*C) | | |  |  |  |  | 139 |
| Brake light switch operation | |  |  |  |  |  | 140 |
| Suspension system |  :1 | | |  | |  | — |
| Steering play |  :1 |  | |  | |  | — |
| Steering stem bearings |  :2 | | | | |  | — |
| Electrical system |  :1 | | |  | |  | — |
| ○ Spark plugs | | | |  | |  | — |
| Chassis parts |  :1 | | |  | |  | — |
| Condition of bolts, nuts and fasteners | |  | |  | |  | — |

Engine Oil


Oil Level Inspection

- If the engine is cold, start the engine and run it for several minutes at idle speed.
- Stop the engine, then wait several minutes until the oil settles.

NOTICE

Racing the engine before the oil reaches every part can cause engine seizure.

- Check the engine oil level through the oil level inspection window. With the motorcycle held level, the oil level should come up between the upper and lower level lines next to the oil level inspection window.

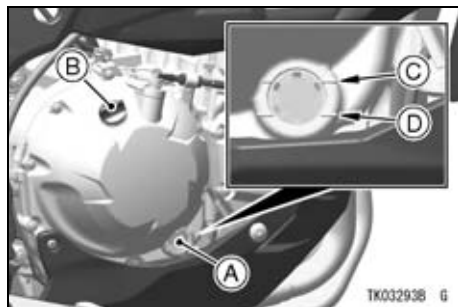

A. Oil Level Inspection Window

B. Oil Filler Cap

C. Upper Level Line

D. Lower Level Line

- If the oil level is too high, remove the excess oil through the oil filler opening using a syringe or some other suitable device.
- If the oil level is too low, add oil to reach the correct level. Use the same type and brand of oil that is already in the engine.


120 MAINTENANCE AND ADJUSTMENT

Oil Change

- Warm up the engine thoroughly, and then stop it.
- Place an oil pan beneath the engine.
- Remove the engine oil drain bolt.

WARNING

Engine oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.

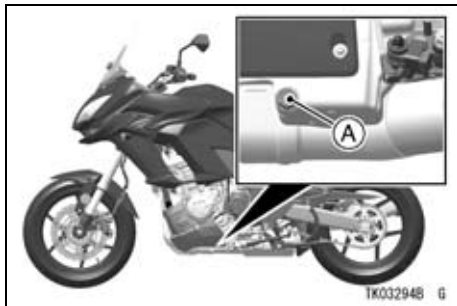

A. Engine Oil Drain Bolt

- Let the oil completely drain with the motorcycle perpendicular to the ground.

NOTE

- *If a torque wrench is not available, this item should be serviced by an authorized Kawasaki dealer.*
- Install the drain bolt with a new gasket. Tighten it to the specified torque.

NOTE

- *Replace the gasket with a new one.*

Tightening Torque

Engine Oil Drain Bolt:

29 N·m (3.0 kgf·m, 21 ft·lb)

- Fill the engine up to the upper level line with a good quality engine oil specified in the table.

Recommended Engine Oil

Type:

Kawasaki Performance 4-Stroke Motorcycle Oil*

Kawasaki Performance 4-Stroke Semi-Synthetic Oil*

Kawasaki Performance 4-Stroke Full Synthetic Oil*

or other 4-stroke oils with API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2 rating

Viscosity:

SAE 10W-40

*Kawasaki Performance Oils and Lubricants have been specifically engineered for your vehicle. Consistent use of these products meets or exceeds warranty and service requirements and can help to extend the life of your Kawasaki.

NOTE

- *Do not add any chemical additive to the oil. Oils fulfilling the above requirements are fully formulated and provide adequate lubrication for both the engine and the clutch.*

Engine Oil Capacity

3.2 L (3.4 US qt)


[when filter is not removed]

3.8 L (4.0 US qt)

[when filter is removed]

122 MAINTENANCE AND ADJUSTMENT


Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area.

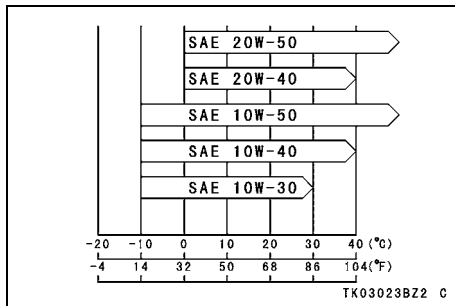

- Start the engine.
- Check the oil level and oil leakage.

Oil Filter Replacement

- The oil filter replacement should be done by an authorized Kawasaki dealer.

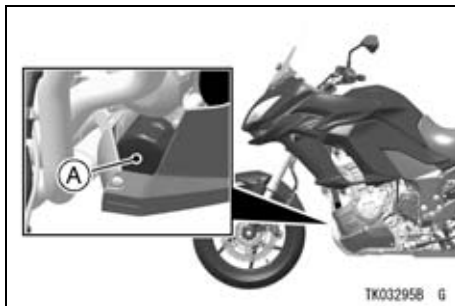


A. Oil Filter

Coolant

Coolant Level Inspection

- Position the motorcycle so that it is perpendicular to the ground.
- Check the coolant level through the coolant level gauge on the reserve tank located to the back of the right fuel tank cover. The coolant level

should be between the F (Full) and L (Low) level lines.

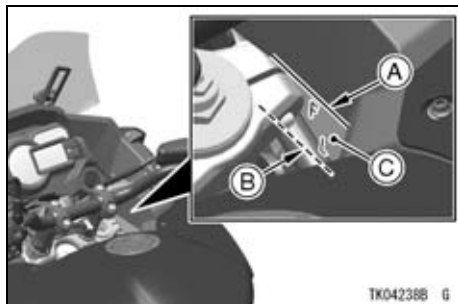

- A. F (Full) Level Line
- B. L (Low) Level Line
- C. Reserve Tank

NOTE


- Check the level when the engine is cold (room or atmospheric temperature).

MAINTENANCE AND ADJUSTMENT 123

- If the amount of coolant is insufficient, add coolant into the reserve tank.

Coolant Filling


- Remove the bolt and plastic washer.

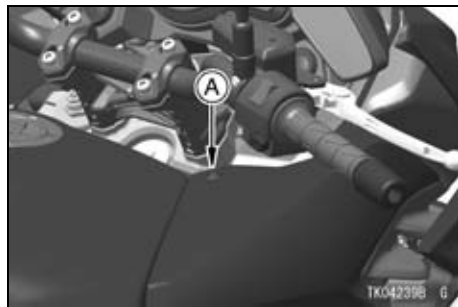

A. Bolt and Plastic Washer

- Clear the hooks outward while pushing them.


124 MAINTENANCE AND ADJUSTMENT

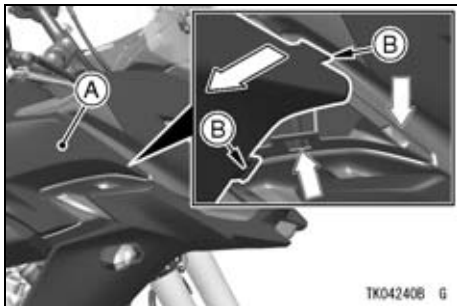

A. Right Fuel Tank Cover

B. Hooks

- Pull the right fuel tank cover outward to clear the projections.
- Remove the right fuel tank cover.

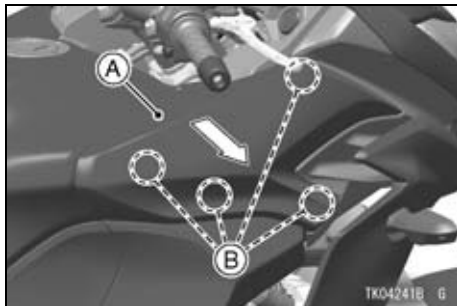


A. Right Fuel Tank Cover

B. Projections

- Remove the cap from the reserve tank and add coolant through the filler opening to the F (Full) level line.

correct mixture ratio by the addition of antifreeze concentrate as soon as possible.

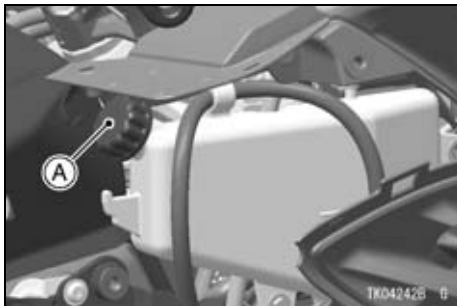

A. Reserve Tank Cap


NOTE

○ *In an emergency you can add water alone to the coolant reserve tank, however it must be returned to the*

NOTICE

If coolant must be added often, or the reserve tank completely runs dry, there is probably leakage in the system. Have the cooling system inspected by your authorized Kawasaki dealer.

- Install the reserve tank cap.
- Insert the projections of the tank cover into the grommets.

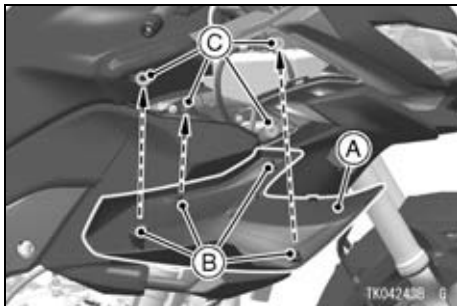


A. Right Fuel Tank Cover

B. Projections

C. Grommets

- Insert the hooks into the slots while pushing them.

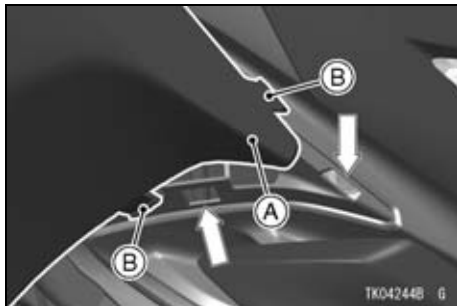

A. Right Fuel Tank Cover

B. Hooks

- Tighten the bolt with plastic washer.

Coolant Change

Have the coolant changed by an authorized Kawasaki dealer.

Coolant Requirement

WARNING

Coolant containing corrosion inhibitors for aluminum engines and radiators include harmful chemicals for human body. Drinking coolant can result in serious injury or death. Use coolant in accordance with the instructions of the manufacturer.

Use a permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators) in the cooling system. On the mixture ratio of coolant, choose the suitable one referring to the relation between freezing point and strength directed on the container.

NOTICE

If hard water is used in the system, it causes scale accumulation in the water passages, and considerably reduces the efficiency of the cooling system.

NOTE

- *A permanent type of antifreeze is installed in the cooling system when shipped. It is mixed at 50% and has the freezing point of -35°C (-31°F).*


Air Cleaner

This motorcycle's air cleaner element consists of a wet paper filter. Cleaning and replacement of the air cleaner element should be done by an authorized Kawasaki dealer.

128 MAINTENANCE AND ADJUSTMENT

Oil Draining

- Inspect the transparent reservoir located to the left of the engine to see if any oil has run down.

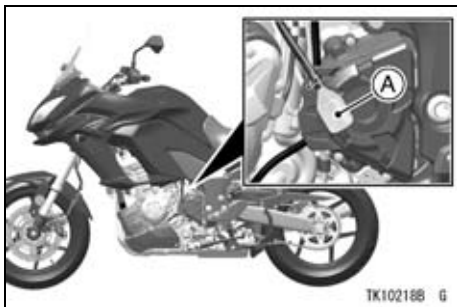

A. Transparent Reservoir

- If there is any oil in the transparent reservoir, remove the transparent reservoir from the lower end of the drain hose and drain the oil.

⚠ WARNING

Oil on tires will make them slippery and can cause an accident and injury. Be sure to install the reservoir in the drain hose after draining.


Throttle Control System

Throttle Grip

Throttle Grip Free Play Inspection

- Check that the throttle grip moves smoothly from full open to close, and the throttle closes quickly and completely by the return spring in all steering positions.
- If the throttle grip does not return properly, have the throttle control system checked by an authorized Kawasaki dealer.

- Check the throttle grip free play by turning back and forth.

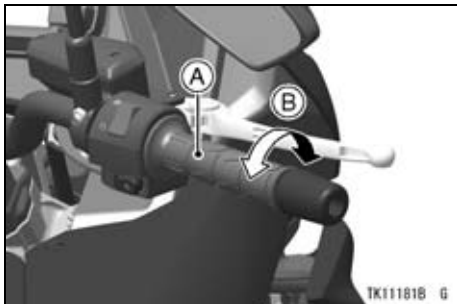

A. Throttle Grip
B. Throttle Grip Free Play


Throttle Grip Free Play

2 ~ 3 mm (0.08 ~ 0.12 in.)

- If there is improper play, adjust it.

Throttle Grip Free Play Adjustment

- Loosen the locknuts at the upper ends of the throttle cables, and screw both throttle cable adjusters completely so as to give the throttle grip plenty of play.
- Turn the decelerator cable adjuster until there is no play when the throttle grip is completely closed. Tighten the locknut.

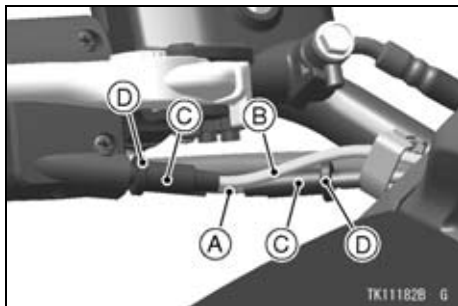

- A. Accelerator Cable
- B. Decelerator Cable
- C. Adjusters
- D. Locknuts

- Turn the accelerator cable adjuster until 2 ~ 3 mm (0.08 ~ 0.12 in.) of throttle grip play is obtained. Tighten the locknut.
- If the throttle cables cannot be adjusted with the adjuster at the upper end of the throttle cable, further adjustment of the throttle cables should

be done by an authorized Kawasaki dealer.

- With the engine idling, turn the handlebars to each side. If handlebars movement changes the idle speed, the throttle cables may be improperly adjusted or incorrectly routed, or they may be damaged. Be sure to correct any of these conditions before riding.

WARNING

Operation with improperly adjusted, incorrectly routed, or damaged cables could result in an unsafe riding condition. Be sure the control cables are adjusted and routed correctly, and are free from damage.

Idle Speed

Idle Speed Adjustment

- Start the engine, and warm it up thoroughly.
- Adjust the idle speed by turning the idle adjusting screw.

NOTE

- *While the engine is cold, the fast idle system automatically raises the engine idling speed.*

Idle Speed

1 050 ~ 1 150 r/min (rpm)



A. Idle Adjusting Screw

- Open and close the throttle a few times to make sure that the idle speed does not change. Readjust if necessary.
- With the engine idling, turn the handlebars to each side. If handlebars movement changes the idle speed, the throttle cables may be improperly adjusted or incorrectly routed, or they may be damaged. Be sure to correct any of these conditions before riding.

⚠ WARNING

Operation with damaged cables could result in an unsafe riding condition. Replace damaged control cables before operation.


Clutch

Clutch Operation Inspection

- Check that the clutch lever operates properly and that the inner cable slides smoothly. If there is any irregularity, have the clutch cable checked by an authorized Kawasaki dealer.
- Check the clutch lever free play.

Clutch Lever Free Play

2 ~ 3 mm (0.08 ~ 0.12 in.)

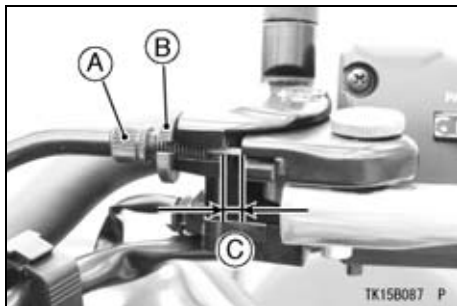

- A. Adjuster
- B. Locknut
- C. Clutch Lever Free Play

- If the free play is incorrect, adjust the clutch lever free play as follows.

Clutch Lever Free Play Adjustment

- Turn the adjuster so that the clutch lever will have the specified free play.

⚠ WARNING

Excess clutch lever free play could prevent clutch disengagement and cause a crash resulting in serious injury or death. When adjusting the clutch lever free play, be sure the upper end of the clutch outer cable is fully seated in its fitting so that it doesn't slip into place later and create excessive free play.

- If it cannot be done, have the clutch cable adjusted by an authorized Kawasaki dealer.


Drive Chain

Drive Chain Lubrication

Lubrication is necessary after riding through rain or on wet roads, or any time that the chain appears dry.

Use a lubricant for sealed chains to prevent deterioration of chain seals. If the chain is especially dirty, clean it using a cleaner for sealed chains following the instructions supplied by the chain cleaner manufacturer.

- Apply lubricant to the sides of the rollers so that it will penetrate to the rollers and bushings. Apply lubricant to the seals so that the seals will be coated with lubricant. Wipe off any excess lubricant.

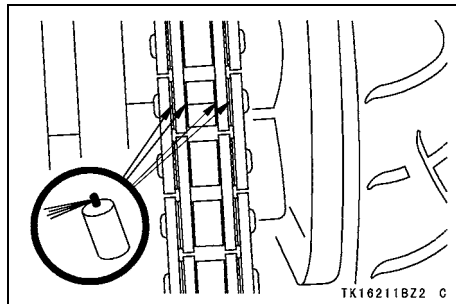


134 MAINTENANCE AND ADJUSTMENT

- Wipe off any lubricant that gets on the tire surface.

Drive Chain Slack Inspection

- Set the motorcycle up on its side stand.
- Clean the chain if it is dirty, and lubricate it if it appears dry.
- Rotate the rear wheel to find the position where the chain is tightest, and measure the maximum chain slack by pulling up and pushing down the chain midway between the engine sprocket and rear wheel sprocket.

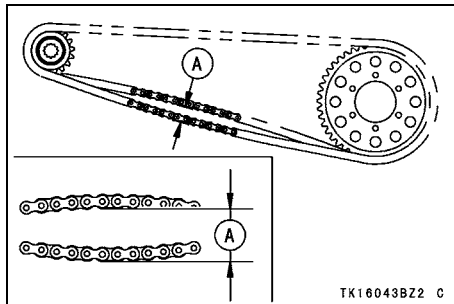

A. Chain Slack

- If the drive chain is too tight or too loose, adjust it so that the chain slack is within the standard value.


Drive Chain Slack

Standard: 25 ~ 35 mm (1.0 ~ 1.4 in.)

Drive Chain Slack Adjustment


- Loosen the left and right chain adjuster locknuts.

- Remove the cotter pin, and loosen the axle nut.

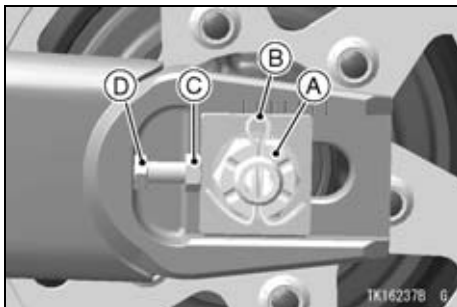

- A. Axle Nut
- B. Cotter Pin
- C. Adjuster
- D. Locknut

- If the chain is too loose, turn out the left and right chain adjusters evenly.
- If the chain is too tight, turn in the left and right chain adjusters evenly.
- Turn both chain adjusters evenly until the drive chain has the correct amount of slack. To keep the chain and wheel properly aligned, the notch on the left wheel alignment indicator should align with the same swingarm mark that the right indicator notch aligns with.

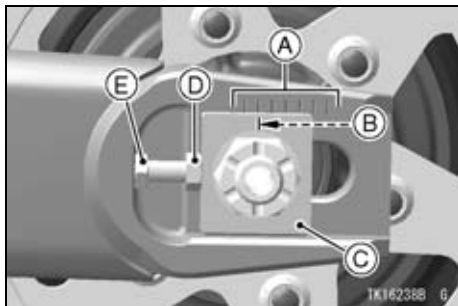

- A. Marks
- B. Notch
- C. Indicator
- D. Adjuster
- E. Locknut

NOTE

- *Wheel alignment can also be checked using the straightedge or string method.*

⚠ WARNING

Misalignment of the wheel will result in abnormal wear, and may result in an unsafe riding condition. Align the rear wheel using the marks on the swingarm or measuring the distance between the center of the axle and swingarm pivot.

- Tighten both chain adjuster locknuts.
- Tighten the axle nut to the specified torque.


Tightening Torque

Axle Nut: 110 N·m (11.2 kgf·m, 81.1 ft·lb)

NOTE

- *If a torque wrench is not available, this item should be serviced by an authorized Kawasaki dealer.*

- Rotate the wheel, measure the chain slack again at the tightest position, and readjust if necessary.
- Install a new cotter pin through the axle nut and axle, and spread its ends.

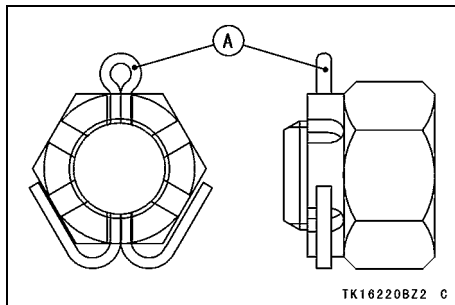


A. Cotter Pin

NOTE

- When inserting the cotter pin, if the slots in the nut do not align with

the cotter pin hole in the axle shaft, tighten the nut clockwise up to the next alignment.

- *It should be within 30 degrees.*
- *Loosen once and tighten again when the slot goes past the nearest hole.*

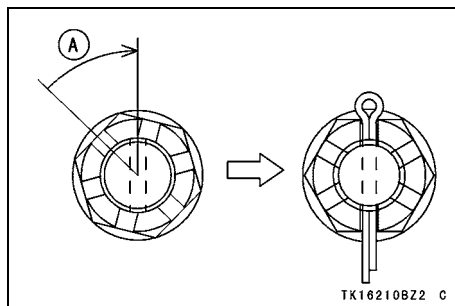

A. Turn Clockwise

 **WARNING**

A loose axle nut can lead to an accident resulting in serious injury or death. Tighten the axle nut to the proper torque and install a new cotter pin.

- Check the rear brake (see the Brakes section).

Brakes


If you feel there is something wrong when applying the brakes, have the brake system checked by an authorized Kawasaki dealer immediately.

 **WARNING**

Air in the brake lines diminish braking performance and can cause an accident resulting in injury or death. If the brake lever or pedal feels mushy when it is applied, there might be air in the brake lines or the brake may be defective. Have the brake checked immediately by an authorized Kawasaki dealer.


Brake Fluid Level Inspection

- With the front brake fluid reservoir held horizontal, the brake fluid level must be above the lower level line.

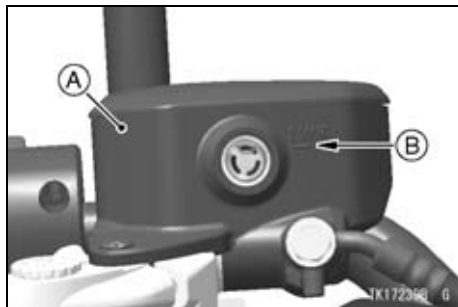

A. Front Brake Fluid Reservoir
B. Lower Level Line

- With the rear brake fluid reservoir held horizontal, the brake fluid level must be kept between the upper and lower level lines.

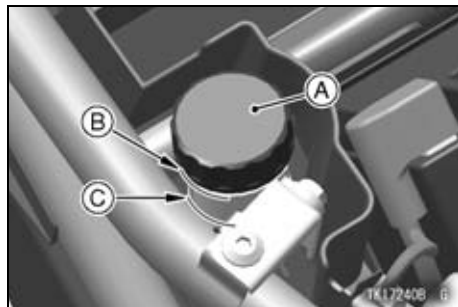

A. Rear Brake Fluid Reservoir
B. Upper Level Line
C. Lower Level Line


- If the fluid level is lower than the lower level line it may indicate that the fluid is leaking. In this case, have the brake system inspected by an authorized Kawasaki dealer.

Brake Pad Wear Inspection


Inspect the brakes for wear. For each front and rear disc brake caliper, if the

140 MAINTENANCE AND ADJUSTMENT

thickness of either pad lining is less than 1 mm (0.04 in.), replace both pads in the caliper as a set. Pad replacement should be done by an authorized Kawasaki dealer.

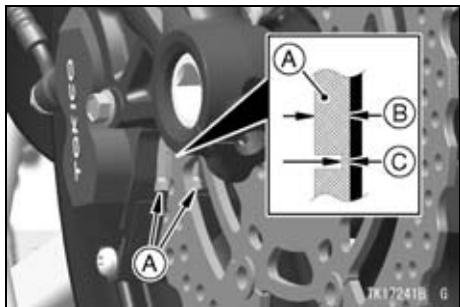

- A. Front Brake Pads
- B. Lining Thickness
- C. 1 mm (0.04 in.)

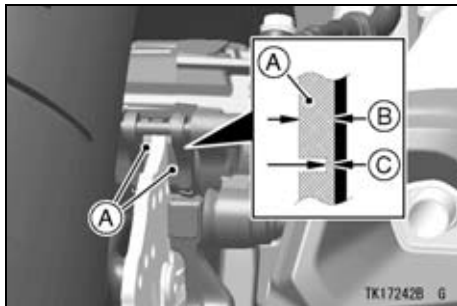


- A. Rear Brake Pads
- B. Lining Thickness
- C. 1 mm (0.04 in.)

Brake Light Switches

Brake Light Switch Inspection

- Turn the ignition switch on.
- The brake light should go on when the front brake is applied.

- If it does not, ask your authorized Kawasaki dealer to inspect the front brake light switch.
- Check the operation of the rear brake light switch by depressing the brake pedal. The brake light should go on after the proper pedal travel.

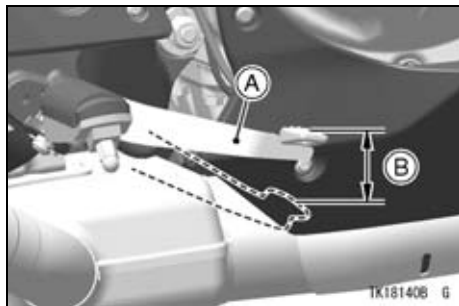

A. Brake Pedal
B. 10 mm (0.39 in.)

- If the light does not come on, adjust the rear brake light switch.

Brake Pedal Travel

10 mm (0.39 in.)

Brake Light Switch Adjustment

- The brake light switch adjustment should be done by an authorized Kawasaki dealer.

Suspension System

Front Fork

NOTICE

After riding on the normal road, the unpaved road and in the rainy weather, clean off any dirt (grit, mud or insect etc.) that stuck to inner tube before it hardens. If the motorcycle keeps running with the dirt stuck to the inner tube, the oil seal will be damaged and it causes the oil leak.

Spring Preload Adjustment

The adjuster is located at the top of each front fork leg.

Standard

14 mm (0.55 in.)


- Turn the adjuster clockwise to increase spring preload and stiffen the suspension.
- Turn the adjuster counterclockwise to decrease spring preload and soften the suspension.

NOTICE

Do not turn the adjuster beyond the fully seated position or the adjusting mechanism may be damaged.

⚠ WARNING

Improper fork leg adjustment can cause poor handling and loss of stability, which could lead to an accident. Always adjust the fork legs on the left and right side to the same setting.

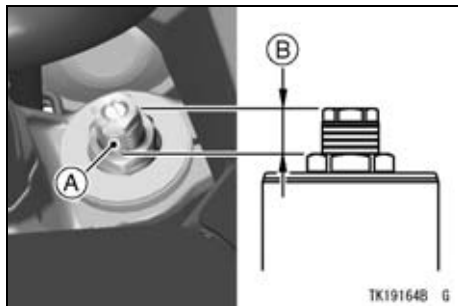

A. Spring Preload Adjuster
B. Adjuster Position

Rebound Damping Force Adjustment (Right Front Fork only)

The adjuster is located at the top of right front fork leg.

Standard

7 clicks


Out from the fully seated position (turned fully clockwise).

- Turn the adjuster clockwise with a flat tip screwdriver to increase damping force.
- Turn the adjuster counterclockwise to decrease damping force.

NOTICE

Do not turn the adjuster beyond the fully seated position or the adjusting mechanism may be damaged.

144 MAINTENANCE AND ADJUSTMENT

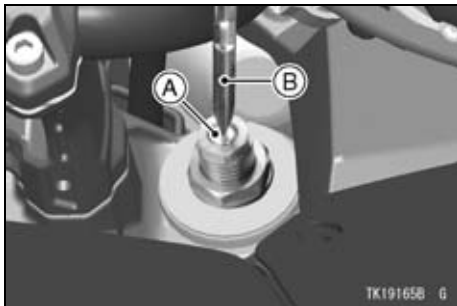

A. Rebound Damping Force Adjuster
B. Screwdriver

Rear Shock Absorber

Spring Preload Adjustment

The adjuster is located on the right rear footpeg bracket.

Standard

2 clicks

In from the fully seated position (turned fully counterclockwise).

- Turn the adjuster clockwise to increase spring preload.
- Turn the adjuster counterclockwise to decrease spring preload.

NOTICE

Do not turn the adjuster beyond the fully seated position or the adjusting mechanism may be damaged.



A. Spring Preload Adjuster

Rebound Damping Force Adjustment

The adjuster is located at the lower end of the rear shock absorber.

Standard

1 1/4 turns out


Out from the fully seated position (turned fully clockwise).

- Turn the adjuster clockwise with a flat tip screwdriver to increase damping force.
- Turn the adjuster counterclockwise to decrease damping force.

NOTICE

Do not turn the adjuster beyond the fully seated position or the adjusting mechanism may be damaged.

146 MAINTENANCE AND ADJUSTMENT

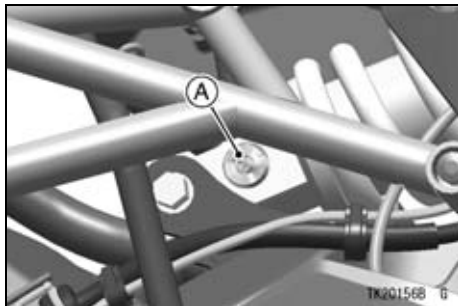

A. Rebound Damping Force Adjuster

Setting Tables

Front Fork Spring Preload Setting

| | Softest setting limit | Standard | Hardest setting limit |
|-------------------|-----------------------|-------------------------|-----------------------|
| Adjuster Position | 19 mm (0.75 in.)* | 14 mm (0.55 in.) | 4 mm (0.16 in.)* |
| Spring Action | Weak | ←→ | Strong |
| Setting | Soft | ←→ | Hard |
| Load | Light | ←→ | Heavy |
| Road | Good | ←→ | Bad |
| Speed | Low | ←→ | High |

*: This adjustment range may not exactly match the number shown in the table due to small tolerance of production.



WARNING

Improper fork leg adjustment can cause poor handling and loss of stability, which could lead to an accident. Always adjust the fork legs on the left and right side to the same setting.

148 MAINTENANCE AND ADJUSTMENT

Front Fork Damping Force Settings (Right Front Fork only)

| | | Softest setting limit | Standard | Hardest setting limit |
|--------------------|---------|-----------------------|-------------------|-----------------------|
| Adjuster Position: | Rebound | 12** | 7 clicks** | 0* |
| Damping Force | | Weak | ←→ | Strong |
| Setting | | Soft | ←→ | Hard |
| Load | | Light | ←→ | Heavy |
| Road | | Good | ←→ | Bad |
| Speed | | Low | ←→ | High |

*: This position is the fully seated position (turned fully clockwise).

** : Out from the fully seated position (turned fully clockwise). This adjustment range may not exactly match the number shown in the table due to small tolerance of production.

Rear Shock Absorber Spring Preload Setting

| | Softest setting limit | Standard | Hardest setting limit |
|-------------------|-----------------------|-------------------|-----------------------|
| Adjuster Position | 0* | 2 clicks** | 24 clicks** |
| Spring Action | Weak | ←→ | Strong |
| Setting | Soft | ←→ | Hard |
| Load | Light | ←→ | Heavy |
| Road | Good | ←→ | Bad |
| Speed | Low | ←→ | High |

*: This position is the fully seated position (turned fully counterclockwise).

** : In from the fully seated position (turned fully counterclockwise). This adjustment range may not exactly match the number shown in the table due to small tolerance of production.

150 MAINTENANCE AND ADJUSTMENT

Rear Shock Absorber Damping Force Settings

| | | Softest setting limit | Standard | Hardest setting limit |
|--------------------|---------|-----------------------|--------------------------|-----------------------|
| Adjuster Position: | Rebound | 3 3/4 turns out** | 1 1/4 turns out** | 0* |
| Damping Force | | Weak | ←→ | Strong |
| Setting | | Soft | ←→ | Hard |
| Load | | Light | ←→ | Heavy |
| Road | | Good | ←→ | Bad |
| Speed | | Low | ←→ | High |

*: This position is the fully seated position (turned fully clockwise).

** : Out from the fully seated position (turned fully clockwise). This adjustment range may not exactly match the number shown in the table due to small tolerance of production.


Wheels

Tire Pressure Inspection

- Remove the air valve cap.
- Check the tire pressure often, using an accurate gauge.
- Make sure to install the air valve cap securely.

NOTE

- *Measure the tire pressure when the tires are cold (that is, when the motorcycle has not been ridden more than a mile during the past 3 hours).*
- *Tire pressure is affected by changes in ambient temperature and altitude, and so the tire pressure should be checked and adjusted when your riding involves wide variations in temperature or altitude.*

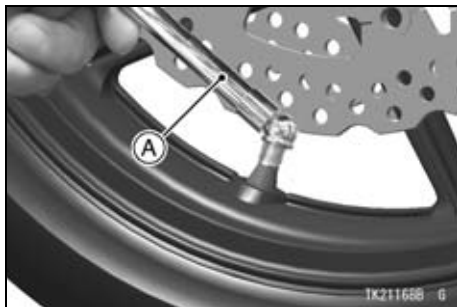

A. Tire Pressure Gauge

Tire Air Pressure (when cold)

| | |
|-------|---|
| Front | 250 kPa (2.50 kgf/cm ² , 36 psi) |
| Rear | 290 kPa (2.90 kgf/cm ² , 42 psi) |

Tire Wear, Damage

As the tire tread wears down, the tire becomes more susceptible to puncture and failure. An accepted estimate is that 90% of all tire failures occur during the last 10% of tread life (90% worn).

152 MAINTENANCE AND ADJUSTMENT

So it is false economy and unsafe to use the tires until they are bald.

Tire Wear Inspection

- Measure the depth of the tread with a depth gauge, and replace any tire that has worn down to the minimum allowable tread depth.




A. Tire Depth Gauge

Minimum Tread Depth

| | | |
|-------|----------------------------|-----------------|
| Front | — | 1 mm (0.04 in.) |
| Rear | Under 130 km/h (80 mph) | 2 mm (0.08 in.) |
| | Over 130 km/h (80 mph) | 3 mm (0.12 in.) |

- Visually inspect the tire for cracks and cuts, replacing the tire in case of bad damage. Swelling or high spots indicate internal damage, requiring tire replacement.

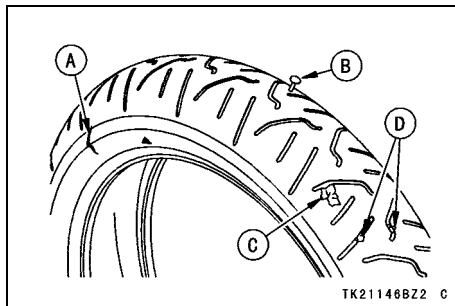

- A. Crack or Cut
- B. Nail
- C. Swelling or High Spot
- D. Stone

- Remove any imbedded stones or other foreign particles from the tread.

NOTE

- *Have the wheel balance inspected whenever a new tire is installed.*

⚠ WARNING

Tires that have been punctured and repaired do not have the same capabilities as undamaged tires and can suddenly fail, causing an accident resulting in serious injury or death. Replace damaged tires as soon as possible. To ensure safe handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure. If it is necessary to ride on a repaired tire, do not exceed 100 km/h (60 mph) until the tire is replaced.

NOTE

- *When operating on public roadways, keep maximum speed under traffic law limits.*

154 MAINTENANCE AND ADJUSTMENT

Standard Tire

| | |
|-------|--|
| Front | Make, Type: BRIDGESTONE, BATTLAX SPORT TOURING T30F F Size: 120/70ZR17 M/C (58W) |
| Rear | Make, Type: BRIDGESTONE, BATTLAX SPORT TOURING T30R F Size: 180/55ZR17 M/C (73W) |

WARNING

Mixing tire brands and types can adversely affect handling and cause an accident resulting in injury or death. Always use the same manufacturer's tires on both front and rear wheels.

WARNING

New tires are slippery and may cause loss of control and injury. A break-in period of 160 km (100 miles) is necessary to establish normal tire traction. During break-in, avoid sudden and maximum braking and acceleration, and hard cornering.

Battery

The battery installed in this motorcycle is a sealed type, so it is not necessary to check the battery electrolyte level or add distilled water.

NOTICE

Never remove the sealing strip, or the battery can be damaged. Do not install a conventional battery in this motorcycle, or the electrical system cannot work properly.

| | |
|------|---------------|
| Make | Yuasa Battery |
| Type | YTX9-BS |

Battery Maintenance

It is the owner's responsibility to keep the battery fully charged. Failure to do so can lead to battery failure and leave you stranded.

If you are riding your vehicle infrequently, inspect the battery voltage weekly using a voltmeter. If it drops below 12.8 volts, the battery should be charged using an appropriate charger (check with your Kawasaki dealer).

If you will not be using the motorcycle for longer than two weeks, the battery should be charged using an appropriate charger. Do not use an automotive-type quick charger that may overcharge the battery and damage it.

NOTE

- *Leaving the battery connected causes the electrical components (clock etc) to make the battery discharged, resulting the over discharge of the battery. In this case, the repair or replacement of the battery is not included in the warranty. If you do not drive for four weeks or more, disconnect the battery from the vehicle.*

Kawasaki-recommended chargers are:

Battery Mate 150-9
 OptiMate 4
 Yuasa MB-2040/2060
 Christie C10122S

If the above chargers are not available, use equivalent one.

For more details, ask your Kawasaki dealer.

Battery Charging

- Charge the battery following the instructions of your battery charger.
- The charger will keep the battery fully charged until you are ready to re-install the battery in the motorcycle (see Battery Installation).

DANGER


- **Battery acid generates hydrogen gas which is flammable and explosive under certain conditions. It is present within a battery at all times, even in a discharged condition. Keep all flames and sparks (cigarettes) away from the battery.**
- **Wear eye protection when working with a battery. In the event of battery acid contact with skin, eyes, or clothing, wash the affected areas immediately with water for at least five minutes. Seek medical attention.**

WARNING

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Battery Removal

- Make sure the ignition switch is turned off.
- Remove the seat. Refer to the Seat section in the GENERAL INFORMATION chapter.
- Disconnect the negative (-) cable from the (-) terminal.
- Slide the red cap from the positive (+) terminal.
- Disconnect the positive (+) cable from the (+) terminal.
- Remove the band.

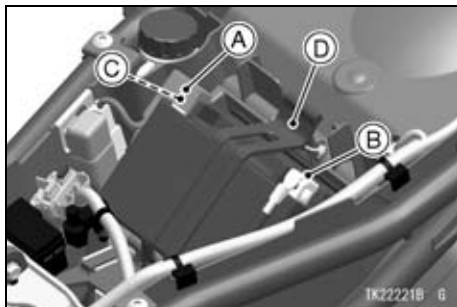

- A. Red Cap
- B. (-) Terminal
- C. (+) Terminal
- D. Band

- Take the battery out of the battery case.
- Clean the battery using a solution of baking soda and water. Be sure that the cable connections are clean.

Battery Installation

- Place the battery on the battery case.

158 MAINTENANCE AND ADJUSTMENT

- Connect the (+) cable to the (+) terminal, and then connect the (–) cable to the (–) terminal.

NOTICE

Installing the (–) cable to the (+) terminal of the battery or the (+) cable to the (–) terminal of the battery can seriously damage the electrical system.

- Put a light coat of grease on the terminals to prevent corrosion.
- Cover the (+) terminal with the red cap.
- Install the removed parts.


Headlight

Headlight aiming should be done by an authorized Kawasaki dealer.

Horizontal Adjustment

The headlight beam is adjustable horizontally. If not properly adjusted horizontally, the beam will point to one side rather than straight ahead.

- Remove the rubber cap and insert the screwdriver.

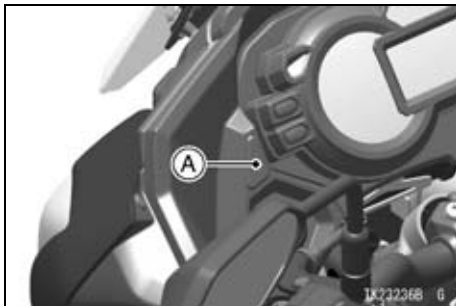


A. Rubber Cap

NOTE

- *The screwdriver of the tool kit cannot reach to the horizontal adjuster.*

- Turn the horizontal adjuster in or out until the beam points straight ahead.

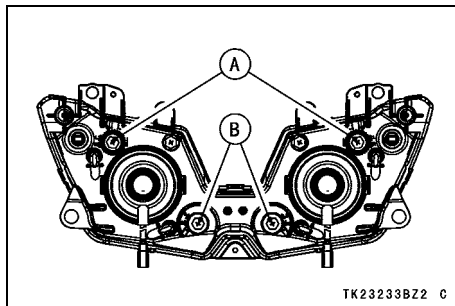

A. Horizontal Adjusters
B. Vertical Adjusters

Vertical Adjustment


The headlight beam is adjustable vertically. If adjusted too low, neither low

nor high beam will illuminate the road far enough ahead. If adjusted too high, the high beam will fail to illuminate the road close ahead, and the low beam will blind oncoming drivers.

- Turn the vertical adjuster in or out to adjust the headlight vertically.

NOTE

- On high beam, the brightest points should be slightly below horizontal. The proper angle is 0.4 degrees below horizontal. This is a 50 mm (2.0 in.) drop at 7.6 m (25 ft) measured from the center of the headlight, with the motorcycle on its wheels and the rider seated.

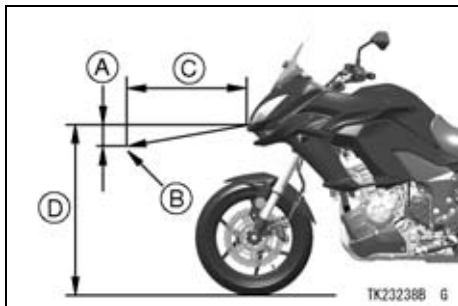

- A. 50 mm (2.0 in.)
- B. Center of Brightest Spot
- C. 7.6 m (25 ft)
- D. Height of Headlight Center


Fuses

Fuses are arranged in the fuse boxes located under the rider's seat. The main fuse is located under the rider's seat. If a fuse fails during operation,

inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage.

If the fuse fails repeatedly, there is something wrong with the electrical system. Have the motorcycle checked by an authorized Kawasaki dealer.


The main fuse removal should be done by an authorized Kawasaki dealer.

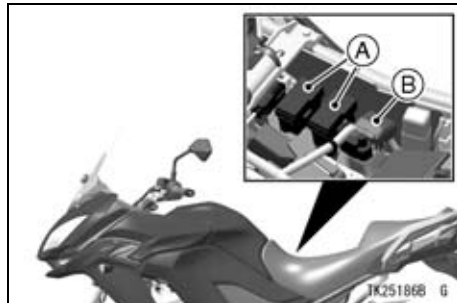


- A. Fuse Boxes
- B. Main Fuse

⚠ WARNING

Substituting fuses can cause wiring to overheat, catch fire and/or fail. Do not use any substitute for the standard fuse. Replace the blown fuse with a new one of the correct capacity, as specified on the fuse boxes and main fuse.

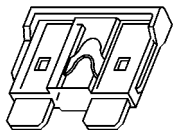

A

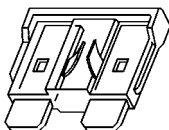

B

TK25007BZ2 C

A. Normal
B. Failed

General Lubrication

Lubricate the points shown below, with either engine oil or regular grease, in accordance with the Periodic Maintenance Chart or whenever the vehicle has been operated under wet or rainy conditions.

Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.

Apply motor oil to the following pivots

- Side Stand
- Clutch Lever
- Front Brake Lever
- Rear Brake Pedal

Lubricate the following cables with a pressure cable luber

- (K) Clutch Inner Cable
- (K) Throttle Inner Cables

Apply grease to the following points

- (K) Clutch Inner Cable Upper End
- (K) Throttle Inner Cable Upper Ends

(K): Should be serviced by an authorized Kawasaki dealer.

NOTE

- *After connecting the cables, adjust them.*

Cleaning

General Precautions

Frequent and proper care of your vehicle will enhance its appearance, optimize overall performance, and extend its useful life. Covering your vehicle with a high quality, breathable vehicle cover will help protect its finish from harmful UV rays, pollutants, and reduce the amount of dust reaching its surfaces.

 **WARNING**

Build-up of debris or flammable material in and around the vehicle chassis, engine, and exhaust can cause mechanical problems and increase the risk of fire. When operating the vehicle in conditions that allow debris or flammable material to collect in and around the vehicle, inspect the engine, electrical component and exhaust areas frequently. If debris or flammable materials have collected, park the vehicle outside and stop the engine. Allow the engine to cool, then remove any collected debris. Do not park or store the vehicle in an enclosed space prior to inspecting for build-up of debris or flammable materials.

- Be sure the engine and exhaust are cool before washing.
- When washing the vehicle, always use a mild neutral detergent and water.
- Avoid applying all harsh chemicals, solvents, degreaser, oil remover, electrical contact cleaner, and household cleaning products such as ammonia-based window cleaners. They will damage or deteriorate painted parts, plastic parts, rubber parts and other synthetic parts including covers and headlight lens.
- Avoid applying degreaser to seals, brake pads, and tires.
- Gasoline, brake fluid, and coolant will damage the finish of painted and plastic surfaces: wash them off immediately.
- Avoid wire brushes, steel wool, and all other abrasive pads or brushes.

- Take care when washing the headlight lens and other plastic parts as they can easily be scratched.

NOTE

- *After riding in an area where the roads are salted or near the ocean, immediately wash your vehicle with cold water. Do not use warm water as it accelerates the chemical reaction of the salt. After drying, apply a corrosion protection spray on all metal and chrome surfaces to prevent corrosion.*
- *Condensation may form on the inside of the headlight lens after riding in the rain, washing the vehicle or in humid weather. To remove the moisture, start the engine and turn on the headlight. Gradually the condensation on the inside of the lens will clear off.*

Radiator

Clean off any obstructions with a stream of low-pressure water.

NOTICE

Using high-pressure water, as from a car wash facility, could damage the radiator fins and impair the radiator's effectiveness. Do not obstruct or deflect airflow through the radiator by installing unauthorized accessories in front of the radiator or behind the cooling fan. Interference with the radiator airflow can lead to overheating and consequent engine damage.

Matte Paint Parts

- When washing the vehicle, always use a mild neutral detergent and water, or cleaners for matte paint.

- The matte paint effect may be lost when the paint is excessively rubbed.
- If any doubt, consult an authorized Kawasaki dealer.

Plastic Parts

After washing, use a soft cloth to gently dry plastic parts. When dry, treat the headlight lens and other non painted plastic parts with an approved plastic cleaner/polisher product.

NOTICE

Plastic parts may deteriorate and break if they come in contact with chemical substances or household cleaning products such as gasoline, brake fluid, window cleaners, thread-locking agents, or other harsh chemicals. If a plastic part comes in contact with any harsh chemical substance, wash it off immediately with water and a mild neutral detergent, and then inspect for damage. Avoid using abrasive pads or brushes to clean plastic parts, as they will damage the part's finish.

Chrome and Aluminum

Chrome and uncoated aluminum parts can be treated with a chrome/aluminum polish. Coated aluminum

should be washed with a mild neutral detergent and finished with a spray polish. Aluminum wheels, both painted and unpainted can be cleaned with special non-acid based wheel spray cleaners.

Leather, Vinyl, and Rubber

If your vehicle has leather accessories, special care must be taken. Use a leather cleaner/treatment to clean and care for leather accessories. Washing leather parts with detergent and water will damage them, shortening their life.

Vinyl parts should be washed with the rest of the vehicle, then treated with a vinyl treatment.

The sidewalls of tires and other rubber components should be treated with a rubber protectant to help prolong their useful life.

Where to be Careful

Avoid spraying water with any great force near the following places.

- Disc brake master cylinder and caliper.
- Under the seat - if water gets into the fuse box or battery, it can ground out the spark. When this happens the vehicle will not operate properly and the affected parts must be wiped dry.

NOTICE

Coin operated, high pressure spray washers are not recommended. Water may be forced into bearings and other components causing eventual failure from rust and corrosion. Some soaps are highly alkaline and may leave a residue or cause spotting.

NOTE

- *Abrasive cleanser or high pressure washer will damage the surface finish on the bodywork.*

Washing Your Vehicle

- Before washing, precautions must be taken to keep water off the following parts.

Muffler rear opening - cover with a plastic bag.

Ignition switch - cover the keyhole with tape.

- Rinse your vehicle with cold water from a garden hose to remove any loose dirt.
- Mix a mild neutral detergent (designed for motorcycles or automobiles) and water in a bucket. Use a soft cloth or sponge to wash your vehicle.
- After washing, rinse your vehicle thoroughly with clean water to remove any residue (residue from the detergent can damage parts of your vehicle).
- Remove the plastic bag and tape.
- Use a soft cloth to dry your vehicle. As you dry, inspect your vehicle for chips and scratches. Do not let the water air dry as this can damage the painted surfaces.

168 MAINTENANCE AND ADJUSTMENT

- Carefully ride your vehicle at a slow speed and apply the brakes several times. This helps dry the brakes

and restores them to normal operating performance.

APPENDIX

Storage

Whenever your motorcycle will not be in use for a long period, proper storage is essential.

It consists of checking and replacing missing or worn parts; lubricating parts to ensure that they do not corrode and, in general, preparing the motorcycle so that when the time comes to use it again, it will be in top condition.

See your authorized Kawasaki dealer for this service or do the following.

Preparation for Storage

Make sure the area is well ventilated and free from any source of flame.

DANGER

Exhaust gas contains carbon monoxide, a colorless, odorless poisonous gas. Inhaling carbon monoxide can cause serious brain injury or death. DO NOT run the engine in enclosed areas. Operate only in a well-ventilated area.

**WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns.

- Turn the ignition key off.
- Do not smoke.
- Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

**WARNING**

Gasoline is a toxic substance. Dispose of gasoline properly. Contact your local authorities for approved disposal methods.

- Clean the entire vehicle thoroughly.
- Run the engine for about five minutes to warm the oil, shut it off, and drain the engine oil. (see Engine Oil section in the MAINTENANCE AND ADJUSTMENT chapter)

 **WARNING**

Engine oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.

- Put in fresh engine oil.
- Empty the fuel from the fuel tank using a pump or syphon.
- Remove the spark plugs and add fogging oil into the combustion chambers. If the spark plugs cannot be removed, take the motorcycle to an authorized Kawasaki dealer.
- Set the motorcycle on a stand so that both wheels are raised off the ground. (If this cannot be done, put boards under the front and rear wheels to keep dampness away from the tire rubber.)
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or in the brakes.
- Lubricate the drive chain and all the cables.
- Remove the battery, and store it where it will not be exposed to direct sunlight, moisture, or freezing temperatures. During storage it should be given a slow charge (one ampere or less) about once a month. Keep the battery well charged especially during cold weather.
- Tie plastic bag over the muffler to prevent moisture from entering.
- Put a cover over the motorcycle to keep dust and dirt from collecting on it.

Preparation after Storage

- Remove the plastic bag from the muffler.
- Charge the battery if necessary and install the battery in the motorcycle.
- Fill the fuel tank with fresh fuel.
- Check all the points listed in the Daily Checks section.
- Lubricate the pivots, bolts, and nuts.

Troubleshooting Guide

If a Problem Occurs

Performing daily checks and periodic maintenance prevents unexpected troubles from occurring. In case of a breakdown, take emergency measures and contact your Kawasaki dealer to request repair. For safety, inspection and maintenance should be done within your knowledge and ability. If you are not confident in completing an inspection or maintenance, ask an authorized Kawasaki dealer to do the work.

 **WARNING**

- When carrying out an inspection, follow the precautions below.
- Secure a place where you can work in safety without obstructing traffic around you. Do not carry out any inspection unless it is safe.
- Support the motorcycle on a firm, level surface with the stand.
- The engine and muffler will become hot during operation. To avoid burns etc., do not touch the hot engine or muffler just after the engine has stopped.
- Exhaust gas contains harmful substances such as carbon monoxide. Do not run the engine in an enclosed garage or poorly ventilated area.
- Wait until the engine cools down before carrying out inspection and maintenance or replenishing fuel. Make sure the area is well ventilated and free from any source of flame or sparks. Do not place any appliance with a pilot light nearby.
- If a test ride is needed, ride in a safe area and pay close attention to traffic around you.

When any of warning indicators go on or blink, have the motorcycle inspected by an authorized Kawasaki dealer immediately.



If the Engine Does Not Start

When the engine turns over but the engine does not start, inspect as follows.

- Check the fuel level in the fuel tank. If only a small quantity of fuel remains in the bottom, replenish the fuel tank. (Fuel in the tank cannot be completely consumed.)
- Leaving the motorcycle unused for a long time may cause fuel in the tank to deteriorate. In that case, ask an authorized Kawasaki dealer for inspection.
- When the engine warning indicator on the meter goes on and stays on, there may be a problem with the fuel injection system. Ask an authorized Kawasaki dealer for inspection and maintenance.
- The motorcycle is equipped with a vehicle-down sensor which stops the engine automatically when the motorcycle falls down. When the starter button is pressed after the motorcycle has fallen down, the engine does not start. To start the engine, switch the ignition key to the "OFF" position and then back to the "ON" position.

If the engine will not start after completing the above inspection and maintenance, there may be something wrong with another system such as the ignition system. Ask an authorized Kawasaki dealer for inspection and maintenance.

When the starter motor does not rotate, inspect as follows.

- Check the position of the engine stop switch. Push the engine stop switch in the  position if it is in the  position.
- Make sure that the gear position is in the neutral position. If not, shift the transmission into neutral.

- Inspect the fuse condition. If any fuse has blown, replace it with a new one of the same amperage.

 **WARNING**

Substituting fuses can cause wiring to overheat, catch fire and/or fail. Use only standard fuses of the correct capacity and specifications.

- Check the battery cable connections etc. (see page 157). If necessary, tighten the connecting bolts to securely connect them.
- In case of slow blinking of the turn signal lights, low volume of the horn sound, or when you press the starter button and hear a click but the starter motor does not rotate, battery charging status is not good. Refresh the battery's charge (see page 156) and check if the starter motor rotates.
- Even after a refresh charge, if the starter motor stops rotating the engine properly the battery may have deteriorated. Have the battery inspected by an authorized Kawasaki dealer.

If the starter motor will not start after completing the above inspection and maintenance, there may be something wrong with another part such as the starter motor. Ask an authorized Kawasaki dealer for inspection and maintenance.

If the Engine Stalls or Runs Poorly

- Check the fuel level in the fuel tank. If only a small quantity of fuel remains, replenish the fuel tank. (Fuel in the tank cannot be completely consumed.)
- Raise the side stand fully up before starting the engine. (If you try to move off with the side stand is still down, the engine will stop.)
- Make sure that correct fuel is used. If not, replace the fuel the correct type (see page 70).
- Due to too much play in the clutch lever, the clutch may not disengage. If there is any problem, adjust the clutch lever free play correctly.
- In case of slow blinking of the turn signal lights, low volume of the horn sound, or when you press the starter button and hear a click but the starter motor does not rotate, the battery is discharged. Check the connections of the battery terminals for looseness (see page 157). If necessary, tighten the bolts to remove the looseness. If the above methods cannot solve the problems, ask an authorized Kawasaki dealer for inspection and maintenance.
- If the warning indicator goes on and coolant temperature warning indicator is displayed, the engine may have overheated. Check the coolant level in the reserve tank after the engine cools down. If the coolant quantity is less than the lower level, replenish the coolant or soft water up to the upper level (see page 122). Ask an authorized Kawasaki dealer to identify the cause of the overheat immediately.

- When the engine warning indicator on the meter goes on and stays on, there is something wrong with the fuel injection system. Ask an authorized Kawasaki dealer for inspection and maintenance.

If the engine stalls after completing the above inspection and maintenance, there may be something wrong with other system. Ask an authorized Kawasaki dealer for inspection and maintenance.

Your Warranty/Owner Satisfaction

Welcome to the Kawasaki family!

Congratulations on buying your Kawasaki vehicle. You've chosen a great, high-quality product with state-of-the-art features and built to Kawasaki's high standards. Your satisfaction is important to your authorized Kawasaki dealer and to Kawasaki Motors Corp., U.S.A. Here is some important information regarding your vehicle's limited warranty.

Frequently Asked Questions

What is a Limited Warranty?

The most important thing to know about your warranty is that it protects you from manufacturing defects in material or workmanship during the warranty period. You can find the warranty period in the Kawasaki Limited Warranty Certificate your Kawasaki dealer provided to you at the time of sale. The warranty does not

cover the cost of regularly-scheduled maintenance. The warranty also does not apply to the normal wear of items such as tires, brake pads, transmission drive belts, chains, sprockets, etc.

What is the Kawasaki Protection Plus?

Much of the warranty coverage offered by the limited warranty can be extended by purchasing the Kawasaki Protection Plus (KPP). See your Kawasaki dealer or go to Kawasaki.com for more information if you don't already have the KPP.

What Am I Responsible For?

You are responsible for maintaining your vehicle according to the maintenance schedule shown in this owner's manual.

You are responsible for notifying your dealer immediately if there is a problem, and you, as the owner, will need to authorize the dealer to inspect the unit.

You will be responsible for paying for routine maintenance, including the first scheduled service. You can have the required servicing done by your Kawasaki dealer (recommended) or an equally-qualified service facility. You can also do your own maintenance work if you have the proper tools, service references, and mechanical skills. However, if a failure is found to be caused by improper servicing, it would not be covered by the limited warranty.

You may purchase a Kawasaki Service Manual and any necessary special tools directly from your Kawasaki dealer.

You will be responsible for paying for repairs needed because of an accident, to replace worn parts such as tires, chains, brakes, and for repairs needed because of a lack of maintenance, misuse or racing.

Whether you do it yourself or take your vehicle to a Kawasaki dealer, be sure to record your service in the Maintenance Record section of this Owner's Manual. Keep all receipts for the service and/or items necessary to perform the maintenance so that in the event of a failure you can document the service history.

What Are The Dealership's Responsibilities?

Your Kawasaki dealer offers a wide range of services, parts, accessories, and information on your product and on Kawasaki.

Each dealer is independently owned and operated and is responsible for the dealership's operations, its repair, warranty, and service work, and its personnel.

Your dealer is responsible for completing the set up and pre-delivery service of your new Kawasaki vehicle. The dealership should also explain its operation, maintenance, and warranty provisions so you understand them at the time of purchase or at any other time you have questions.

The dealership is responsible for inspecting your Kawasaki vehicle if there is a failure, investigating the cause of the problem, and getting any needed authorization from Kawasaki if the repair is one that will be covered by the limited warranty. The dealership will also file all necessary paperwork. The dealership is responsible for correctly completing any necessary repairs, whether they are covered by the limited warranty or not.

How Do I Get Warranty Service?

If there is a problem with your vehicle within the limited warranty period, you will need to schedule a service appointment and provide any maintenance records to an authorized Kawasaki dealer for inspection and diagnosis. You can go to any Kawasaki dealer for warranty repairs. Your Kawasaki dealer will inspect your vehicle and give you the results of the inspection. The dealer will perform the repairs at no cost to you if it is determined that the problem is covered by the warranty.

Kawasaki will work with your dealer to resolve any warranty issues. No authorization for warranty work can be given until your vehicle has been inspected by a Kawasaki dealer.

What if I am not Satisfied With My Warranty Service?

If you aren't satisfied with your dealership's repair work or operations, it is best to discuss the situation with the appropriate dealership manager. If you have already done this, then contact the dealership's owner or general manager to request a review of the issue.

If you are unable to resolve a problem after consulting with the dealership management and need further assistance, contact Kawasaki Motors Corp., U.S.A. at the address below. Please be certain to provide the model, vehicle identification number (VIN), mileage or hours of use, accessories, dates that events occurred and what action has been taken by both you and your dealer. Include the name and address of the dealership. To assist us in resolving your inquiry, please include copies of related receipts and any other pertinent information including the name of the dealership personnel with whom you have been working. Upon receipt of your correspondence, Kawasaki Motors Corp., U.S.A. will contact the dealership and work with it in resolving your problem.

Want to Contact Kawasaki?

This owner's manual should answer most of your questions about your Kawasaki. Your Kawasaki dealer should either be able to answer any other questions you might have immediately or be able to find the answer for you.

Please send your correspondence to:

Consumer Services

Kawasaki Motors Corp., U.S.A.

P.O. Box 25252

Santa Ana, CA 92799-5252

(949) 460-5688

Reporting Safety Defects

(For Products Sold in the United States of America, District of Columbia, and U.S. Territories Only)

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Kawasaki Motors Corporation, U.S.A.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Kawasaki Motors Corporation, U.S.A.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

Environmental Protection

To help preserve the environment, properly discard used batteries, tires, oils and fluids, or other vehicle components that you might dispose of in the future. Consult your authorized Kawasaki dealer or local environmental waste agency for their proper disposal procedure. This also applies to disposal of the entire vehicle at the end of its life.

MAINTENANCE RECORD

Owner Name.....

Address

Phone Number

Engine Number

Vehicle Number.....

Key Code

Selling Dealer Name

Phone Number

Warranty Start Date

Note: Keep this information and a spare key in a secure location.

| Date | Odometer Reading | Maintenance Performed | Dealer Name | Dealer Address |
|------|------------------|-----------------------|-------------|----------------|
| | | | | |
| | | | | |

KLZ1000BJ



Kawasaki Heavy Industries, Ltd. Motorcycle & Engine Company

Printed in Japan

GB