

This manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is resold.

This publication includes the latest production information available before printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

The vehicle pictured in this owner's manual may not match your actual vehicle.

Welcome

Congratulations on your purchase of a new Honda vehicle. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the vehicle.

- The following codes in this manual indicate the country.
- The illustrations here in are based on the NT1100D ED type.

Country Codes

Code	Country
NT1100A	
ED	European direct sales, France, Turkey
NT1100D	
ED	European direct sales, France, Turkey

A Few Words About Safety

Your safety, and the safety of others, is very important. Operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a vehicle. You must use your own good judgement.

You will find important safety information in a variety of forms, including:

- Safety labels on the vehicle
- Safety Messages preceded by a safety alert symbol  and one of three signal words: DANGER, WARNING, or CAUTION.

These signal words mean:

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION

You **CAN** be **HURT** if you don't follow instructions.

Other important information is provided under the following titles:

NOTICE Information to help you avoid damage to your vehicle, other property, or the environment.

Contents

Vehicle Safety P. 2

Operation Guide P. 20

Maintenance P. 226

Troubleshooting P. 264

Information P. 295

Specifications P. 315

Index P. 318

Vehicle Safety

This section contains important information for safe riding of your vehicle.
Please read this section carefully.

Safety Guidelines	P. 3
Image Labels	P. 7
Safety Precautions	P. 12
Riding Precautions	P. 13
Accessories & Modifications	P. 18
Loading	P. 19

Safety Guidelines

Safety Guidelines

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flames away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

Always Wear a Helmet

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. So always wear an approved helmet and protective apparel. 📖 P. 12

Before Riding

Make sure that you are physically fit, mentally focused and free of alcohol and drugs. Check that you and your passenger are both wearing an approved helmet and protective apparel. Instruct your passenger on holding onto the grab rail or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the vehicle is stopped.

Take Time to Learn & Practice

Even if you have ridden other vehicles, practice riding in a safe area to become familiar with how this vehicle works and handles, and to become accustomed to the vehicle's size and weight.

Ride Defensively

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

Safety Guidelines

Vehicle Safety

Make Yourself Easy to See

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

Ride within Your Limits

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgement and ride safely.

Don't Drink or Use Drugs and Ride

Alcohol or drugs and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. The same is true for drug use. Don't drink or use and ride, and don't let your friends do it either.

Keep Your Honda in Safe Condition

It's important to keep your vehicle properly maintained and in safe riding condition. Inspect your vehicle before every ride and perform all recommended maintenance. Never exceed load limits (➤ P. 19), and do not modify your vehicle or install accessories that would make your vehicle unsafe (➤ P. 18).

Safety Guidelines

If You are Involved in a Crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first turn the ignition switch to the **○** (Off) position, and evaluate the condition of your vehicle. Inspect for fluid leaks, check the tightness of critical nuts and bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously.

Your vehicle may have suffered damage that is not immediately apparent. Have your vehicle thoroughly checked at a qualified service facility as soon as possible.

Vehicle Safety

Safety Guidelines

Vehicle Safety

Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colourless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide.

Never run your vehicle inside a garage or other enclosure.

WARNING

Running the engine of your vehicle while in an enclosed or even partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.

Breathing this colourless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your vehicle's engine when it is located in a well ventilated area outdoors.

Image Labels

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read instructions contained in Owner's Manual carefully.



Read instructions contained in Shop Manual carefully. In the interest of safety, take the vehicle to be serviced only by your dealer.



DANGER (with RED background)

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING (with ORANGE background)

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION (with YELLOW background)

You **CAN** be **HURT** if you don't follow instructions.

Image Labels



BATTERY LABEL DANGER

- Keep flame and spark away from the battery. Battery produce explosive gas that can cause explosion.
- Wear the eye protection and rubber gloves when handling the battery, or you can get burned or lose your eyesight by the battery electrolyte.
- Do not allow children and other people to touch a battery unless they understand proper handling and hazards of the battery very well.
- Handle the battery electrolyte with extreme care as it contains dilute sulfuric acid. Contact with your skin or eyes can burn you or cause loss of your eyesight.
- Read this manual carefully and understand it before handling the battery. Neglect of the instructions can cause personal injury and damage to the vehicle.
- Do not use a battery with the electrolyte at or below the lower level mark. It can explode causing serious injury.

Image Labels



RADIATOR CAP LABEL

DANGER

NEVER OPEN WHEN HOT.

Hot coolant will scald you.

Relief pressure valve begins to open at **1.1 kgf/cm²**.

Vehicle Safety

Image Labels

Vehicle Safety



ACCESSORIES AND LOADING WARNING

ACCESSORIES AND LOADING

- The safety stability and handling of this vehicle may be affected by the addition of accessories and luggage.
- Read carefully the instructions contained in user's manual and installation guide before installing any accessory.
- The total weight of accessories and luggage added to rider's and passenger's weight should not exceed **194 kg (428 lb)**, which is the maximum weight capacity.
- The luggage weight must not exceed **21 kg (46 lb)** under any circumstances.
- The fitting of large fork-mounted or large handlebar mounted fairing is not recommended.



REAR CUSHION LABEL

GAS FILLED

Do not open. Do not heat.

Image Labels

Vehicle Safety

TYRE INFORMATION & DRIVE CHAIN LABEL

Cold tyre pressure:

 
[Driver only]

Front **250 kPa (2.50 kgf/cm², 36 psi)**Rear **290 kPa (2.90 kgf/cm², 42 psi)**

[Driver and passenger]

Front **250 kPa (2.50 kgf/cm², 36 psi)**Rear **290 kPa (2.90 kgf/cm², 42 psi)**

Keep chain adjusted and lubricated.

Freeplay **70 - 75 mm (2.8 - 3.0 in)****SAFETY REMINDER LABEL**

For your protection, always wear helmet, protective apparel.

FUEL LABEL

Unleaded petrol only

ETHANOL up to 10 % by volume

**REAR CARRIER LABEL**Do not exceed **10 kg (22 lb)**.

Safety Precautions

Vehicle Safety

Safety Precautions

- Ride cautiously and keep your hands on the handlebar and feet on the footpegs.
- Keep passenger's hands onto the grab rail or your waist, passenger's feet on the footpegs while riding.
- Always consider the safety of your passenger, as well as other drivers and riders.

Protective Apparel

Make sure that you and any passenger are wearing an approved helmet, eye protection, and high-visibility protective clothing. Avoid wearing loose clothes that could get caught on any part of the vehicle. Ride defensively in response to weather and road conditions.

■ **Helmet**

Safety-standard certified, high-visibility, correct size for your head

- Must fit comfortably but securely, with the chin strap fastened.

- Face shield with unobstructed field of vision or other approved eye protection

⚠ WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

■ **Gloves**

Full-finger leather gloves with high abrasion resistance

■ **Boots or Riding Shoes**

Sturdy boots with non-slip soles and ankle protection

■ **Jacket and Trousers**

Protective, highly visible, long-sleeved jacket and durable trousers for riding (or a protective suit)

Riding Precautions

Riding Precautions

Running-in Period

During the first 500 km (300 miles) of running, follow these guidelines to ensure your vehicle's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration.
- Avoid hard braking and rapid down-shifts.
- Ride conservatively.

Brakes

Observe the following guidelines:

- Avoid excessively hard braking and downshifting.
 - ▶ Sudden braking can reduce the vehicle's stability.
 - ▶ Where possible, reduce speed before turning; otherwise you risk sliding out.
- Exercise caution on low traction surfaces.
 - ▶ The tyres slip more easily on such surfaces and braking distances are longer.
- Avoid continuous braking.
 - ▶ Repeated braking, such as when descending long, steep slopes can seriously overheat the brakes, reducing their effectiveness. Use engine braking with intermittent use of the brakes to reduce speed.
- For full braking effectiveness, operate both the front and rear brakes together.

Riding Precautions

Vehicle Safety

■ Anti-lock Brake System (ABS)

This model is equipped with an Anti-lock Brake System (ABS) designed to help prevent the brakes from locking up during hard braking.

- ABS does not reduce braking distance. In certain circumstances, ABS may result in a longer stopping distance.
- ABS does not function at speeds below 10 km/h (6 mph).
- The brake lever and pedal may recoil slightly when applying the brakes. This is normal.
- Always use the recommended front/rear tyres and sprockets to ensure correct ABS operation.

■ Engine Braking

Engine braking helps slow your vehicle down when you release the throttle. For further slowing action, downshift to a lower gear. Use engine braking with intermittent use of the brakes to reduce speed when descending long, steep slopes.

■ Wet or Rainy Conditions

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions.

If the brakes get wet, apply the brakes while riding at low speed to help them dry.

Riding Precautions

Parking

- Park on a firm, level surface.
- If you must park on a slight incline or loose surface, park so that the vehicle cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes and other high-temperature parts until they cool down.
- To reduce the likelihood of theft, always lock the handlebar and remove the key when leaving the vehicle unattended. Use of an anti-theft device is also recommended.

Parking with the Side Stand or Centre Stand

1. Stop the engine.
 2. **Using the side stand**
Push the side stand down.
Slowly lean the vehicle to the left until its weight rests on the side stand.
- Using the centre stand**
- To lower the centre stand, stand on the left side of the vehicle.
Press down on the tip of the centre stand with your right foot and, simultaneously, pull up and back.
3. Turn the handlebar fully to the left.
 - ▶ Turning the handlebar to the right reduces stability and may cause the vehicle to fall.
 4. Turn the ignition switch to the  (Lock) position and remove the key.  P. 118

Riding Precautions

Vehicle Safety

Refuelling and Fuel Guidelines

Follow these guidelines to protect the engine, fuel system and catalytic converter:

- Use only unleaded petrol.
- Use the recommended octane number.
Using lower octane petrol will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol.  P. 308
- Do not use stale or contaminated petrol or an oil/petrol mixture.
- Avoid getting dirt or water in the fuel tank.

Riding Precautions

Honda selectable torque control

When the Honda selectable torque control (Torque Control) detects rear wheel spin during acceleration, the system will limit the amount of torque applied to the rear wheel based on the Torque Control level selected.

Additionally, the system eases the rapid motion during a wheelie when accelerating based on the Torque Control level selected.

Torque Control will allow some wheel spin during acceleration at the lower Torque Control levels settings. Select a level that is appropriate for your skill and riding conditions.

Torque Control does not work during deceleration and will not prevent the rear wheel from skidding due to engine braking. Do not close the throttle suddenly, especially when riding on slippery surfaces.

Torque Control may not compensate for rough road conditions or rapid throttle operation.

Always consider road and weather conditions, as well as your skills and condition, when applying throttle.

If your vehicle gets stuck in mud, snow or sand, it may be easier to free it by turning off the Torque Control temporarily.

Temporarily turning off Torque Control also may help you maintain control and balance when riding on off-road terrain.

Always use the recommended tyres and sprockets to ensure correct Torque Control operation.

Accessories & Modifications

Vehicle Safety

Accessories & Modifications

We strongly advise that you do not add any accessories that were not specifically designed for your vehicle by Honda or make modifications to your vehicle from its original design. Doing so can make it unsafe. Modifying your vehicle may also void your warranty and make your vehicle illegal to operate on public roads. Before deciding to install accessories on your vehicle, be certain the modification is safe and legal.

⚠️ WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your vehicle. Your vehicle was not designed for these attachments, and their use can seriously impair your vehicle's handling.

Loading


- Carrying extra weight affects your vehicle's handling, braking and stability. Always ride at a safe speed for the load you are carrying.
- Avoid carrying an excessive load and keep within specified load limits.
Maximum weight capacity / Maximum luggage weight / Maximum weight on rear carrier  P. 315
- Tie all luggage securely, evenly balanced, and close to the centre of the vehicle.
- Do not place objects near the lights or the muffler.

WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Parts Location

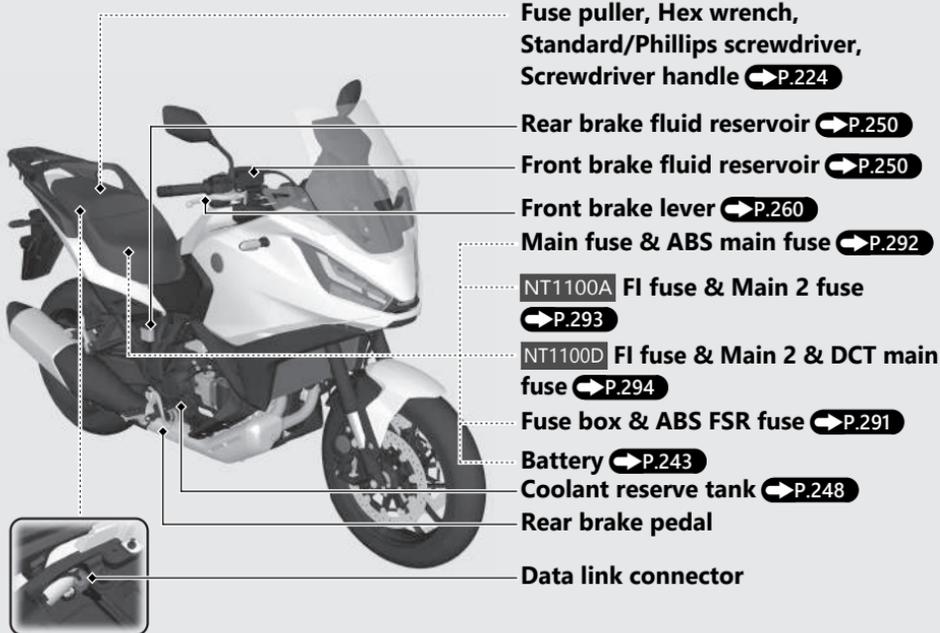

Fuse puller, Hex wrench,
Standard/Phillips screwdriver,
Screwdriver handle ➡P.224

Rear brake fluid reservoir ➡P.250

Front brake fluid reservoir ➡P.250

Front brake lever ➡P.260

Main fuse & ABS main fuse ➡P.292

NT1100A FI fuse & Main 2 fuse
➡P.293

NT1100D FI fuse & Main 2 & DCT main
fuse ➡P.294


Fuse box & ABS FSR fuse ➡P.291

Battery ➡P.243


Coolant reserve tank ➡P.248

Rear brake pedal

Data link connector

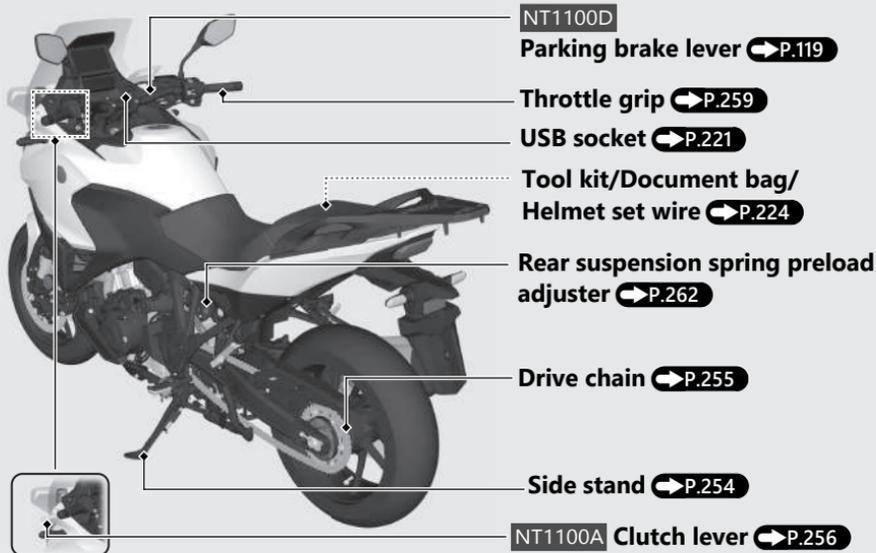

Parts Location *(Continued)*

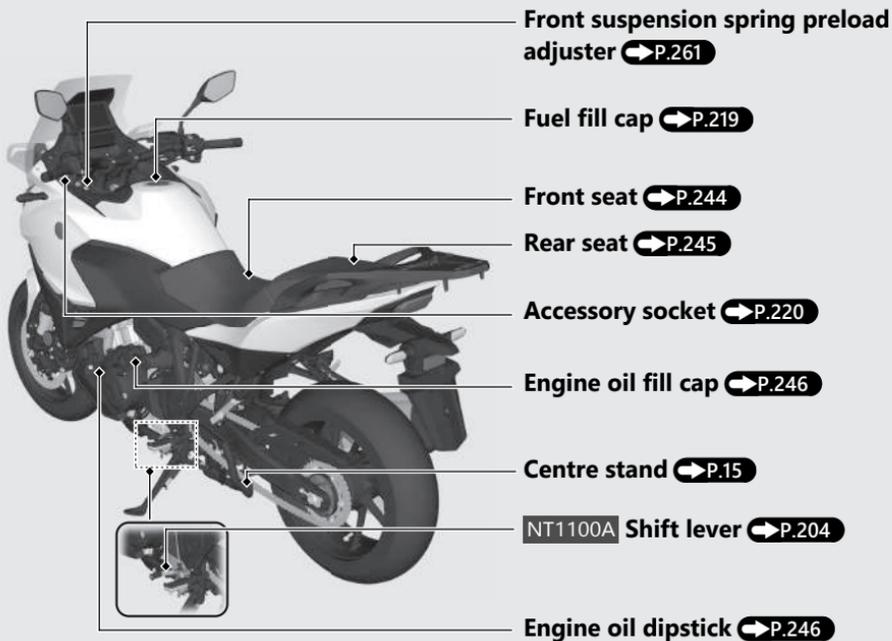

Instruments

Speedometer



Odometer [TOTAL]

Total distance ridden. When "-----" is displayed, have your dealer check for problems.

NT1100D

AT indicator

Comes on when the AT MODE. ➔ P.207

Display Check

When the ignition switch is turned to the **I** (On) position, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.

Gear position indicator

NT1100A

The gear position is shown in the gear position indicator.

- ▶ "-" appears when the transmission is not shifted properly.

NT1100D

The gear position is shown in the gear position indicator when the MT MODE is selected.

The indicator may flash if:

- ▶ The front wheel leaves the ground.
- ▶ You turn the wheel while the vehicle is upright on the stand.

This is normal. To operate the system again, turn the ignition switch to the  (Off) position, and then to the  (On) position again.

D is shown in the gear position indicator when the D mode is selected in the AT MODE.

S is shown in the gear position indicator when the S mode is selected in the AT MODE.

If the "-" indicator is blinking in the gear position window while riding:  **P.271**

NT1100D

S mode level indicator  **P.207**

Instruments *(Continued)*

Multi-information display


Your vehicle is equipped with a multi-information display that presents various functions and settings.

The multi-information display is a touch screen. You can operate by touching the screen.

- Certain manual functions and settings are disabled or inoperable while the vehicle is in motion. You cannot select a greyed-out menu until the vehicle is stopped.

When the ignition switch is turned **I** (On), the Notice message appears on the screen for a few seconds.

Read the Notice message, and then press the **ENT** switch or touch [OK] on the screen.

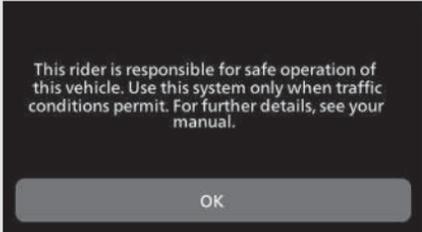


This rider is responsible for safe operation of this vehicle. Use this system only when traffic conditions permit. For further details, see your manual.

OK

Home Screen

From this screen, you can go to various functions and setup options.

To return to the Home screen:  **P.38**

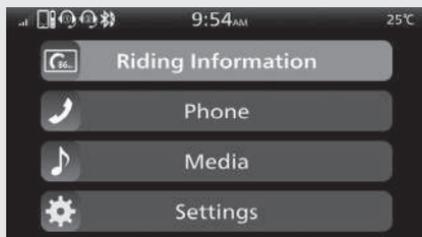

Riding Information

You can go back to the riding information. Riding information has 3 displays, Gold image display, Silver image display and Bronze image display.

These displays are switched according to riding mode.

Gold image display  **P.28**

Silver image display  **P.32**

Bronze image display  **P.35**

To change the display setting on each riding mode  **P.77**

Phone

You can make calls using a *Bluetooth*® connected *Bluetooth*® audio devices.

Media

You can play music from *Bluetooth*® devices.

Settings

You can select various settings.

Continued 27

Instruments (Continued)**Riding Information****Gold image display****Clock (12-hour or 24-hour display)**

To set the clock: ➔ P.86

Riding mode display

➔ P.127

Side stand indicator


➔ P.62

Sub-information indicator ➔ P.41**Cruise Control Set Speed**

The speed set for cruise control is displayed.

Cruise Control: ➔ P.211**Air temperature gauge**

➔ P.63

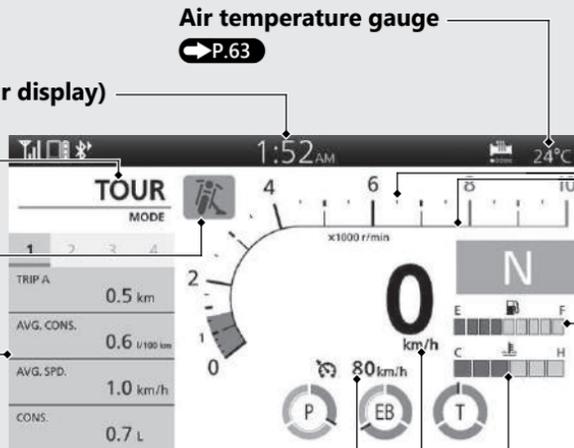**Speedometer**

Tachometer

NOTICE

Do not operate the engine in the Tachometer red zone. Excessive engine speed can adversely affect engine life.

Fuel gauge

Remaining fuel when only E (1st) segment starts flashing:
Approximately 3.0 L (0.79 US gal, 0.66 Imp gal)

If the fuel gauge indicator flashes: ➔P.272

NOTICE

You should refuel when the reading approaches the E (1st) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.



Coolant temperature gauge

When the coolant is over specified temperature, all segments turn red and the H (6th) segment flashes and high coolant temperature indicator lamps. ➔P.266

If the coolant temperature gauge indicator flashes: ➔P.273



Continued 29

Instruments *(Continued)*

Torque Control level [T] indicator P.123

When the indicator flashes, have your dealer check for problems.

[EB] [Engine Brake] level indicator P.127

When the indicator flashes, have your dealer check for problems.

[P] [Power] level indicator P.127

When the indicator flashes, have your dealer check for problems.



 **Handle grip heater status icon**

The handle grip heater status icon will appear while the handle grip heater is on.  **P.122**

If the handle grip heater status icon flashes:  **P.273**

Gear position indicator**NT1100A**

The gear position is shown in the gear position indicator.

▶ "—" appears when the transmission is not shifted properly.

NT1100D

The gear position is shown in the gear position indicator.

The indicator may flash if:

▶ The front wheel leaves the ground.

▶ You turn the wheel while the vehicle is upright on the stand.

This is normal. To operate the system again, turn the ignition switch to the  (Off) position, and then to the  (On) position again.

D is shown in the gear position indicator when the D mode is selected in the AT MODE.

S is shown in the gear position indicator when the S mode is selected in the AT MODE.

 **S mode level indicator**  **P.207**

If the "—" indicator is blinking in the gear position window while riding:  **P.271**

Instruments (Continued)**Silver image display****Side stand indicator**

 
➡ P.62

Riding mode display

➡ P.127

NOTICE

You should refuel when the reading approaches the E (1st) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

**Fuel gauge**

Remaining fuel when only E (1st) segment starts flashing:
Approximately 3.0 L (0.79 US gal, 0.66 Imp gal)

If the fuel gauge indicator flashes: ➡ P.272**Clock (12-hour or 24-hour display)****To set the clock:** ➡ P.86

Handle grip heater status icon

The handle grip heater status icon will appear while the handle grip heater is on.

 **P.122**

If the handle grip heater status icon flashes:  **P.273**

Air temperature gauge  **P.63**

Tachometer

NOTICE

Do not operate the engine in the Tachometer red zone.
Excessive engine speed can adversely affect engine life.

Tachometer red zone

(excessive engine rpm range)

Speedometer

Cruise Control Set Speed

The speed set for cruise control is displayed.

Cruise Control:  **P.211**

Instruments *(Continued)*

Torque Control level [T] indicator P.123

When the indicator flashes, have your dealer check for problems.

[EB] [Engine Brake] level indicator P.127

When the indicator flashes, have your dealer check for problems.

[P] [Power] level indicator P.127

When the indicator flashes, have your dealer check for problems.

Sub-information indicator P.41



Bronze image display**Clock (12-hour or 24-hour display)**

To set the clock: ➡ P.86

Riding mode display


➡ P.127

Side stand indicator

➡ P.62

Cruise Control Set Speed

The speed set for cruise control is displayed.

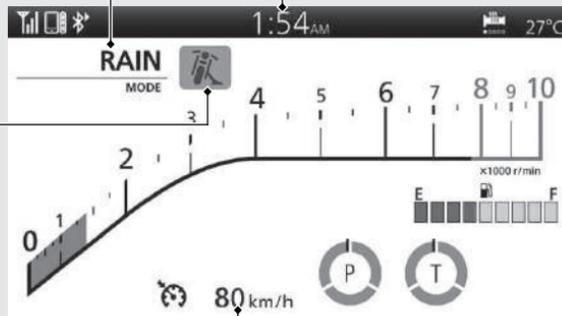Cruise Control: ➡ P.211

Instruments *(Continued)*

Handle grip heater status icon

The handle grip heater status icon will appear while the handle grip heater is on.

➡ **P.122**

If the handle grip heater status icon flashes:

➡ **P.273**



[P] [Power] level indicator ➡ **P.127**

When the indicator flashes, have your dealer check for problems.

Torque Control level [T] indicator ➡ **P.123**

When the indicator flashes, have your dealer check for problems.

Air temperature gauge ➡ P.63

Tachometer

NOTICE

Do not operate the engine in the Tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone

(excessive engine rpm range)

Fuel gauge

Remaining fuel when only E (1st) segment starts flashing:
Approximately 3.0 L (0.79 US gal, 0.66 Imp gal)

If the fuel gauge indicator flashes: ➡ P.272

NOTICE

You should refuel when the reading approaches the E (1st) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.



Instruments *(Continued)*

Basic Operations

You can operate and set the various functions of your vehicle using the switches on the left handlebar and  function sel switch on the right handlebar or touch screen.

However, you cannot operate some functions while the vehicle is in motion.



To Return to the Home Screen


Pull backward and hold the  page switch on the left handlebar or touch the clock area of the multi-information display with your vehicle stopped.



To Select a Desired Setting Menu

To operate with the left handlebar:
Press ▲ or ▼ to select the available choices.


To operate with the left handlebar:
Push ◀ or ▶ to select the available choices.

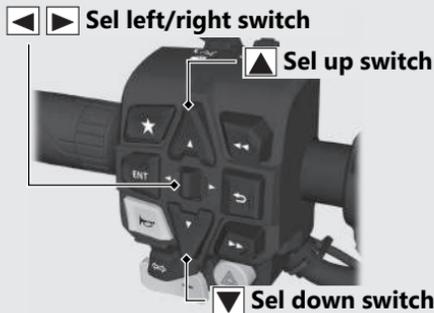

To operate with the touch screen:
Touch the menu to be selected on the touch screen.

To Set Your Selection

To operate with the left handlebar:
Press the **ENT** switch on the left handlebar to set your selection.

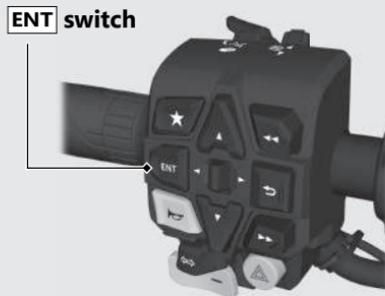

To operate with the touch screen:
Touch the menu to be selected on the touch screen.

Instruments *(Continued)*

To Exit the Setting Menu

To return to the riding information:

Pull backward the  page switch on the left handlebar.

To return to the Home screen:

Pull backward and hold the  page switch on the left handlebar.


To return the previous screen:

Press the  back switch on the left handlebar.

To operate with the touch screen:

Touch the  to be selected on the touch screen.

Also, the setting mode ends when your vehicle speed reaches approximately 6 km/h (4 mph).

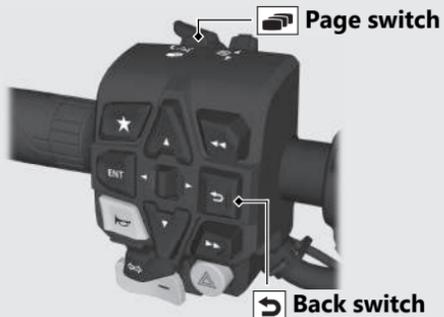

Page 1:

Page 1 shows Tripmeter A [TRIP A] and three items selected from the following items.

➡P.82

- Tripmeter A average fuel mileage [AVG. CONS.] ➡P.46
- Tripmeter A average speed [AVG. SPD.] ➡P.52
- Tripmeter A fuel consumption [CONS.] ➡P.48
- Tripmeter A elapsed [ELAPSED] ➡P.49
- Tripmeter B [TRIP B] ➡P.50
- Blank ➡P.61

1	2	3	4
TRIP A		60.0 km	
AVG. CONS.		5.6 l/100 km	
AVG. SPD.		55.5 km/h	
CONS.		6.6 L	

Instruments *(Continued)*

Page 2:

Page 2 shows Tripmeter B [TRIP B] and three items selected from the following items.

➡P.82

- Tripmeter B average fuel mileage [AVG. CONS.] ➡P.51
- Tripmeter B average speed [AVG. SPD.] ➡P.52
- Tripmeter B fuel consumption [CONS.] ➡P.53
- Tripmeter B elapsed [ELAPSED] ➡P.54
- Blank ➡P.61

1	2	3	4
TRIP B	30.0 km		
AVG. CONS.	6.2 l/100 km		
AVG. SPD.	45.5 km/h		
CONS.	1.8 L		

Page 3:

Page 3 shows four items selected from the following items. ➡P.82

- Current fuel mileage [INST. CONS.] ➡P.55
- Available driving distance [RANGE] ➡P.56
- Battery voltage [VOLTAGE] ➡P.57
- Date [DATE] ➡P.57
- Average fuel mileage [AVG. CONS.] ➡P.58
- Fuel consumption [CONS.] ➡P.59
- Elapsed time [ELAPSED] ➡P.59
- Subtraction trip [-TRIP] ➡P.60
- Blank ➡P.61

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
CONS.		3.2 L	
ELAPSED		02:42	

Instruments *(Continued)*

Page 4:

Page 4 shows the setting values of the Honda Selectable Torque Control level [HSTC].  **P.62**



To Switch the Page of Display

- 1 Select the gold image display. P.77
- 2 Push the or of the sel left/right switch until the desired page is displayed.

You can also perform the above settings by using the touch screen.

To Switch the Page 1 or Fuel Gauge

- 1 Select the silver image display. P.77
- 2 Push the or of the sel left/right switch to switch the page or fuel gauge.

Tripmeter A [TRIP A]

Distance ridden since the tripmeter A was reset.

1	2	3	4
TRIP A	60.0 km		
AVG. CONS.	5.6 l/100 km		
AVG. SPD.	55.5 km/h		
CONS.	6.6 L		

When "----." flashes, have your dealer check for problems.

To reset the tripmeter A [TRIP A]:

P.64

Instruments (Continued)**Tripmeter A Average Fuel Mileage [AVG. CONS.]**

Displays the average fuel mileage since the tripmeter A was reset.

The average fuel mileage will be calculated based on the value displayed on the selected tripmeter A.

Display range: 0.0 to 299.9 l/100 km (km/l, mpg or mile/L)

- Initial display: "---.-" is displayed.
- More than 299.9 km/l (mpg or mile/L): "299.9" is displayed.
- Above 299.9 l/100 km : "---.-" is displayed.
- When the tripmeter A is reset: "---.-" is displayed.

1	2	3	4
TRIP A	60.0 km		
AVG. CONS.	5.6 l/100 km		
AVG. SPD.	55.5 km/h		
CONS.	6.6 L		

When "---.-" flashes, have your dealer check for problems.

To reset the tripmeter A average fuel mileage [AVG. CONS.]:  **P.64**

Tripmeter A Average Speed [AVG. SPD.]

Displays the average speed since the tripmeter A was reset.

The average speed will be calculated based on the value displayed on the selected tripmeter A.

- When the tripmeter A average speed is reset: "---.-" is displayed.

Display range: 0.0 to 299.9 km/h or 0.0 to 186.9 mph

1	2	3	4
TRIP A	60.0 km		
AVG. CONS.	5.6 ^l /100 km		
AVG. SPD.	55.5 km/h		
CONS.	6.6 L		

**To reset the tripmeter A average speed
[AVG. SPD.]:**  **P.64**

Instruments (Continued)**Tripmeter A Fuel Consumption [CONS.]**

Displays the tripmeter A fuel consumption since the tripmeter A was reset.

Display range: 0.0 to 300.0 L (gal)

- Above 300.0 L (gal): "300.0" is displayed.
- When the tripmeter A fuel consumption is reset: "---.-" is displayed.

1	2	3	4
TRIP A	60.0 km		
AVG. CONS.	5.6 l/100 km		
AVG. SPD.	55.5 km/h		
CONS.	6.6 L		

To reset the tripmeter A fuel consumption [CONS.]:  **P.64**

■ Tripmeter A Elapsed [ELAPSED]

Displays the tripmeter A elapsed since the tripmeter A was reset.

Display range: 00:00 to 99:59 (hours:minutes)

- The display locks at "99:59" when the read-out exceeds 99:59.

1	2	3	4
TRIP A	60.0 km		
AVG. CONS.	5.6 l/100 km		
AVG. SPD.	55.5 km/h		
ELAPSED	01:39		

When "00:00" flashes, have your dealer check for problems.

To reset the tripmeter A elapsed [ELAPSED]: P.64

Instruments *(Continued)*

■ Tripmeter B [TRIP B]

Distance ridden since the tripmeter B was reset.

1	2	3	4
TRIP B	30.0 km		
AVG. CONS.	6.2 l/100 km		
AVG. SPD.	45.5 km/h		
CONS.	1.8 L		

When "----." flashes, have your dealer check for problems.

To reset the tripmeter B [TRIP B]:

➡ P.65

■ Tripmeter B Average Fuel Mileage [AVG. CONS.]

Displays the average fuel mileage since the tripmeter B was reset.

The average fuel mileage will be calculated based on the value displayed on the selected tripmeter B.

Display range: 0.0 to 299.9 l/100 km (km/l, mpg or mile/L)

- Initial display: "---.-" is displayed.
- More than 299.9 km/l (mpg or mile/L): "299.9" is displayed.
- Above 299.9 l/100 km : "---.-" is displayed.
- When the tripmeter B is reset: "---.-" is displayed.

1	2	3	4
TRIP B			
		30.0 km	
AVG. CONS.			
		6.2 l/100 km	
AVG. SPD.			
		45.5 km/h	
CONS.			
		1.8 L	

When "---.-" flashes, have your dealer check for problems.

To reset the tripmeter B average fuel mileage [AVG. CONS.]:  **P.65**

Instruments (Continued)**Tripmeter B Average Speed**
[AVG. SPD.]

Displays the average speed since the tripmeter B was reset.

The average speed will be calculated based on the value displayed on the selected tripmeter B.

- When the tripmeter B average speed is reset: "---.-" is displayed.

Display range: 0.0 to 299.9 km/h or 0.0 to 186.9 mph

1	2	3	4
TRIP B	30.0 km		
AVG. CONS.	6.2 l/100 km		
AVG. SPD.	45.5 km/h		
CONS.	1.8 L		

To reset the tripmeter B average speed [AVG. SPD.]:  **P.65**

Tripmeter B Fuel Consumption [CONS.]

Displays the tripmeter B fuel consumption since the tripmeter B was reset.

Display range: 0.0 to 300.0 L (gal)

- Above 300.0 L (gal): "300.0" is displayed.
- When the tripmeter B fuel consumption is reset: "---.-" is displayed.

1	2	3	4
TRIP B		30.0 km	
AVG. CONS.		6.2 l/100 km	
AVG. SPD.		45.5 km/h	
CONS.		1.8 L	

To reset the tripmeter B fuel consumption [CONS.]:  P.65

Instruments *(Continued)***Tripmeter B Elapsed [ELAPSED]**

Displays the tripmeter B elapsed since the tripmeter B was reset.

Display range: 00:00 to 99:59 (hours:minutes)

- The display locks at "99:59" when the read-out exceeds 99:59.

1	2	3	4
TRIP B			
30.0		km	
AVG. CONS.			
6.2		l/100 km	
AVG. SPD.			
45.5		km/h	
ELAPSED			
00:39			

When "00:00" flashes, have your dealer check for problems.

To reset the tripmeter B elapsed [ELAPSED]:  **P.65**

Current Fuel Mileage [INST. CONS.]

Displays the current instant fuel mileage

Display range:

0.0 to 299.9 l/100 km (km/l, mpg or mile/L)

- When your speed is less than 3 km/h (1 mph): "---.-" is displayed.
- More than 299.9 l/100 km (km/l, mpg or mile/L): "299.9" is displayed.

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
CONS.		3.2 L	
ELAPSED		02:42	

When "---.-" flashes, have your dealer check for problems.

Instruments *(Continued)***Available Driving Distance [RANGE]**

Displays the estimated distance you can travel on the remaining fuel.

Display range: 999 to 0 km (999 to 0 mile)

- Above 999 km (mile): "999" is displayed.
- Initial display: "0" is displayed.
- When the available driving distance is below 5 km (3 mile) or the amount of remaining fuel is below 1.0 L (0.2 gal), "---" is displayed.

The indicated available driving distance is calculated based on driving conditions, and the indicated figure may not always be the actual allowable distance.

	1	2	3	4
INST. CONS.			5.8	l/100 km
AVG. CONS.			6.2	l/100 km
RANGE			32	km
-TRIP			155.5	km

Battery Voltage [VOLTAGE]

Displays the current battery voltage.
Display range: 7.5 to 18.5 V

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
VOLTAGE		 12.0 v	
DATE		Wed, 15, May, 2021	

When "---.-" flashes, have your dealer check for problems.

Date [DATE]

Displays today's date.

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
VOLTAGE		 12.0 v	
DATE		Wed, 15, May, 2021	

To set the current date:  P.86

Instruments *(Continued)***Average Fuel Mileage [AVG. CONS.]**

Displays the average fuel mileage since the average fuel mileage was reset.

Display range: 0.0 to 299.9 l/100 km (km/l, mpg or mile/L)

- Initial display: "---.-" is displayed.
- More than 299.9 km/l (mpg or mile/L): "299.9" is displayed.
- Above 299.9 l/100 km : "---.-" is displayed.
- When the average fuel mileage [AVG. CONS.] is reset: "---.-" is displayed.

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
CONS.		3.2 L	
ELAPSED		02:42	

When "---.-" flashes, have your dealer check for problems.

To reset the average fuel mileage [AVG. CONS.]:  **P.66**

Fuel Consumption [CONS.]

Displays the fuel consumption since the engine was started.

Display range: 0.0 to 300.0 L or 0.0 to 300.0 gal

- Above 300.0 L (gal): "300.0" is displayed.
- When the engine starts: "---.-" is displayed.

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
CONS.		3.2 L	
ELAPSED		02:42	

Elapsed Time [ELAPSED]

Displays operating time since the engine was started.

Display range: 00:00 to 99:59 (hours:minutes)

- The display locks at "99:59" when the read-out exceeds 99:59.

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
CONS.		3.2 L	
ELAPSED		02:42	

When "00:00" flashes, have your dealer check for problems.

Continued 59

Instruments *(Continued)*

Subtraction Trip [-TRIP]

Distance travelled is subtracted from a preset figure, since the subtraction trip was set up.

Display range:

1,607.3 to -1,609.0 km or 999.0 to -1,000.0 mile

The display locks at "-1609.0" km ("-1000.0" mile) when the read-out exceeds -1609.0 km (-1000.0 mile).

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
RANGE		32 km	
-TRIP		155.5 km	

To set the subtraction trip:  **P.74**

Default: 000

Blank

Display is blank.

1	2	3	4
INST. CONS.		5.8 l/100 km	
AVG. CONS.		6.2 l/100 km	
RANGE		32 km	

Instruments *(Continued)*

Honda Selectable Torque Control Level [HSTC]

Display the selected value of the Honda Selectable Torque Control level [HSTC].



Setting range: Level 1 to 3 or 0 (Off)

To select the Honda Selectable Torque Control level [HSTC]: P.123

Side Stand Indicator

The side stand indicator comes on when the side stand is put down. It goes off when the side stand is raised.



Side stand indicator

Air temperature gauge

Displays the ambient temperature.



Air temperature gauge

Display range: -10 °C to 50 °C

- Below -11°C: "---" is displayed
- Above 50°C: 50°C flashes

Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 30 km/h (19 mph). It may take several minutes for the

display to be updated after the temperature reading has stabilized.

Cruise Control Set Speed

The speed set for cruise control is displayed.



Cruise control set speed

To set the cruise control set speed:



Instruments *(Continued)*

To Reset the Tripmeter A [TRIP A], Tripmeter A Average Fuel Mileage [AVG. CONS.], Tripmeter A Average Speed [AVG. SPD.], Tripmeter A Fuel Consumption [CONS.] and Tripmeter A Elapsed [ELAPSED]

To reset the tripmeter A [TRIP A], tripmeter A average fuel mileage [AVG. CONS.], tripmeter A average speed [AVG. SPD.], tripmeter A fuel consumption [CONS.] and tripmeter A elapsed [ELAPSED], press and hold the **ENT** switch while page 1 is displayed or touch and hold the page 1 area.

1	2	3	4
TRIP A	60.0 km		
AVG. CONS.	5.6 l/100 km		
AVG. SPD.	55.5 km/h		
CONS.	6.6 L		

**To Reset the Tripmeter B [TRIP B],
 Tripmeter B Average Fuel Mileage
 [AVG. CONS.], Tripmeter B Average
 Speed [AVG. SPD.], Tripmeter B Fuel
 Consumption [CONS.] and Tripmeter B
 Elapsed [ELAPSED]**

To reset the tripmeter B [TRIP B], tripmeter B average fuel mileage [AVG. CONS.], tripmeter B average speed [AVG. SPD.], tripmeter B fuel consumption [CONS.] and tripmeter B elapsed [ELAPSED], press and hold the **ENT** switch while page 2 is displayed or touch and hold the page 2 area.

1	2	3	4
TRIP B	30.0 km		
AVG. CONS.	6.2 l/100 km		
AVG. SPD.	45.5 km/h		
CONS.	1.8 L		

Instruments *(Continued)*

To Reset the Average Fuel Mileage [AVG. CONS.]


To reset the average fuel mileage [AVG. CONS.], press and hold the **ENT** switch while page 3 is displayed or touch and hold the page 3 area.

1	2	3	4
INST. CONS.			
		5.8 l/100 km	
AVG. CONS.			
		6.2 l/100 km	
CONS.			
		3.2 L	
ELAPSED			
		02:42	

Setting mode


To Shift to the Menu of the Multi-Information Display


-  Pull backward and hold the  page switch or touch the clock area of the multi-information display.
-  Select [Riding Information], and then press the **ENT** switch or touch the [Riding Information] of the multi-information display.
-  Pull backward the  page switch.
-  Press the  sel up switch.
-  Press the  sel down switch.

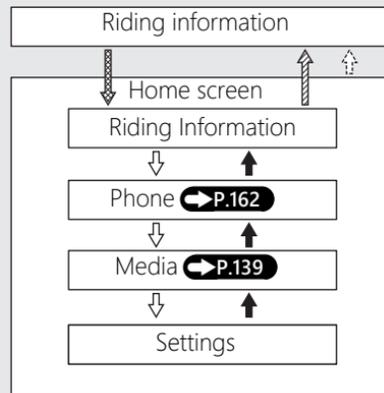


Instruments (Continued)


-  Press the **ENT** switch.
-  Press the  back switch or touch the  of the multi-information display.
-  Press the  sel up switch.
-  Press the  sel down switch.

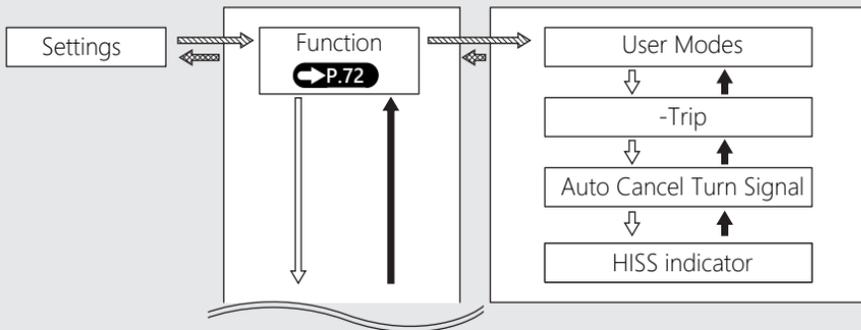

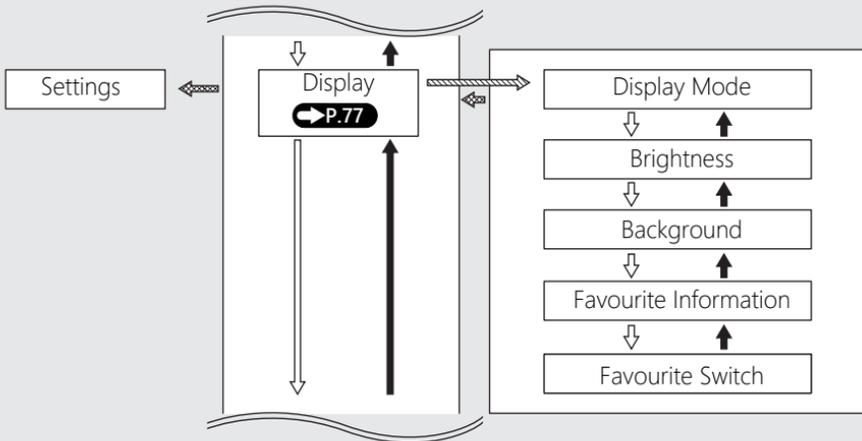

Instruments *(Continued)*

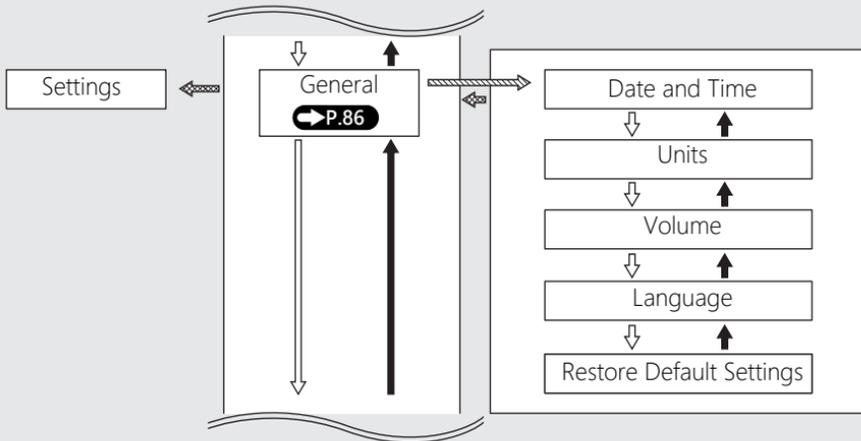

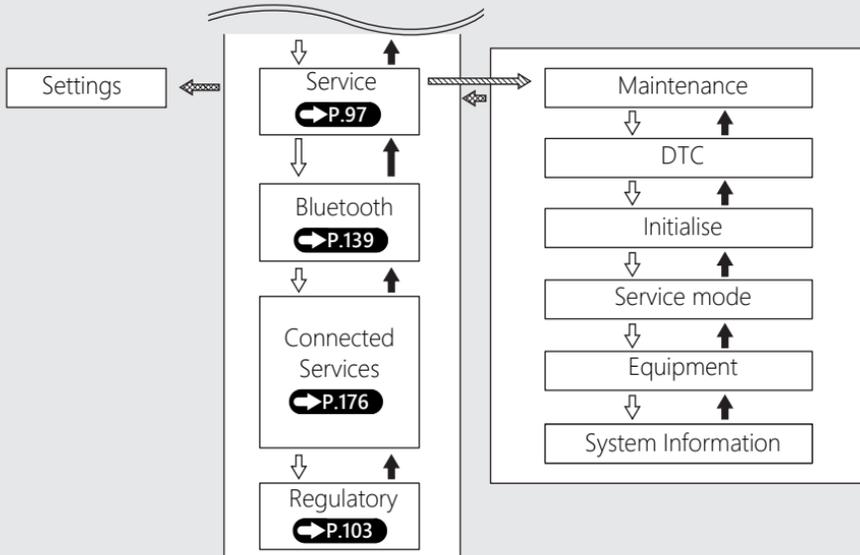

Instruments *(Continued)*


Function

Following items can be changed sequentially.


- User Modes (this page)
- -Trip  **P.74**
- Auto Cancel Turn Signal  **P.75**
- HISS indicator  **P.76**

User Modes


You can change the [Power] and [Engine Brake] values in [USER 1 MODE] and [USER 2 MODE].

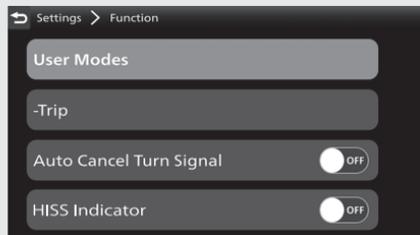

- 1 Select [User Modes], and then press the **ENT** switch.
- 2 Select [User 1] or [User 2] using the **▲** sel up or **▼** sel down switch, and then press the **ENT** switch.

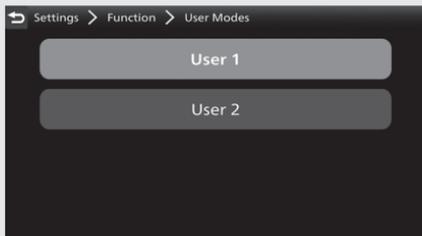

- 3 Press the **▲** sel up switch or **▼** sel down switch to select a setting menu.
- 4 Push the **◀** or **▶** of the **◀ ▶** sel left/right switch until the desired value is displayed.
 - ▶ Push and hold the **◀** or **▶** of the **◀ ▶** sel left/right switch to advance the figure fast.

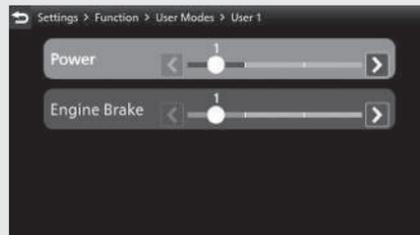

- 5 Return to the riding information, previous screen or Home screen. ➡ **P.40**

You can also perform the above settings by using the touch screen.


Available settings: ➡ **P.129**

Default: ➡ **P.128**

Instruments *(Continued)*


-Trip

You can also adjust value of the subtraction trip [-TRIP].

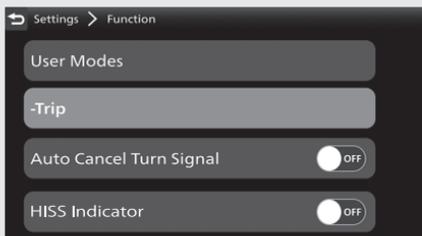

- 1 Select [-Trip], and then press the **ENT** switch.
- 2 Select the digits using the **◀** or **▶** of the **◀ ▶** sel left/right switch.
- 3 To increase value: Press the **▲** sel up switch, until the desired value is displayed.
To decrease value: Press the **▼** sel down switch, until the desired value is displayed.

- ▶ Press and hold the **▲** sel up switch or sel **▼** down switch to advance the figure fast.

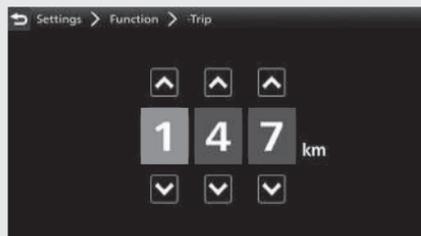


- 4 Return to the riding information, previous screen or Home screen. **➡ P.40**
- You can also perform the above settings by using the touch screen.

Setting range: 000 to 999

Default: 000

Auto Cancel Turn Signal

You can enable/disable turn signal automatic cancellation.

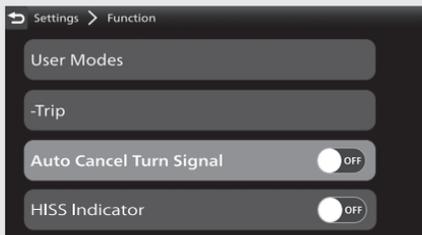

- 1 Select [Auto Cancel Turn Signal], and then press the **ENT** switch to [ON] (enable) or [OFF] (disable) the function.
- 2 Return to the riding information, previous screen or Home screen. ➡ **P.40**

You can also perform the above settings by using the touch screen.


Available settings: [ON]/[OFF]

Default: [ON]

Instruments *(Continued)*

HISS Indicator

You can select the blink or off the HISS indicator.

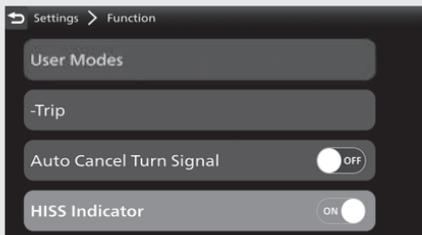

- 1 Select [HISS Indicator], and then press the **ENT** switch to select [ON] (blink) or [OFF] (off) the function.
- 2 Return to the riding information, previous screen or Home screen. **➡P.40**

You can also perform the above settings by using the touch screen.

Available settings: [ON]/[OFF]

Default: [ON]

Display

Following items can be changed sequentially.

- Display Mode (this page)
- Brightness → P.79
- Background → P.80
- Favourite Information → P.82
- Favourite Switch → P.85


Display Mode

You can select the riding information image.



Instruments *(Continued)*

- 1 Select [Display Mode], and then press the **ENT** switch.
- 2 Press the ▲ sel up switch or ▼ sel down switch to select a setting menu.
- 3 Push the ◀ or ▶ of the ◀ ▶ sel left/right switch to select your desired display.

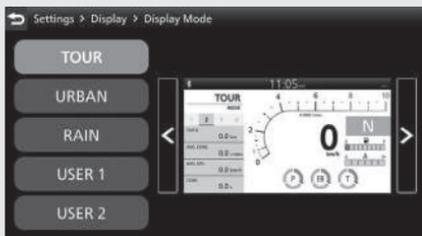

- 4 Return to the riding information, previous screen or Home screen. ➡ **P.40**

You can also perform the above settings by using the touch screen.

Available settings: Gold image/Silver image/Bronze image

Default:

- [TOUR MODE]: Gold image
- [URBAN MODE]: Silver image
- [RAIN MODE]: Bronze image
- [USER 1 MODE]: Silver image
- [USER 2 MODE]: Bronze image

Brightness


You can select the backlight brightness.

The display can become dark when the display is very hot. If it does not restore the original brightness, contact your dealer.

Automatic Brightness Control: P.300




- 1 Select [Brightness], and then press the **ENT** switch.
- 2 Select [Auto], and then press the **ENT** switch to [ON] (auto) or [OFF] (manual) the function.

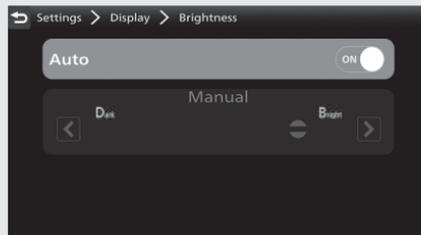

Instruments *(Continued)*

- 3 If you select to [OFF] (manual) push the ◀ or ▶ of the ◀▶ sel left/right switch to select your preferred level.
- ▶ Push and hold the ◀ or ▶ of the ◀▶ sel left/right switch to advance the figure fast.

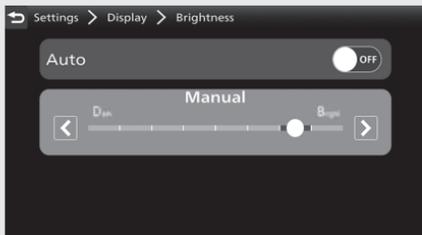

- 4 Return to the riding information, previous screen or Home screen. ➡P.40
- You can also perform the above settings by using the touch screen.

Setting range: Level 1 to 8 or [Auto]


Default: [Auto]

Background


You can select the background.

Automatic Background Control:


➡P.300

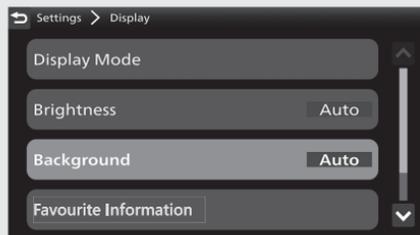

- 1 Select [Background], and then press the **ENT** switch.
- 2 Select [Auto], and then press the **ENT** switch to [ON] (auto) or [OFF] (manual) the function.
- 3 If you select to [ON] (auto), push the ◀ or ▶ of the ◀ ▶ sel left/right switch to select your preferred level.
 - ▶ Push and hold the ◀ or ▶ of the ◀ ▶ sel left/right switch to advance the figure fast.

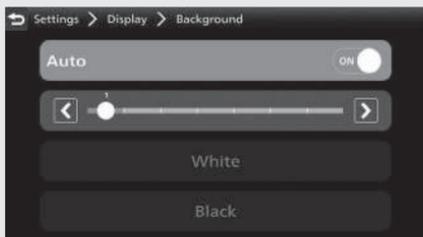

If you select to [OFF] (manual), press the ▲ sel up switch or ▼ sel down switch to select the [White] or [Black].

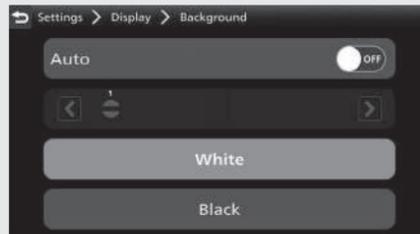

- 4 Return to the riding information, previous screen or Home screen. ➔P.40

You can also perform the above settings by using the touch screen.

Setting range: Auto Level 1 to 7, White or Black

Default: Auto 1

Instruments *(Continued)*

Favourite Information

You can select the following:


- Page 1
 - Tripmeter A average fuel mileage [AVG. CONS.]
 - Tripmeter A average speed [AVG. SPD.]
 - Tripmeter A fuel consumption [CONS.]
 - Tripmeter A elapsed [ELAPSED]
 - Tripmeter B [TRIP B]
 - Blank
- Page 2
 - Tripmeter B average fuel mileage [AVG. CONS.]
 - Tripmeter B average speed [AVG. SPD.]
 - Tripmeter B fuel consumption [CONS.]
 - Tripmeter B elapsed [ELAPSED] display
 - Blank

● Page 3

- Current fuel mileage [INST. CONS.]
- Available driving distance [RANGE]
- Battery voltage [VOLTAGE]
- Date [DATE]
- Average fuel mileage [AVG. CONS.]
- Fuel consumption [CONS.]
- Elapsed time [ELAPSED]
- Subtraction trip [-TRIP]
- Blank



- 1 Select [Favourite Information], and then press the **ENT** switch.
- 2 Push the **◀** or **▶** of the **◀ ▶** sel left/right switch until the desired page is displayed.
- 3 Press **▲** / **▼** to select the available choices, and then press the **ENT** switch.

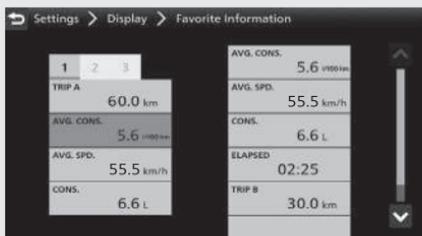

- 4 Press **▲** / **▼** to select the available choices, and then press the **ENT** switch.



- 5 Return to the riding information, previous screen or Home screen. **→P.40**
 You can also perform the above settings by using the touch screen.

Instruments *(Continued)*

Default:


- Page 1
 - Tripmeter A average fuel mileage [AVG. CONS.]
 - Tripmeter A average speed [AVG. SPD.]
 - Tripmeter A fuel consumption [CONS.]
- Page 2
 - Tripmeter B average fuel mileage [AVG. CONS.]
 - Tripmeter B average speed [AVG. SPD.]
 - Tripmeter B fuel consumption [CONS.]
- Page 3
 - Current fuel mileage [INST. CONS.]
 - Available driving distance [RANGE]
 - Battery voltage [VOLTAGE]
 - Date [DATE]

Favourite Switch

- 1 Select [Favourite Switch], and then press the **ENT** switch.



- 2 Press the **▲** sel up switch or **▼** sel down switch to select your desired mode.

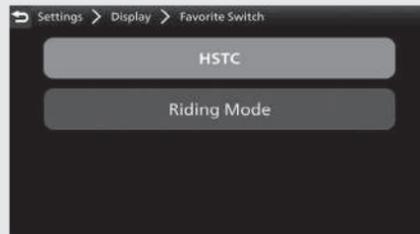

- 3 Return to the riding information, previous screen or Home screen. **→P.40**

You can also perform the above settings by using the touch screen.

Available settings: [HSTC]/[Riding Mode]

Default: [HSTC]

Instruments *(Continued)*

General

Following items can be changed sequentially.

- Date and Time (this page)
- Units  **P.89**
- Volume  **P.91**
- Language  **P.93**
- Restore Default Settings  **P.94**

Date and Time


The multi-information display receives signals from GPS satellites and updates the date and time automatically.

You can also adjust the date and time manually.




To [ON] (auto) adjust time automatically function:

- 1 Select [Date and Time], and then press the **ENT** switch.
- 2 Select [Adjust Time Automatically], and then press the **ENT** switch to [ON] (auto) the function.

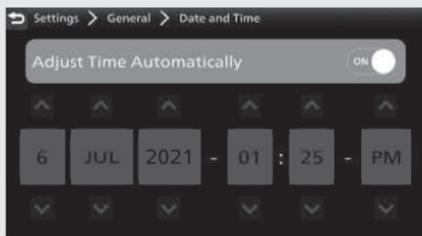

When GPS cannot be located. Read the notice message, and then press the **ENT** switch.

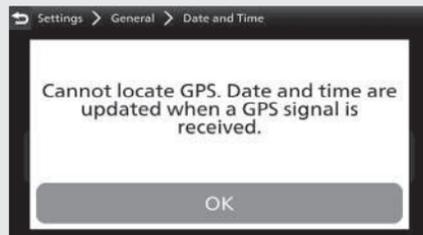


- 3 Return to the riding information, previous screen or Home screen. ➡ **P.40**

You can also perform the above settings by using the touch screen.

Instruments *(Continued)*

To adjust the clock manually:

- 1 Select [Date and Time], and then press the **ENT** switch.
- 2 Select [Adjust Time Automatically], and then press the **ENT** switch to [OFF] (manual) the function.

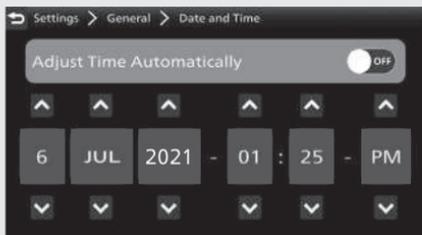

- 3 Press **◀** / **▶** on the sel **◀▶** left/right switch to select a day, month, year, hour, minute or time format section.
 - To advance the day, month, year, hour or minute: Press the **▲** sel up switch until the desired value is displayed. To delay the day, month, year, hour or minute: Press the **▼** sel down switch until the desired value is displayed.
 - ▶ Press and hold the **▲** sel up switch or **▼** sel down switch to advance the figure fast.
 - To select the time format: Press the **▲** sel up switch or **▼** sel down switch until the desired time format is displayed.
- 4 Return to the riding information, previous screen or Home screen. **→P.40**
You can also perform the above settings by using the touch screen.


Available settings: [ON] (auto)/[OFF] (manual)

Default: [ON] (auto)

Units

You can change the following units.

- [Speed]: [km/h] or [mph]
- [Fuel Consumption]: [l/100 km] or [km/l]
If the [mph] for speed is selected, the fuel mileage shown by [mpg] or [mile/L].

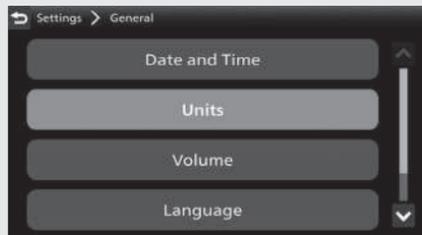

Instruments *(Continued)*

- 1 Select [Units], and then press the **ENT** switch.
- 2 Press the **▲** sel up switch or **▼** sel down switch to select a setting menu.
 - ▶ "TEMP" is displayed but not usable.
- 3 Push the **◀** or **▶** of the **◀ ▶** sel left/right switch to select your desired unit.



- 4 Return to the riding information, previous screen or Home screen. **➡ P.40**

You can also perform the above settings by using the touch screen.

Available settings:


- [Speed]: [km/h]/[mph]
- [Fuel Consumption]: [l/100 km]/[km/l]/[mpg]/[mile/L]

Default:

- [Speed]: [km/h]
- [Fuel Consumption]: [l/100 km]


Volume

Selects the volume setting to automatically increase volume from the headsets as the speed of the vehicle increases.

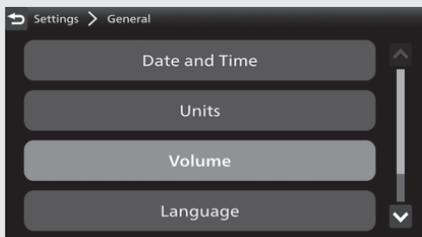


To [Off] (disable), [Low] or [High] automatic volume function:

- 1 Select [Volume], and then press the **ENT** switch.
- 2 Select [Automatic Volume], and then press the **ENT** switch.

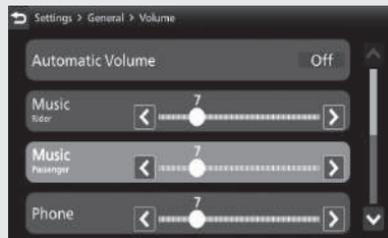

Instruments *(Continued)*

- 3 Press the ▲ sel up switch or ▼ sel down switch to set your selection.

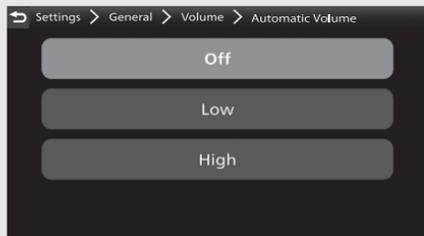

- 4 Return to the riding information, previous screen or Home screen. ➔P.40


You can also perform the above settings by using the touch screen.

Available settings: [Off] (disable)/[Low]/[High]

Default: [Off] (disable)

To adjust the volume:

- 1 Select [Volume], and then press the ENT switch.
- 2 Press the ▲ sel up switch or ▼ sel down switch to select a setting menu.
- 3 Push the ◀ or ▶ of the ◀▶ sel left/right switch to select your preferred level.
 - ▶ Push and hold the ◀ or ▶ of the ◀▶ sel left/right switch to advance the figure fast.

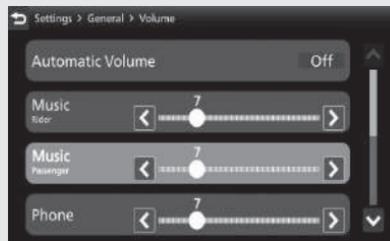

- ④ Return to the riding information, previous screen or Home screen. ➡ **P.40**

You can also perform the above settings by using the touch screen.

VOLUME level range:

Other than Microphone: Level 0 to 30

Microphone: Level 0 to 15


Default:

- Music (Rider): 7
- Music (Passenger): 7
- Phone: 7
- System: 7
- Ringtone: 7
- Voice: 7
- CarPlay: 7
- Microphone: 7

Language


Changes the system language.

- ① Select [Language], and then press the **ENT** switch.

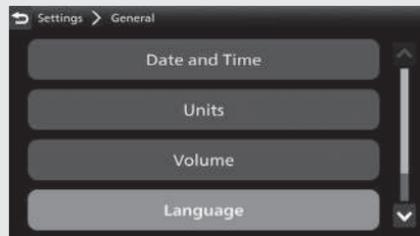

Instruments *(Continued)*

- Press the ▲ sel up switch or ▼ sel down switch to select the display language that you want to use on the screen.

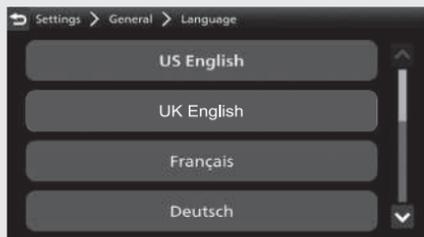

- Return to the riding information, previous screen or Home screen. ➡ P.40

You can also perform the above settings by using the touch screen.

Default: [UK English]

Restore Default Settings

The set values can be returned to default settings.



- Select [Restore Default Settings], and then press the ENT switch.

2 Select the [No] (not restore) or [Yes] (restore) using the ▲ sel up or ▼ sel down switch.

3 When the [No] is selected


Press the **ENT** switch.

The set value is maintained, and then the display returns to the [General] menu screen.

When the [Yes] is selected

Press the **ENT** switch.

The display changes to the confirmation screen.

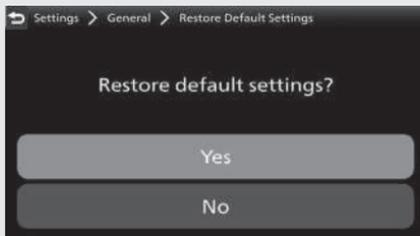

4 Select the [No] (not restore) or [Yes] (restore) using the ▲ sel up or ▼ sel down switch on the confirmation screen.

5 When the [No] is selected


Press the **ENT** switch.

The set value is maintained, and then the display returns to the [General] menu screen.

When the [Yes] is selected

Press the **ENT** switch.

The set value return to default setting, and then the display returns to the [General] menu screen.

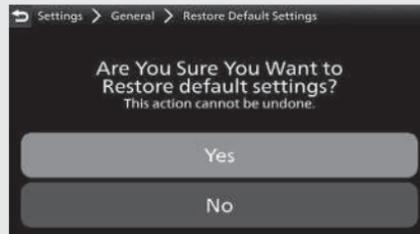

Instruments *(Continued)*

- 6 Return to the riding information, previous screen or Home screen.  **P.40**

You can also perform the above settings by using the touch screen.

Default setting values:

- -TRIP: 000
- Display mode:
 - ▶ [TOUR MODE]: Gold image
 - ▶ [URBAN MODE]: Silver image
 - ▶ [RAIN MODE]: Bronze image
 - ▶ [USER 1 MODE]: Silver image
 - ▶ [USER 2 MODE]: Bronze image
- Brightness: Auto
- Background: Auto 1
- Favourite information:

- ▶ Page 1:
 - Tripmeter A average fuel mileage [AVG. CONS.]
 - Tripmeter A average speed [AVG. SPD.]
 - Tripmeter A fuel consumption [CONS.]
- ▶ Page 2:
 - Tripmeter B average fuel mileage [AVG. CONS.]
 - Tripmeter B average speed [AVG. SPD.]
 - Tripmeter B fuel consumption [CONS.]
- ▶ Page 3:
 - Current fuel mileage [INST. CONS.]
 - Available driving distance [RANGE]
 - Battery voltage [VOLTAGE]
 - Date [DATE]

- Favourite switch: [HSTC]
- Automatic Volume: [OFF]
- Periodic Maintenance:
 - Distance: "00000"
 - Date: "-/---"
- Oil Change:
 - Distance: "00000"
 - Date: "-/---"
- Delete the *Bluetooth*® paired device

Service

Following items can be changed sequentially.


- Maintenance ➡ P.98
- DTC ➡ P.100
- Initialise ➡ P.101
- Service mode ➡ P.102
- Equipment ➡ P.103
- System Information ➡ P.103

Instruments *(Continued)*


Maintenance

You can check the next periodic inspection time and next engine oil change.

You can change the setting of the next periodic inspection and next engine oil change.

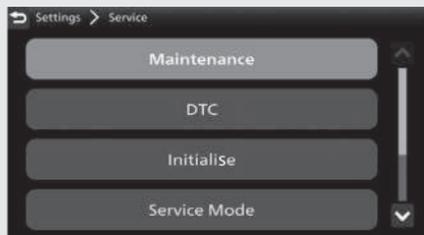

- 1 Select [Maintenance], and then press the **ENT** switch.
- 2 Press the ▲ sel up switch or ▼ sel down switch to select a setting menu, and then press the **ENT** switch.

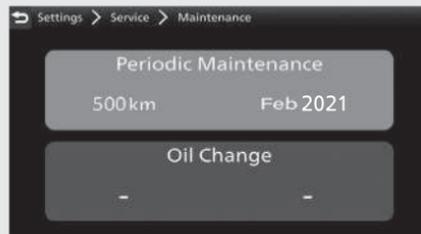

- 3 Press ◀ or ▶ of the ◀ ▶ sel left/right switch to select a distance, month or year section.

- To advance the distance, month or year: Press the ▲ sel up switch until the desired value is displayed.
To delay the distance, month or year: Press the ▼ sel down switch until the desired value is displayed.
 - ▶ Press and hold the ▲ sel up switch or ▼ sel down switch to advance the figure fast.



- 4 Return to the riding information, previous screen or Home screen. ➡ P.40
- You can also perform the above settings by using the touch screen.

Setting range:

- Periodic Maintenance:
 - Distance: 100 to 12,000 km or 100 to 8,000 mile
 - Date: 2000/JAN to 2099/DEC
- Oil Change:
 - Distance: 100 to 12,000 km or 100 to 8,000 mile
 - Date: 2000/JAN to 2099/DEC

Default:

- Periodic Maintenance:
 - Distance: "00000"
 - Date: "-/--"
- Oil Change:
 - Distance: "00000"
 - Date: "-/--"


Instruments *(Continued)*

DTC

You can check for a current problem with the PGM-FI system.

If your vehicle has problem, DTC index is displayed.

Reduce speed and have your vehicle inspected by your dealer as soon as possible.

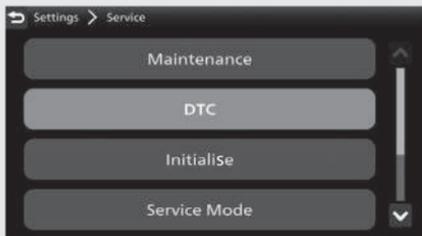


- 1 Select [DTC], and then press the **ENT** switch.




- 2 Return to the riding information, previous screen or Home screen. **➡P.40**
You can also perform the above settings by using the touch screen.

Initialise

You can calibrate of the touch screen.

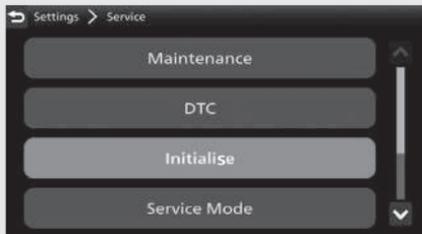


- 1 Select [Initialise], and then press the **ENT** switch.
- 2 Select [Touchscreen Calibration], and then press the **ENT** switch.

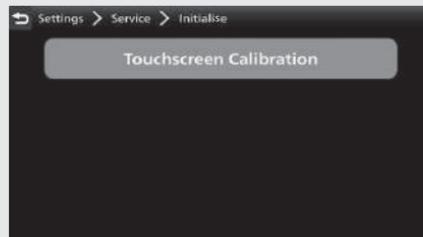

Instruments *(Continued)*

 
- 3 Touch the centre on each of the four crosses.
 - ▶ The screen flashes green when calibration is complete. If calibration fails, the screen flashes red. Try step 3 again.



- 4 Return to the riding information, previous screen or Home screen. ➡ P.40
- You can also perform the above settings by using the touch screen.

Service Mode

The DRL can be turned on when the vehicle is stopped for inspection.

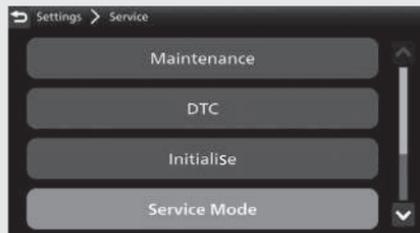


- 1 Start the engine. ➡ P.200
- 2 Stop the vehicle.
- 3 Select [Service Mode], and then press the **ENT** switch.

- 4 Press the **ENT** switch.

The DRL lights up.

- ▶ The service mode will automatically stop in 5 minutes.

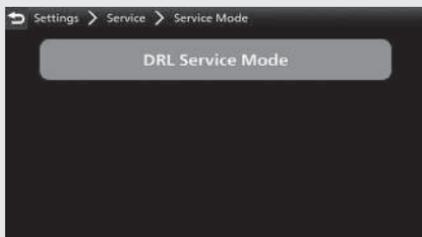

- 5 Return to the riding information, previous screen or Home screen. **↩ P.40**

You can also perform the above settings by using the touch screen.

Equipment

This menu cannot be selected.

System Information

Shows various information of the multi-information display.

- [Software Version]
- [Software update]: Cannot be selected.
- [Hardware Information]
- [GPS Reception Status]
- [EULAs]
- [Copyright and Acknowledgements]

Regulatory

Shows regulatory information of the multi-information display.

Instruments *(Continued)***Pop-up information**

In the following cases, pop-up information is displayed at the bottom of the multi-information display.

- Maintenance information:
When the inspection time of your vehicle is approaching.

Maintenance information

Indication	Explanation	Remedy
	When the periodic inspection time of your vehicle is approaching	Have your vehicle inspected by your dealer.
	When the oil change time of your vehicle is approaching	Change the engine oil.

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

High coolant temperature indicator

Comes on briefly when the ignition switch is turned to the **I** (On) position.


If it comes on while riding:  P.266

Left turn signal indicator

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the **I** (On) position.

If it comes on or flashes while engine is running:  P.268

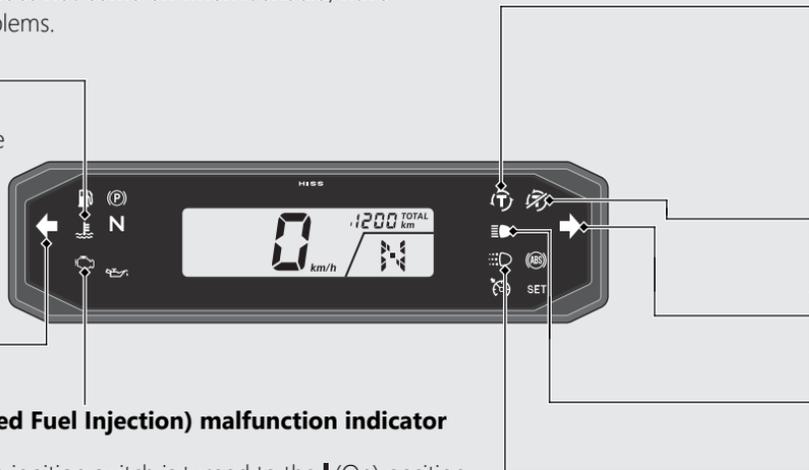

 **Torque Control indicator**

- Comes on when the ignition switch is turned to the **I** (On) position. Goes off when your speed reaches approximately 5 km/h (3 mph) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding:  **P.270**

 **Torque Control OFF Indicator**

- Comes on when the Torque Control is turned Off.

 **Right turn signal indicator**

 **High beam indicator**

 **DRL indicator**  **P.218**

Indicators *(Continued)*

Parking brake indicator

NT1100D

Lights as a reminder that you have not released the parking brake lever.

N Neutral indicator

Comes on when the transmission is in Neutral.



Low fuel indicator

- Comes on briefly when the ignition switch is turned to the **I** (On) position.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on:
Approximately 3.0 L (0.79 US gal, 0.66 Imp gal)

If the indicator comes on and the fuel gauge indicator flashes:  **P.272**

 **ABS (Anti-lock Brake System) indicator**

- Comes on briefly when the ignition switch is turned to the **I** (On) position.
- Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding:  **P.269**

SET **Cruise control SET indicator**

Comes on if you have set a speed for cruise control.

Cruise Control:  **P.211**

 **Cruise control main indicator**

Comes on when you press  cruise control main switch.

Cruise Control:  **P.211**

Indicators *(Continued)*

Low oil pressure indicator

- Comes on when the ignition switch is turned to the **I** (On) position.
- Goes off when the engine starts.

If it comes on while engine is running:  **P.267**




HISS indicator **P.298**

- Comes on briefly when the ignition switch is turned to the **I** (On) position. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned to the **O** (Off) position.

Switches

Left handlebar switch  **P.114**

Right handlebar switch  **P.113**

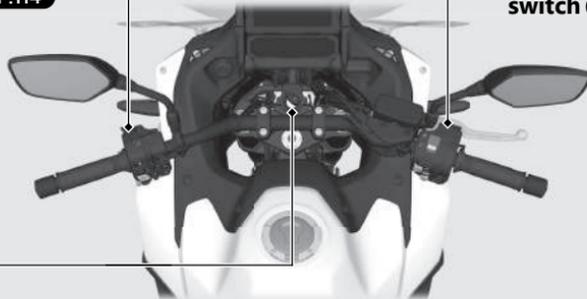

 **Ignition switch**

Switches the electrical system on/off, locks the steering.

▶ Key can be removed when in the

○ (Off) or  (Lock) position.

Steering Lock:  **P.118**

| (On)


Turns electrical system on for starting/riding.

○ (Off)

Turns engine off.

 **(Lock)**

Locks steering.

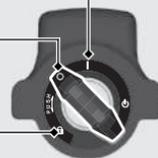

Right handlebar switch

Engine stop switch/ START (🔌) button

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Stop) position to stop the engine.
- ▶ To start the engine.

➡ P.200

AT/MT switch

NT1100D

To shift between the AT MODE and MT MODE.

➡ P.208

Cruise control main switch

Press to activate the cruise control system. ➡ P.211

Function sel switch

Press to display the pop-up information on the multi-information display.


N-D switch

NT1100D

To shift between Neutral and AT MODE. ➡ P.208

RES / + SET / - Cruise control lever

Push up or down to set the speed or adjust the set speed. ➡ P.213

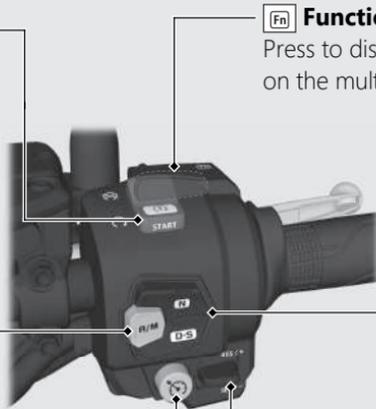

Switches (Continued)

Left handlebar switch

★ Favourite switch

Favourite switch can be assigned to the HSTC switch and riding mode switch. ➔ P.85

📢 Horn button

↔ Turn signal switch

The turn signal will automatically stop when you complete the turn. (You can manually cancel the lights by pressing the switch in.) When used for a lane change, the turn signal will automatically stop in 7 seconds or after riding 120 m (131 yards). In some cases, the timing at which the turn signal stops could be less or more. Always use the recommended tyres to ensure correct automatic cancellation operation.

Shift down switch (-)


NT1100D


To shift down the gear. ➔ P.210

⚠ Hazard switch

Switchable when the ignition switch is turned to the **I** (On) position. Can be turned to off regardless of the ignition switch position.

- ▶ The signals continue flashing with the ignition switch in **O** (Off) or **L** (Lock) after the hazard switch is on.

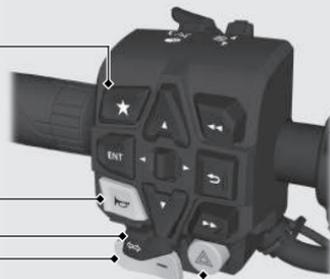

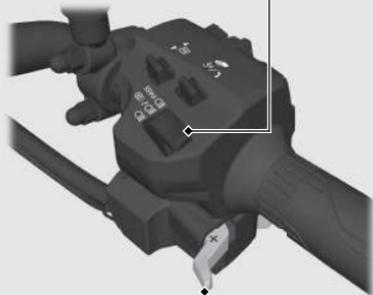

Headlight dimmer/Passing light control switch

-  : High beam
-  : DRL auto or off (low beam) ➔ P.218
-  **PASS** : Flashes the high beam headlight.

Shift up switch (+)


NT1100D

To shift up the gear. ➔ P.210

Switches (Continued)


Function lever

- Push forward to select the [AUTO] of DRL or pull backward to select [Dismiss] for DRL.  **P.218**
- Push forward or pull backward to adjust the audio system volume.  **P.137**
- Push forward or pull backward to adjust the grip heater level.  **P.121**

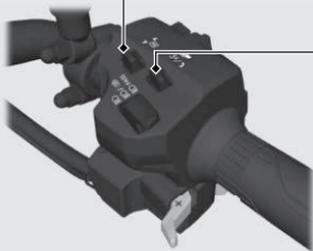

Voice control switch / Page switch

- Push forward to receive, reject or end a call.  **P.170**
- Push forward to start Siri or voice search if Apple CarPlay or Android Auto™ is available.  **P.185**
- Pull backward and hold to go to the Home screen, Apple CarPlay or Android Auto screen.  **P.38**
- Pull backward and hold to go to the Home screen.  **P.38**
- Pull backward to return to the riding information or audio screen.  **P.40**

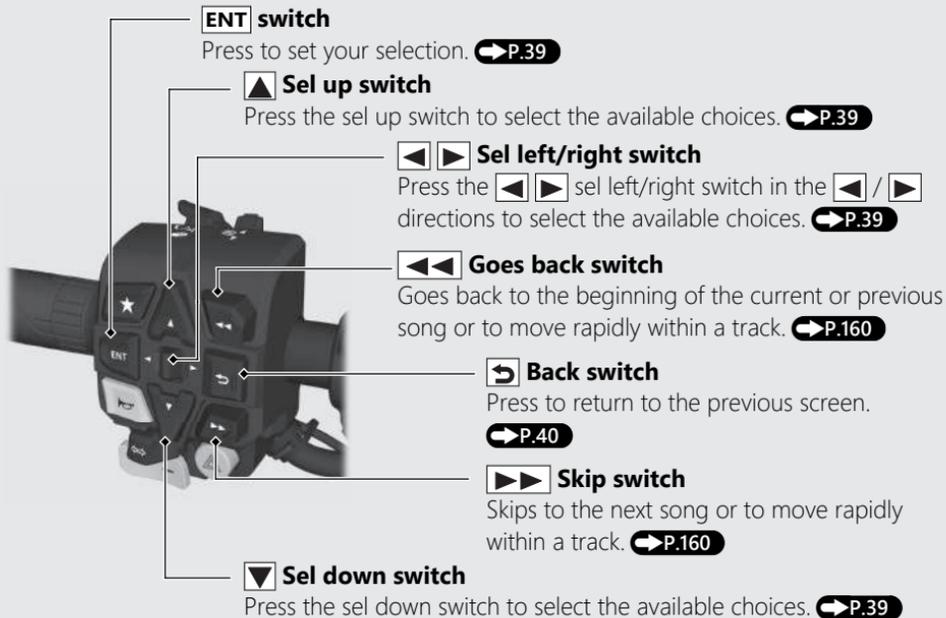


Switches *(Continued)*

Steering Lock

Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

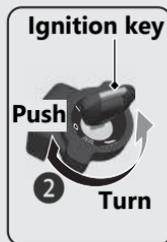

Locking

- 1 Turn the handlebar all the way to the left.
- 2 Push the key down, and turn the ignition switch to the  (Lock) position.
 - ▶ Jiggle the handlebar if the lock is difficult to engage.
- 3 Remove the key.

Unlocking

Insert the key, push it in, and turn the ignition switch to the  (Off) position.

Parking Brake

NT1100D

Parking Brake Lever

Be sure the parking brake is applied while parking and warming up the engine.

- ▶ Make sure the parking brake lever is released before riding.

To apply the parking brake

Push the parking brake lever to the right until it snaps into place.



- ▶ The parking brake lock will not function if the parking brake is not adjusted properly.

➔ P.252

To release the parking brake

Push the parking brake lever back to the original position.

- ▶ Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is no drag on the rear wheel.

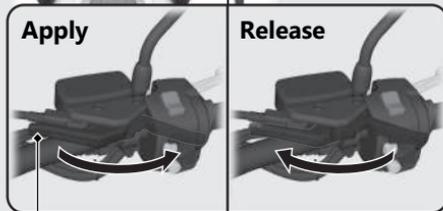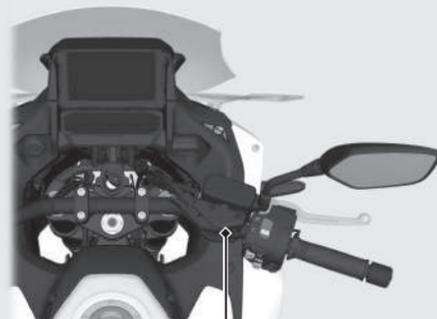

Parking brake lever

Handle Grip Heater

This vehicle is equipped with a handle grip heater that warms up your hands during ride. Wear gloves to protect your hands from the heated grips.



Handle grips

Handle grip heater indicator:

Comes on when the handle grip heater is on and indicates the selected heat level. The handle grip heater have 5 levels of heat to select.

Handle grip heater status icon:

Displayed when the handle grip heater is on.


To operate handle grip heater

- 1 Start the engine. → P.200
- 2 Select the handle grip heater display of pop-up information using the **[Fn]** function sel switch.



- 3 Push forward or pull backward the **[Fn]** function lever to select the handle grip heater level.

- ▶ The status icon will be appeared on the display when the handle grip heater operates.
- ▶ Do not leave the handle grip heater in the high position for a long time on a warm day.

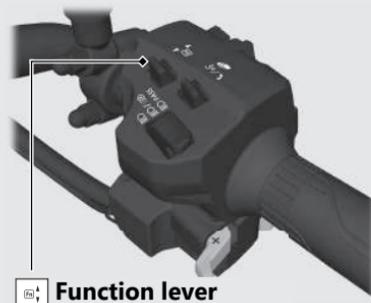


Handle Grip Heater (Continued)

To turn off handle grip heater

- 1 Select the handle grip heater display of pop-up information using the **[Fn]** function sel switch.
- 2 Pull backward the **[Fn]** function lever several times to select the handle grip heater off.

Do not use the handle grip heater with the engine at idle for a long time. It may result in a low (or dead) battery.
Maintains the selected level when the ignition switch is turned to the **○** (Off) position.

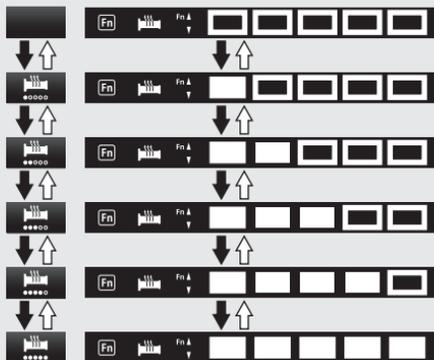

No indication (Off)

Level 1 lowest temperature

Level 2

Level 3

Level 4

Level 5 highest temperature

➔ **Push forward the**
[Fn] **function lever**

⇐ **Pull backward the**
[Fn] **function lever**

Honda selectable torque control

Torque Control level (engine power control) can be selected or turned on/off.

- ▶ Do not change the Torque Control level while riding.
Stop the vehicle first, turn the Torque Control off or on and select the desired level.
- ▶ The Torque Control setting cannot be changed or turned off when the system is activated (Torque Control indicator flashing).


▶ In the following cases, the Torque Control will be turned on and the specific Torque Control level will automatically be set as below.

- Each time the ignition switch is turned to the **I** (On) position, the Torque Control level will automatically be set to level it was set to. However, if the level was set to [0] (off), it will become level 1.
- ▶ When the Torque Control is turned from the [0] (off) position to the on position, it will automatically be set to level of before turning off the Torque Control.

Honda selectable torque control *(Continued)*

Torque Control level setting

- When using the  favourite switch:
 - ① Stop the vehicle.
 - ② Select the [HSTC] of the  favourite switch.  **P.85**
 - ③ Press the  favourite switch.
 - ▶ 3: the maximum Torque Control level
 - ▶ 1: the minimum Torque Control level

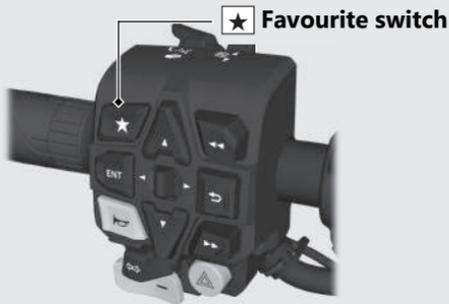

- When using the multi-information display:
 - ① Stop the vehicle.
 - ② Select the gold image display.  **P.77**
 - ③ Select page 4.  **P.45**
 - ④ Press the **ENT** switch.
 - ⑤ Push the  or  of the   sel left/right switch to select your preferred level.



- ⑥ Press the  back switch.
You can also perform the above settings by using the touch screen.

Torque Control on and off

- ① Stop the vehicle.
- ② Select the gold image display. P.77
- ③ Select page 4. P.45
- ④ Press the **ENT** switch.
- ⑤ Press and hold on the sel left/right switch to set the [0] (off).
Press and hold on the sel left/right switch to set to level of before turning [0] (off) the Torque Control.




- ⑥ Press the back switch.

You can also perform the above settings by using the touch screen.

Setting range: Level 1 to 3 or 0 (Off)

Honda selectable torque control *(Continued)*

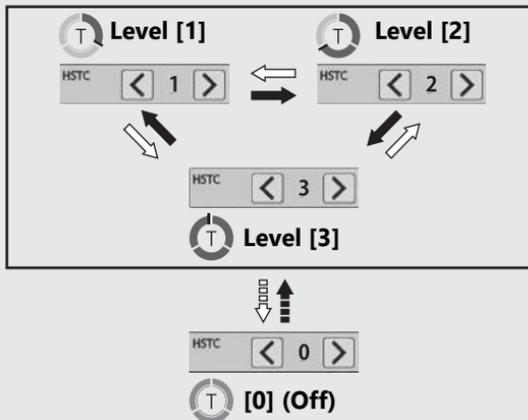


- Push on the sel left/right switch
- Push on the sel left/right switch or press the favourite switch
- Push and hold on the sel left/right switch
- Push and hold on the sel left/right switch

Riding mode

You can change the riding mode.
The riding mode consists of the following parameters.

[P] Power: Engine output level
[EB] Engine brake: Engine brake level

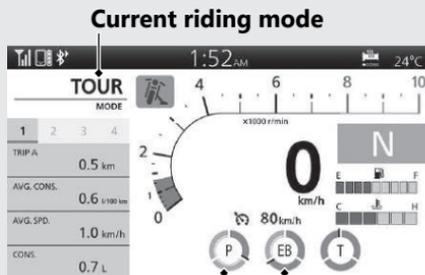

[P] [Power] value

[EB] [Engine Brake] value

Riding mode has 5 modes.
Available riding modes: [TOUR MODE], [URBAN MODE], [RAIN MODE], [USER 1 MODE] and [USER 2 MODE]

[TOUR MODE], [URBAN MODE] and [RAIN MODE]

- ▶ **[TOUR MODE]**: Enables smooth acceleration even when riding with a passenger or a full load of luggage.
 - ▶ **[URBAN MODE]**: Standard, all-round mode for a variety of situations.
 - ▶ **[RAIN MODE]**: Good for stable riding on slippery surfaces such as rainy conditions.
- Each initial setting value cannot be changed.

[USER 1 MODE] and **[USER 2 MODE]**

Each initial setting value can be changed.

Riding mode (Continued)**Initial setting**

Riding modes	[P] [Power] value	[EB] [Engine Brake] value
[TOUR MODE]	1	2
[URBAN MODE]	2	2
[RAIN MODE]	3	3
[USER 1 MODE]	2*1	2*1
[USER 2 MODE]	1*1	2*1

Notes:

*1 : Value can be changed.

[P] Power value (Engine output level)

- ▶ Level 1 has the maximum power.
- ▶ Level 3 has the minimum power.

[EB] Engine brake value (Engine brake level)


EB value has three setting levels.

Available setting range: 1 to 3

- ▶ Level 1 has the strongest engine braking effect.
- ▶ Level 3 has the weakest engine braking effect.

Selecting the riding mode


- When using the ▲ sel up switch and ▼ sel down switch:
 - 1 Press the ▲ sel up switch or ▼ sel down switch.

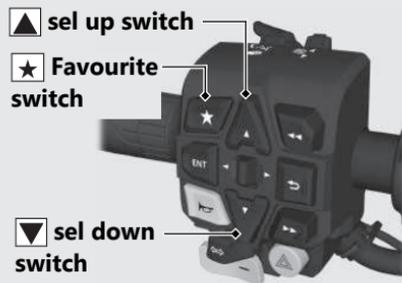

You can also perform the above settings by using the touch screen.

Riding mode *(Continued)*

- When using the  favourite switch:
 - 1 Select the [Riding Mode] of the  favourite switch.  P.85
 - 2 Press the  favourite switch.

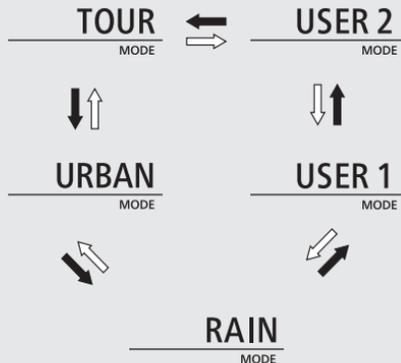

 Press the  sel up switch or press the  favourite switch

 Press the  sel down switch

Setting the riding mode

You can change the [P] [Power] and [EB] [Engine Brake] on the [USER 1 MODE] and [USER 2 MODE] of the riding mode.  P.72

Audio System

About Your Audio System

This audio system can play audio files on *Bluetooth*® audio devices (mobile phone, digital audio player or equivalents).

The audio system can pair with *Bluetooth*® sound devices (speakers, headsets, communication devices or equivalents).

You can operate the audio system from the switches on the left handlebar and multi-information display. However, you cannot operate some functions by the touch screen while the vehicle is in motion.

- Local laws may prohibit the operation of handheld electronic devices while operating a vehicle.
- Only operate audio switches when safe to do so.

- Set the volume at a level that still allows horns and emergency vehicles to be heard.
- Some audio devices, iPhone, Android™ phone and *Bluetooth*® sound devices may not be compatible.
- We shall not be liable for any damages or trouble in the use of audio device.
- iPhone, iPad, iPad Air, iPad Mini, iPod, iPod touch, iPod classic, iPod shuffle and iPod nano are trademarks of Apple Inc.
- Google™, Android, Google Maps™, Google Play™ and Android Auto are trademarks of Google LLC.

Audio System (Continued)


About Bluetooth® audio

- Only one *Bluetooth*® audio device and two *Bluetooth*® sound devices can be paired with the audio system at a time. When another device is paired, the information on the previously registered device is cancelled.
- If you receive a call to a paired phone while playing an audio, the paired phone may stop playing.
- When unable to connect your *Bluetooth*® device to the audio system or when sounds skip or noises mix while playing, change the storage location of the *Bluetooth*® device.

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motors Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

Audio System Location

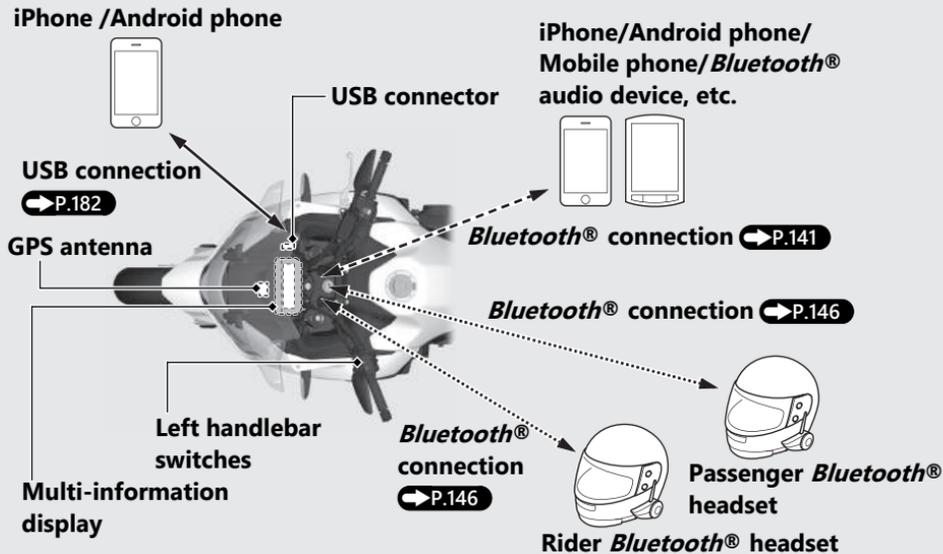

Audio System *(Continued)*



**USB connection for Apple
CarPlay/Android Auto**



**Audio system supported
profiles:**

- HFP ver. 1.5
- A2DP ver. 1.2
- AVRCP ver. 1.4
- PBAP ver. 1.0





**Headset supported
profiles:**

- HFP ver. 1.7
- A2DP ver. 1.2

Basic Operations

You can operate and set the various functions of the audio system using the touch screen and/or switches on the left handlebar. However, you cannot operate some functions by the touch screen while the vehicle is in motion.

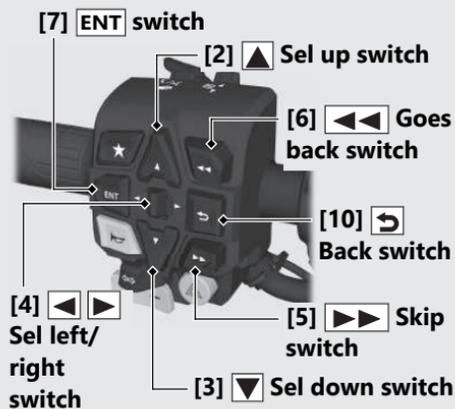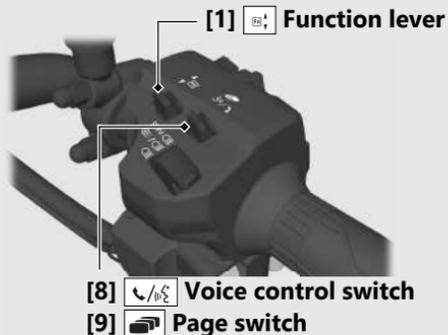

Audio System *(Continued)*

- [1]  Function lever: Push forward or pull backward the lever to adjust the volume.
- To increase the volume: Push forward the lever.
 - To decrease the volume: Pull backward the lever.
 - To increase the volume rapidly: Push forward and hold the lever.
 - To decrease the volume rapidly: Pull backward and hold the lever.
- [2]  Sel up switch: Press the switch to select a menu item.
- [3]  Sel down switch: Press the switch to select a menu item.
- [4]  Sel left/right switch: Press the switch to select a menu item.
- [5]  Skip switch:
- To skip to the next song: Press the switch.
 - To move rapidly within a track: Press and hold the switch.
- [6]  Goes back switch:
- To go back to the beginning of the current or previous song: Press the switch.
 - To move rapidly within a track: Press and hold the switch.
- [7]  ENT switch: Press to set your selection.
- [8]  Voice control switch:
- To receive or end a call: Push forward the switch.
 - To reject a call: Push forward and hold the switch.
 - To start Siri or voice search when Apple CarPlay or Android Auto is available: Push forward the switch.
- [9]  Page switch:
- To return to the riding information or audio screen: Pull backward the switch.
 - To return to the home screen, Apple CarPlay screen or voice search screen: Pull backward and hold the switch.
- [10]  Back switch:
- To return to the previous screen: Press the switch.
 - To return to the audio screen: Press and hold the switch.

To Adjust the Volume

You can adjust the volume settings for the headsets.

The system has the following unique volume levels.


Adjust the volume while in the individual modes.

- [Music] Rider
- [Music] Passenger
- [Phone]
- [System]
- [Ringtone]
- [Voice]
- [CarPlay]
- [Microphone]

Each volume can also be set from the menu.

➔ P.91

When you push forward or pull backward the  function lever, the volume control level appears on the pop-up information.

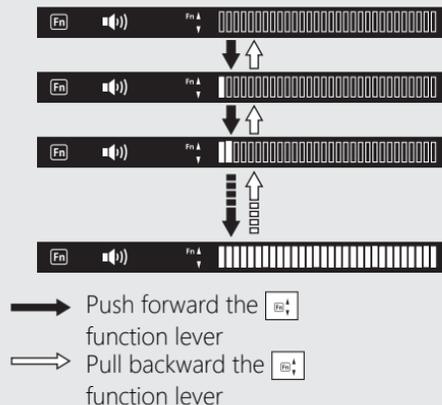

Audio System *(Continued)*

To increase the volume: push forward the  function lever.

- ▶ To increase the volume rapidly, push forward and hold the  function lever.


To decrease the volume: pull backward the  function lever.

- ▶ To decrease the volume rapidly, pull backward and hold the  function lever.

Volume level range:

Other than Microphone: Level 0 to 30

Microphone: Level 0 to 15

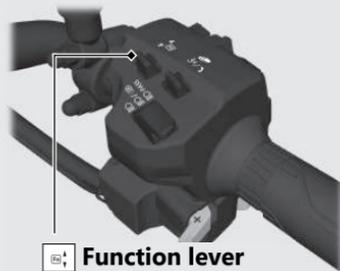

 **Function lever**

Automatic Volume

Selects the volume setting to automatically increase volume from the headsets as the speed of the vehicle increases.

To select the Automatic Volume:

 P.91

Available settings: [Off]/[Low]/[High]

Default: [Off]

***Bluetooth®* Audio**

| *Bluetooth®* Setting

You can connect with your *Bluetooth®* audio device (mobile phone, digital audio player or equivalents) and *Bluetooth®* headsets via *Bluetooth®*.

Available devices are as follows:

- [Phone Pairing] (For *Bluetooth®* audio device) ➡ **P.141**
- [Headset Pairing] (For rider headset and passenger headset) ➡ **P.146**

Audio System (Continued)**Supported Bluetooth® version/profiles**

<i>Bluetooth</i> ® version	Bluetooth 2.1 + EDR
<i>Bluetooth</i> ® profiles (For iPhone, Android phone, mobile phone or <i>Bluetooth</i> ® device)	HFP (Hand Free Profile) ver. 1.5
	A2DP (Advanced Audio Distribution Profile) ver. 1.2
	AVRCP (Audio/Video Remote Control Profile) ver. 1.4
	PBAP (Phone Book Access Profile) ver. 1.0
<i>Bluetooth</i> ® profiles (For rider and passenger headsets)	HFP (Hand Free Profile) ver. 1.7
	A2DP (Advanced Audio Distribution Profile) ver. 1.2

- You cannot pair a *Bluetooth*® device and *Bluetooth*® headsets while the vehicle is moving. When pairing, park your vehicle in a safe place.
- *Bluetooth*® connection cannot be established while launching Apple CarPlay.
- Phone *Bluetooth*® connection will automatically be established when Android Auto is launched, and you will not be able to make connection manually.
- Your vehicle is not equipped with an intercom function. If you want to use the intercom function, use the intercom function of your headset.
- Some local governments prohibit the use of a headset by the operator of a motor vehicle. Always obey applicable laws and regulations.

Phone Pairing

You can establish a *Bluetooth*® connection in two ways.


- [Visible]: Search from the device.
- [Phone Pairing]: Search from the system.

This function is disabled while the vehicle is in motion.

- 1 Enable the *Bluetooth*® function on your device.

▶ For details, refer to the instruction manual of your device.

- 2 Select [Bluetooth], and then press the **ENT** switch.

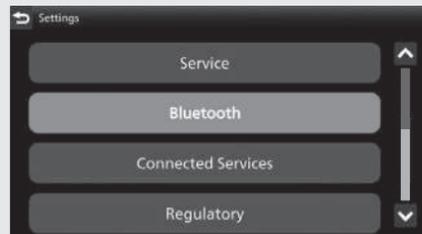

Audio System (Continued)

- 3 Select [Bluetooth], and then press the **ENT** switch to [ON] (enable) the function.



[Visible]

- 4 Select [Visible], and then press the **ENT** switch to [ON] (enable) the function.



- 5 Tap "Honda Motorcycle #*****" on the *Bluetooth*® setting menu of the target device.
 - ▶ The part of ***** is different letter for each vehicle.
- 6 When a request message appears on the target device, tap "Pair."


- 7 The device name and Passkey appear on the screen. Select [Yes], and then press the **ENT** switch.



- 8 When the pairing is complete, the name of the paired device are displayed. Icon status:

 : Phone function connected

 : Music function connected

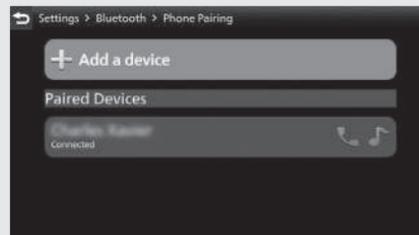

- 9 Return to the riding information, previous screen or Home screen. ➡ **P.40**
- You can also perform the above settings by using the touch screen.


Audio System (Continued)

[Phone Pairing]



- 4 Select [Phone Pairing], and then press the **ENT** switch.

- 5 Select [+Add a device], and then press the **ENT** switch.

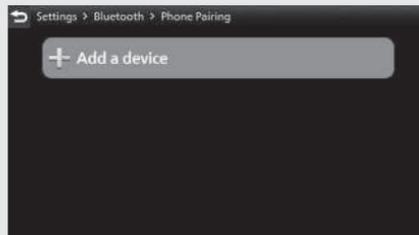


- 6 The names of the detected device are displayed.
- ▶ If many *Bluetooth*® devices are detected, the target device may be detected under the list, scroll down the list.

- 7 Select a target device name, and then press the **ENT** switch.



- 8 Select [Yes], and then press the **ENT** switch.

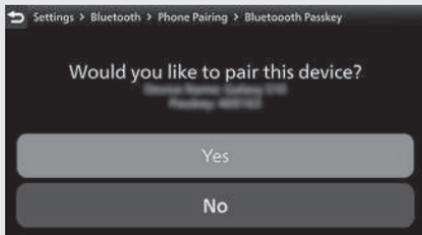

- 9 When a request message appears on the target device, tap "Pair."
- 10 When the pairing is complete, the name of the paired device are displayed. Icon status:



: Phone function connected



: Music function connected



- 11 Return to the riding information, previous screen or Home screen. ➡ **P.40**

Audio System *(Continued)*


You can also perform the above settings by using the touch screen.

To disconnect the phone: ➡ P.149

Headset Pairing

This function is disabled while the vehicle is in motion.

- 1 Enable the *Bluetooth*® function on your device.
 - ▶ For details, refer to the instruction manual of your device.
- 2 Select [Bluetooth], and then press the **ENT** switch.

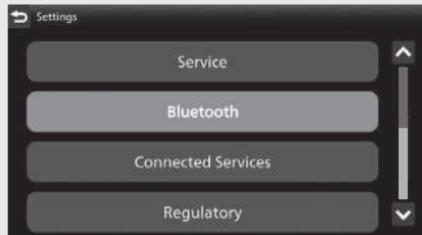


- 3 Select [Bluetooth], and then press the **ENT** switch to [ON] (enable) the function.



- 4 Select [Headset Pairing], and then press the **ENT** switch.



- 5 Select [+ Add a device], and then press the **ENT** switch.

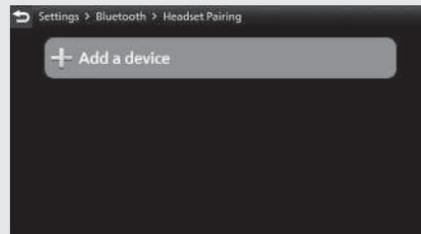

- 6 The names of the detected device are displayed.
- ▶ If many *Bluetooth*® devices are detected, the target device may be detected under the list, scroll down the list.

Audio System *(Continued)*

- 7 Select a target device name, and then press the **ENT** switch.



- 8 When the pairing is complete, device name is displayed.

Rider	When pairing rider headset
Passenger	When pairing passenger headset



- 9 Return to the riding information, previous screen or Home screen. ➡ **P.40**
- You can also perform the above settings by using the touch screen.

To disconnect the headset: ➡ **P.149**

To Reconnect a Paired Device Automatically


When the ignition switch is turned **I** (On) position, the system reconnects with registered devices automatically.

- ▶ If the system finds multiple paired devices, the system will reconnect with the device that was connected last.
- ▶ After reconnecting, the song that was last played will be played automatically.

To Connect/Disconnect Available Functions Individually

Depending on the connected device, this function may not be able to establish a connection.

- 1 Select [Bluetooth], and then press the **ENT** switch.

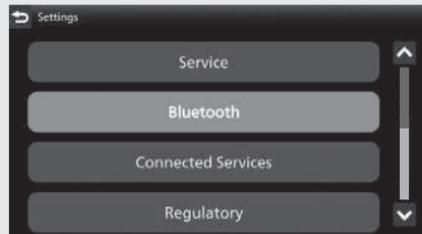


Audio System *(Continued)*


To connect functions:

2 [Phone Pairing]

1. Select [Phone Pairing], and then press the **ENT** switch to enter the setting menu.

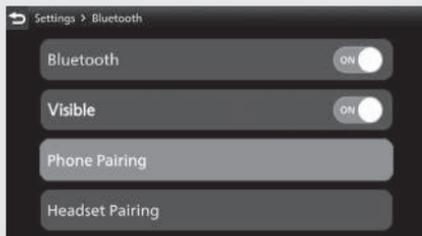

2. Select the paired device, and then press the **ENT** switch.

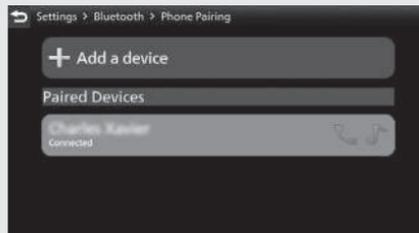


3. Select [Connect a Phone] or [Connect Music], and then press the **ENT** switch to [ON] (enable) the function.




- 2 [Headset Pairing]

1. Select [Headset Pairing], and then press the **ENT** switch to enter the setting menu.

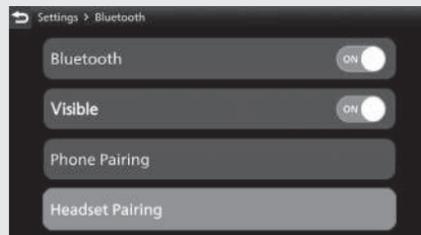


Audio System *(Continued)*

2. Select the paired device, and then press the **ENT** switch.

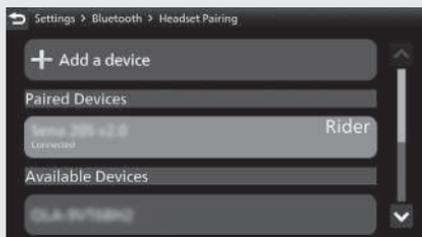

3. Select [Designate as a Rider] or [Connect Headset], and then press the **ENT** switch to [ON] (enable) the function.

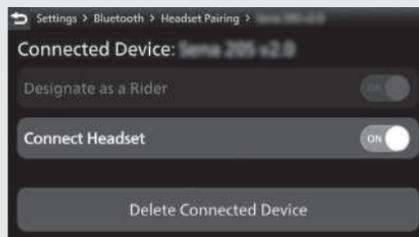


- 3 Return to the riding information, previous screen or Home screen. ➡ **P.40**
You can also perform the above settings by using the touch screen.

To disconnect functions:

- 2 [Phone Pairing]
 1. Select [Phone Pairing], and then press the **ENT** switch to enter the setting menu.



2. Select the paired device, and then press the **ENT** switch.

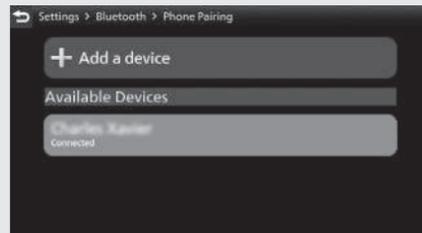

Audio System *(Continued)*

3. Select [Connect a Phone] or [Connect Music], and then press the **ENT** switch to [OFF] (disable) the function.




2 [Headset Pairing]


1. Select [Headset Pairing], and then press the **ENT** switch to enter the setting menu.



2. Select the paired device, and then press the **ENT** switch.

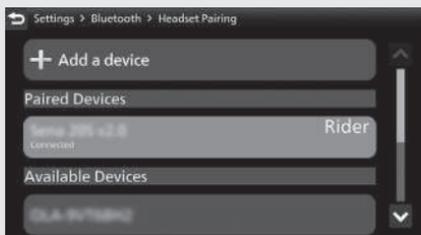

3. Select [Designate as a Rider] or [Connect Headset], and then press the **ENT** switch to [OFF] (disable) the function.

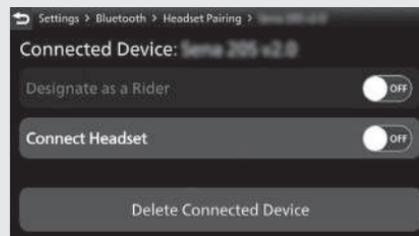

- 3 Return to the riding information, previous screen or Home screen. ➡P.40
You can also perform the above settings by using the touch screen.


Audio System *(Continued)*

To Delete Connected Device

- 1 Select [Bluetooth], and then press the **ENT** switch.



- 2 Select [Phone Pairing] or [Headset Pairing], and then press the **ENT** switch to enter the setting menu.

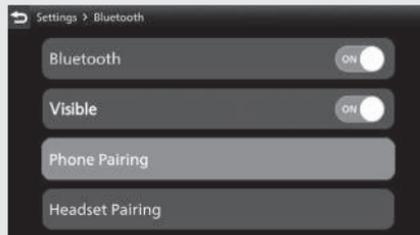

- 3 Select the paired device, and then press the **ENT** switch.

- 4 Select [Delete Connected Device], and then press the **ENT** switch.



- 5 The name of the device disappears from the screen.



- 6 Return to the riding information, previous screen or Home screen. ➔ **P.40**

You can also perform the above settings by using the touch screen.

Audio System (Continued)

Playing Audio


The audio system can play music stored on a device connected via *Bluetooth*®.

[3] Album title

[2] Artist name

[1] Song title

[5] Progress bar

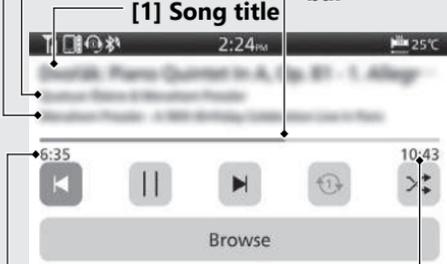

[4] Play time

[6] Total time

Screen Information


The information displayed on the screen differs depending on the connected device and the type of file being played back.

The system supports ID3 tag information. If a track does not have an ID3 tag, the song title or file name is displayed.


- [1] Song title
- [2] Artist name
- [3] Album title (Folder name)
- [4] Play time
- [5] Progress bar
- [6] Total time

To Play a Track

- 1 Connect the device you want to play from.
Bluetooth® setting: ➔ P.149
- 2 Select [Media], and then press the **ENT** switch.

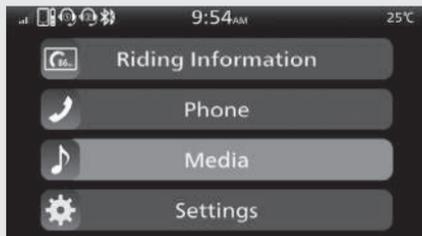

- 3 Select **▶**, and then press the **ENT** switch.

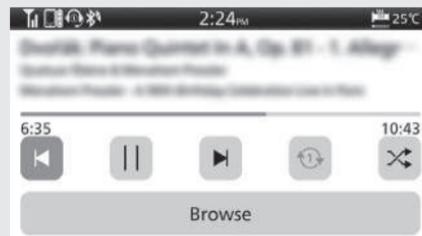

- 4 Return to the riding information, previous screen or Home screen. ➔ P.40
You can also perform the above settings by using the touch screen.

To Pause a Track

Select **||**, and then press the **ENT** switch.
You can also perform the above settings by using the touch screen.

Audio System *(Continued)*

To Change a Track

- To skip to the next song: Press the  skip switch.
- To move rapidly within a track: Press and hold the  skip switch.
- To go back to the beginning of the current or previous song: Press the  goes back switch.
- To move rapidly within a track: Press and hold the  goes back switch.

You can also perform the above settings by using the touch screen.

To Select the Play Mode

You can select repeat and random modes. The audio play mode status icon or colour of the audio play mode status icon changes.



Cycles through the play modes as follows:
Select , and then press the **ENT** switch.



(Black) No repeat mode: No repeat.



(Blue) Album repeat play mode:
Repeats all tracks in the current
playlist ([Artists], [Albums] or
[Songs], etc.).



(Blue) Track repeat play mode:
Repeats the current track.

Select , and then press the **ENT** switch.



(Black) Normal play mode: Plays
tracks in original order.



(Blue) Random play mode: Plays
tracks randomly.

You can also perform the above settings by
using the touch screen.

Audio System *(Continued)*

Handsfree Calling

Using **Bluetooth®** Handsfree Calling

Bluetooth® handsfree calling allows you to make and receive phone calls using your vehicle's audio system, without handling your mobile phone.


To use the handsfree calling, you need a *Bluetooth®* compatible mobile phone and *Bluetooth®* headsets.

- You cannot operate the handsfree calling functions by the touch screen while the vehicle is in motion.
- If *Bluetooth®* connection is unstable due to surrounding conditions or radio wave conditions, the handsfree calling functions may not be available.

- While talking, you may be hard to hear due to wind noise during running or external noise. In that case, try to change the position of the microphone or to adjust the windscreen height. **➡ P.263**

Preparation

- 1 Connect with the paired mobile phone.
 ➔ **P.141**
 ▶ The phonebook is updated after every connection. Call history is updated after every connection or call.
- 2 Connect the paired rider headset. ➔ **P.146**
- 3 Select [Phone], and then press the **ENT** switch.

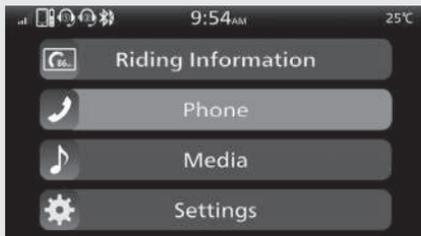

- 4 Return to the riding information, previous screen or Home screen. ➔ **P.40**
 You can also perform the above settings by using the touch screen.

Making a Call

You can make calls by inputting a phone number or by using the phonebook, call history or speed dial entries.

To change the call mode, push **◀** or **▶** on the **◀ ▶** sel left/right switch.

Changes the call modes as follows:

[Call History] ⇄ [Speed Dial] ⇄ [Contacts]
 ⇄ [Dial Number] ⇄ [Settings]

- Certain manual functions are disabled while the vehicle is in motion. You cannot select a greyed-out option until the vehicle is stopped.
- Only previously stored speed dial entries and call history can be called while the vehicle is in motion.

To adjust the phone volume: ➔ **P.91**

Audio System *(Continued)*

To Make a Call Using the Call History [Call History]

You can make a call using the call history while the vehicle is in motion.

Call history displays the last 30 dialed, received, or missed calls.



- 1 Select [Call History].
- 2 Select the phone number you want to call, and then press the **ENT** switch.

 (blue): Dialed call

 (blue): Received call

 (red): Missed call

- 3 To end the call, push forward the  voice control switch on the left handlebar.
 - ▶ The same action can be done by selecting [End Call] on the screen.
- 4 Return to the riding information, previous screen or Home screen. **➡ P.40**

You can also perform the above settings by using the touch screen.


To Make a Call Using a Speed Dial Entry [Speed Dial]

You can make a call using the speed dial while the vehicle is in motion.

To make a call using the speed dial, you need to store the speed dial number in advance. ➔P.168

Up to 4 speed dial numbers can be stored.

- ① Select [Speed Dial].
- ② Select a person you want to call, and then press the [ENT] switch.
Dialling starts automatically.

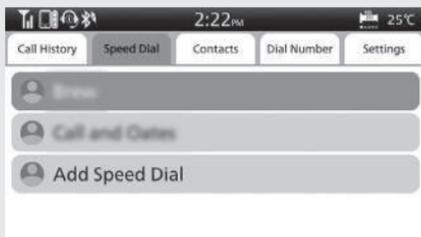

- ③ To end the call, push forward the  voice control switch on the left handlebar.
▶ The same action can be done by selecting [End Call] on the screen.
- ④ Return to the riding information, previous screen or Home screen. ➔P.40


You can also perform the above settings by using the touch screen.

Audio System *(Continued)*

To Make a Call Using the Phonebook [Contacts]

This function is disabled while the vehicle is in motion.

- ① Stop the vehicle.
- ② Select [Contacts].
- ③ The phonebook is stored alphabetically.
Select a name, and then press the **ENT** switch.
- ④ Select the phone number you want to call, and then press the **ENT** switch.

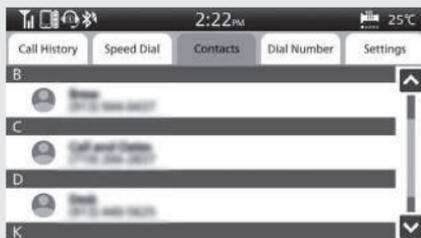

- ⑤ To end the call, push forward the  voice control switch on the left handlebar.
▶ The same action can be done by selecting [End Call] on the screen.
- ⑥ Return to the riding information, previous screen or Home screen. **➡P.40**

You can also perform the above settings by using the touch screen.

To Make a Call Using a Phone Number [Dial Number]

This function is disabled while the vehicle is in motion.

- 1 Select [Dial Number].
- 2 Press the ▲ sel switch or ▼ sel switch or push ◀ or ▶ on the ◀ ▶ sel left/right switch to enter a number, and then press the ENT switch to set the number.
 - ▶ When using [+]: Select [0], and then press and hold the ENT switch.

- 3 Select [CALL], and then press the ENT switch to make a call.
 - ▶ To cancel the call, press the ENT switch.
 - ▶ When making a call 1 second after the ENT switch pressed: Select [+ Wait], and then press the ENT switch.
 - ▶ When making a call 2 seconds after the ENT switch pressed: Select [+ 2 sec], and then press the ENT switch.



Audio System *(Continued)*


- ④ To end the call, push forward the  voice control switch on the left handlebar.
 - ▶ The same action can be done by selecting [End Call] on the screen.
- ⑤ Return to the riding information, previous screen or Home screen. 

You can also perform the above settings by using the touch screen.

To Store a Phone Number in the Speed Dial List


Speed dial numbers can be stored.

- ① Select [Speed Dial].
- ② Select [Add Speed Dial], and then press the  switch.

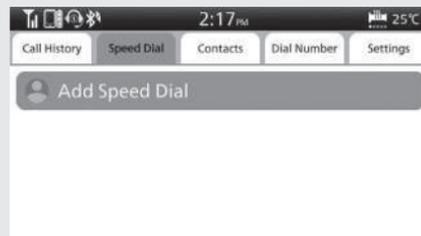

- ③ The phonebook appears.


- Select the phone number you want to store, and then press and hold the **ENT** switch. The phone number will be stored in the speed dial list.

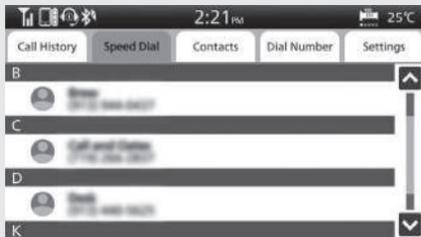

- Return to the riding information, previous screen or Home screen. ➡ **P.40**
You can also perform the above settings by using the touch screen.


To Delete a Stored Speed Dial Number

- Select [Settings].
- Select the [Edit Speed Dial], and then press the **ENT** switch.

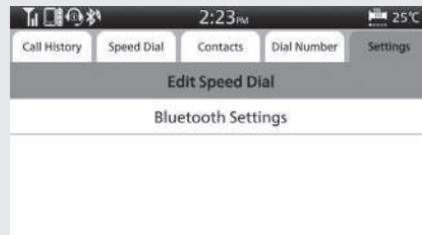

Audio System *(Continued)*


- 3 Select the phone number you want to delete, and then press and hold the **ENT** switch.

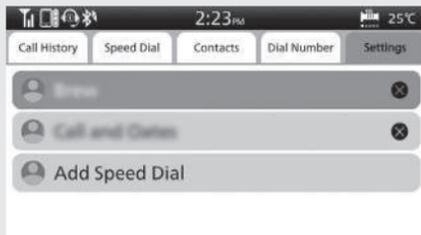

- 4 Return to the riding information, previous screen or Home screen. ➔ **P.40**
- You can also perform the above settings by using the touch screen.

Receiving a Call

When there is an incoming call, an audible notification sounds and the Incoming Call screen appears.

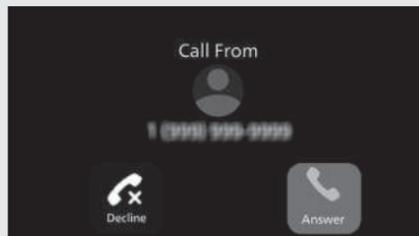

Ring Tone


If the connected mobile phone supports “in band ring tone”, the ring tone stored on the phone sounds automatically while receiving a call.

If “in band ring tone” is not supported, the ring tone stored in the audio system sounds.

To Receive a Call

When a call comes in, push forward the  on the voice control switch on the left handlebar to receive the call.

- The same action can be done by selecting [Answer] on the screen.

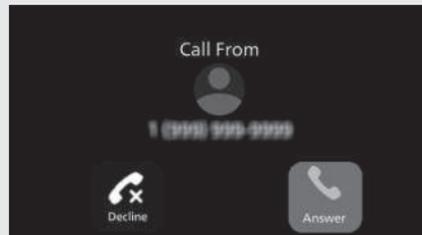


To adjust the phone volume:  P.91

Audio System *(Continued)*

To Decline a Call

When a call comes in, push forward and hold the  voice control switch on the left handlebar to reject a call.


- The same action can be done by selecting [Decline] on the screen.

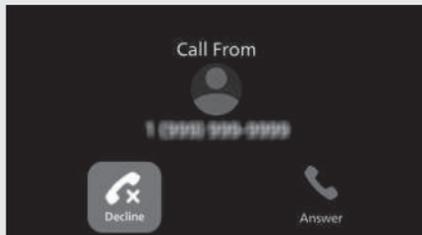

To End a Call

While talking, push forward the  voice control switch on the left handlebar to end the call.

- The same action can be done by selecting [End Call] on the screen.

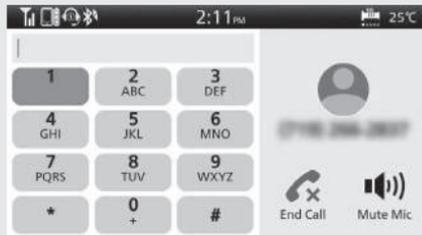

Apple CarPlay

If you connect an Apple CarPlay-compatible iPhone to the system via USB, you can use the multi-information display, instead of the iPhone display, to make phone calls, listen to music, view maps (navigation), and access messages.

- Only iPhone 5 or newer versions with iOS 10 or later are compatible with Apple CarPlay.
- Park your vehicle in a safe place before connecting your iPhone to Apple CarPlay and when launching any compatible apps.
- In no event shall Honda be liable for any damage or trouble that occurs in the use of iPhone.
- If a mobile network communication is unstable due to surrounding conditions or signal strength conditions, Apple CarPlay functions may not be available.
- To use Apple CarPlay, a headset connection is necessary. If headset connection is broken due to headset battery depletion or communication failure, Apple CarPlay cannot be used until the connection is restored.
- You cannot operate Apple CarPlay by the touch screen while the vehicle is in motion.

Audio System *(Continued)*

- Application and menu items displayed on the screen may differ depending on the connected device and iOS version.
- While connected to Apple CarPlay, calls are only made through Apple CarPlay. If you want to make a call with *Bluetooth*® handsfree calling, disconnect the USB cable from your iPhone and connect your iPhone via *Bluetooth*®.
- For details on countries and regions where Apple CarPlay is available, as well as information pertaining to function, refer to the Apple homepage.
- Apple CarPlay is a trademark of Apple Inc.

To connect the paired device:

➡ P.141

Apple CarPlay Operating Requirements & Limitations

Apple CarPlay requires a compatible iPhone with an active cellular connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay performance or functionality.

It is possible to use 3rd party apps if they are compatible with Apple CarPlay. Refer to the Apple homepage for information on compatible apps.

Use of User and Vehicle Information


The use and handling of user and vehicle information transmitted to/from your iPhone by Apple CarPlay is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

Audio System *(Continued)*

To Setup Apple CarPlay

Use of Apple CarPlay will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay experience. You will need to consent to the sharing of this information on the screen.

- 1 Pair the headsets. ➔ **P.146**
 - 2 Connect your iPhone using a certified cable to the USB socket. ➔ **P.182**
 - ▶ If the following screen is displayed, Apple CarPlay can not be used, but USB power can be supplied.
1. Select [OK], and then press the **ENT** switch.

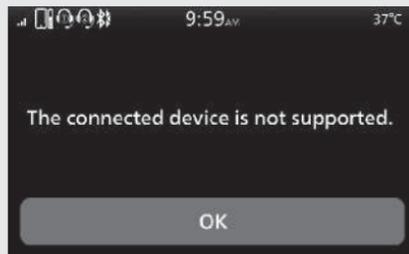

To enable Apple CarPlay: ➔ **P.178**

- 3 When the disclaimer message appears on the screen, select [Enable], and then press the **[ENT]** switch.
- ▶ Set [Remember My Choice] to ON so that you will not be asked the next time you connect.



[Enable] when [Remember My Choice] is [OFF]: Allows only once.
(Prompt shows again next time.)

[Enable] when [Remember My Choice] is [ON]: Allows anytime.
(Prompt does not show again.)

[Disable] when [Remember My Choice] is [OFF]: Does not allow this consent.

[Disable] when [Remember My Choice] is [ON]: Does not allow anytime.
(Prompt does not show again.)

- 4 Enable the Apple CarPlay setting. ➔ **P.178**
- 5 Apple CarPlay menu screen appears.


You can also perform the above settings by using the touch screen.

To display the prompt: ➔ **P.180**


Audio System *(Continued)*

To Enable or Disable Apple CarPlay


- 1 Select [Connected Services], and then press the **ENT** switch.

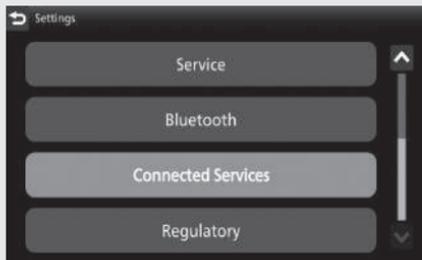

- 2 Select [Apple CarPlay], and then press the **ENT** switch.

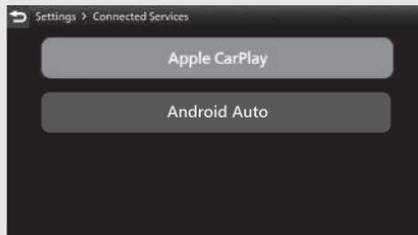

- 3 Select a target device name, and then press the **ENT** switch.

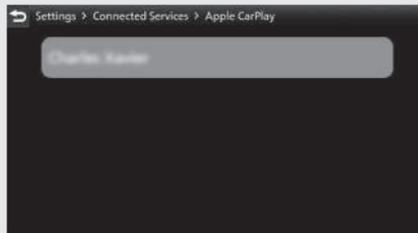

To enable Apple CarPlay:

- 4 Select [Enable Apple CarPlay], and then press the **ENT** switch to [ON] (enable) the function.



- 5 Return to the riding information, previous screen or Home screen. ➡ **P.40**
You can also perform the above settings by using the touch screen.

To disable Apple CarPlay:

- 4 Select [Enable Apple CarPlay], and then press the **ENT** switch to [OFF] (disable) the function.




- 5 Return to the riding information, previous screen or Home screen. ➡ **P.40**
You can also perform the above settings by using the touch screen.


Audio System *(Continued)*

To Select Ask On or Ask Off of the Apple CarPlay disclaimer Screen


- 1 Select [Connected Services], and then press the **ENT** switch.

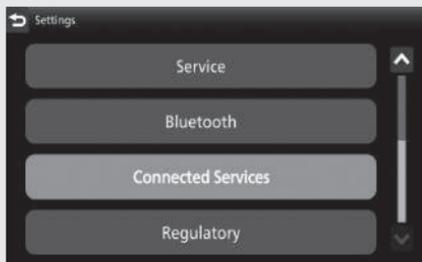

- 2 Select [Apple CarPlay], and then press the **ENT** switch.

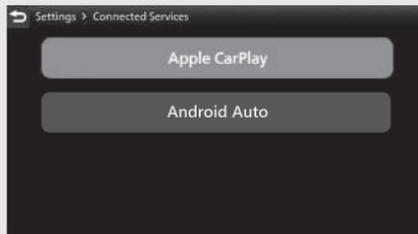

- 3 Select a target device name, and then press the **ENT** switch.

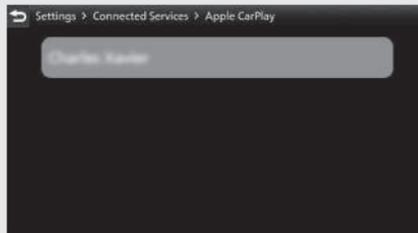

To ask on connection:

- 4 Select [Ask on Connection], and then press the **ENT** switch to [ON] (ask on) the function.



- 5 Return to the riding information, previous screen or Home screen. ➡ **P.40**
You can also perform the above settings by using the touch screen.

To ask off connection:

- 4 Select [Ask on Connection], and then press the **ENT** switch to [OFF] (ask off) the function.



- 5 Return to the riding information, previous screen or Home screen. ➡ **P.40**
You can also perform the above settings by using the touch screen.

Audio System *(Continued)*

To Connect Your iPhone

- Do not leave your device in the vehicle (under the front seat or under the rear seat etc.). High heat will damage it.
- We recommend backing up your data before playing it.
- iPhone can be charged with the USB cable when the ignition switch is in the **I** (On) position. The charging time may be longer than usual.
- We recommend covering your devices with an audio pouch, or soft fabric or cover to protect them from damage.
- Be careful to not get the USB connector wet.
- Do not connect with a hub.
- Do not connect incompatible devices.
- If the audio system does not recognise the iPhone, try reconnecting it a few times or reboot the device.


To connect your iPhone: ➔ **P.221**

To Disconnect Your iPhone

You can disconnect your iPhone at any time. Make sure to follow the device's instructions on how to disconnect the device from the cable.

Apple CarPlay Menu


Apple CarPlay menu screen

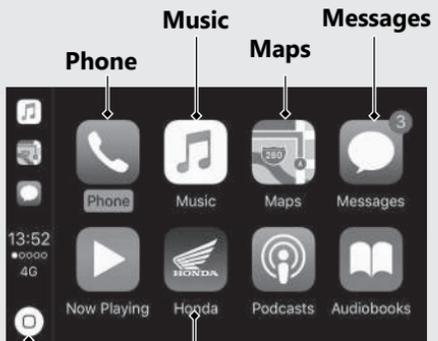

Go back to Apple CarPlay menu screen

Go back to Home screen

Home screen

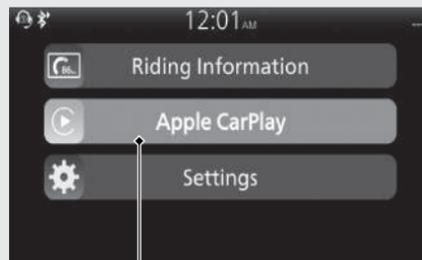

Go to Apple CarPlay menu screen

Audio System *(Continued)*

Phone

Access the contact list, make phone calls, or listen to voice mail.

Music

Play music stored on your iPhone.

Maps

Display Apple CarPlay map and use the navigation function just as you would on your iPhone.

Messages

Check and reply to text messages, or have messages read to you.

Honda

Go back to the Home screen.



Go back to the Apple CarPlay menu screen.

Operating Apple CarPlay with Siri

To activate Siri, pairing with device such as a headset (for rider) must be paired. ➔P.146


To Activate Siri

- 1 Start Apple CarPlay. ➔P.176
- 2 Unlock your iPhone and enable Siri.
 - ▶ For details, refer to the iPhone User Guide, etc.
- 3 Push forward the  voice control switch on the left handlebar.

Audio System *(Continued)*

- 4 Say a voice command through the paired headset.
Siri may not be recognised correctly due to the effect of wind noise during running or external noise. In that case, try to change the position of the microphone or to adjust the windscreen height.

➔ P.263

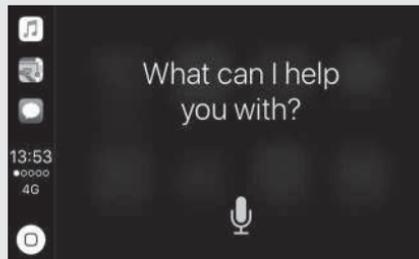

Please visit www.apple.com/ios/siri.

To Deactivate Siri

Push forward the  voice control switch on the left handlebar.

You can also perform the above settings by using the touch screen.

Siri is a trademark of Apple Inc.

Android Auto

If you connect an Android Auto compatible Android phone to the system via USB port, you can use the multi-information display, instead of the Android phone display, to access the Phone, Google Maps (Navigation), Notification centre, and voice search functions.

When you first use Android Auto, you will be required to complete initial setting on your phone screen. We recommend that you complete this initial setting while safely parked before using Android Auto.

- To use Android Auto, you need to download the Android Auto app from Google Play to your smartphone.
- Only Android 5.0 or later versions are compatible with Android Auto. Bluetooth A2DP cannot be used with Android phone.

- Park your vehicle in a safe place before connecting your Android phone to Android Auto and when launching any compatible apps.
- In no event shall Honda be liable for any damages or troubles that occur in the use of Android phone.
- If a mobile network communication is unstable due to surrounding conditions or signal strength conditions, Android Auto functions may not be available.
- To use full functions of Android Auto, a headset connection is necessary.

To connect the paired device:



- You cannot operate Android Auto by the touch screen while the vehicle is in motion.
- Application and menu items displayed on the screen may differ depending on the connected device and Android version.

Continued 187

Audio System *(Continued)*

- When your Android phone is connected to Android Auto, it is not possible to use the *Bluetooth*® Audio.
- You can connect your Android phone using a certified cable to the USB connector directly. Make sure to use the factory USB cable that came with your device.
- The audio system may not be compatible with the latest model and the latest OS version.
- For details on countries and regions where Android Auto is available, as well as information pertaining to function, refer to the Android Auto homepage.
- Google, Android, Google Maps, Google Play and Android Auto are trademarks of Google LLC.

Android Auto Operating Requirements & Limitations

Android Auto requires a compatible Android phone with an active cellular connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto functionality and services.

Honda cannot and does not provide any warranty or guarantee of future Android Auto performance or functionality.

It is possible to use 3rd party apps if they are compatible with Android Auto. Refer to the Android Auto homepage for information on compatible apps.

Use of User and Vehicle Information

The use and handling of user and vehicle information transmitted to /from your phone by Android Auto is governed by the Google's Privacy Policy.

Audio System *(Continued)*


To Setup Android Auto

When you connect an Android phone to the unit via the USB port, Android Auto is automatically initiated.

Use of Android Auto will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your Android phone to enhance the Android Auto experience. You will need to consent to the sharing of this information on the screen.

- 1 Pair the headsets. ➡ P.146
- 2 Connect your Android phone to the USB socket. ➡ P.221
 - ▶ Only initialise Android Auto when you safely parked. When Android Auto first detects your phone, you will need to set up your phone so that auto pairing is possible.
Refer to the instruction manual that came with your phone.

- 3 When the disclaimer message appears on the screen, select [Enable] and then **[ENT]** switch.
- ▶ Set [Remember My Choice] to ON so that you will not be asked the next time you connect.

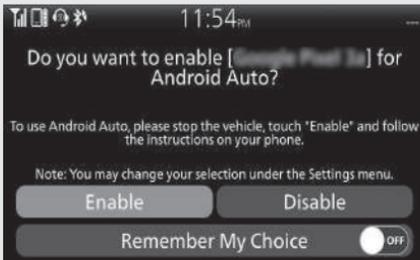

- [Enable] when [Remember My Choice] is [OFF]:** Allows only once.
(Prompt shows again next time.)
- [Enable] when [Remember My Choice] is [ON]:** Allows anytime.
(Prompt does not show again.)

[Disable] when [Remember My Choice] is [OFF]: Does not allow this consent.

[Disable] when [Remember My Choice] is [ON]: Does not allow anytime.
(Prompt does not show again.)

- 4 Enable the Android Auto setting **➔P.187**
- 5 Android Auto screen appears.
- 6 To appear App launcher screen, select and then press **[ENT]** switch.


You can also perform the above settings by using the touch screen.

To display the prompt: **➔P.187**


Audio System *(Continued)*

To Enable or Disable Android Auto


- 1 Select [Connected Services], and then press the **ENT** switch.

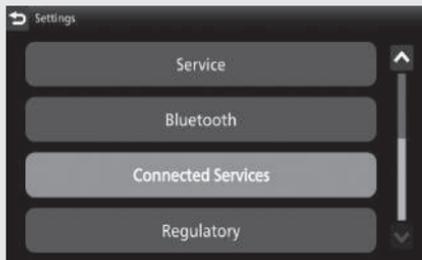

- 2 Select [Android Auto], and then press the **ENT** switch.

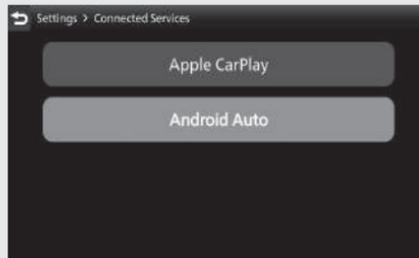


- 3 Select a target device name, and then press the **ENT** switch.

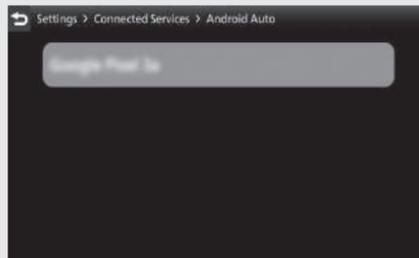

To enable Android Auto:


- 4 Select [Enable], and then press the **ENT** switch to [ON] (enable) the function.

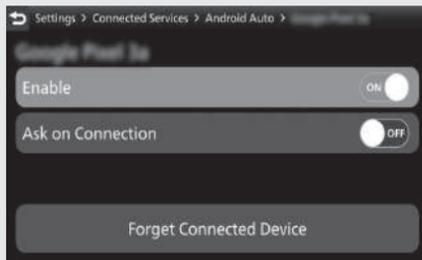

- 5 Return to the riding information, previous screen or Home screen. ➡P.40
You can also perform the above settings by using the touch screen.

To disable Android Auto:

- 4 Select [Enable], and then press the **ENT** switch to [OFF] (disable) the function.

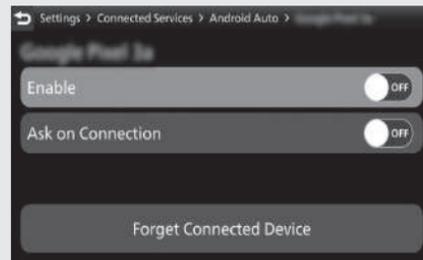


- 5 Return to the riding information, previous screen or Home screen. ➡P.40
You can also perform the above settings by using the touch screen.


Audio System *(Continued)*

To Select Ask On or Ask Off of the Android Auto disclaimer Screen


- 1 Select [Connected Services], and then press the **ENT** switch.

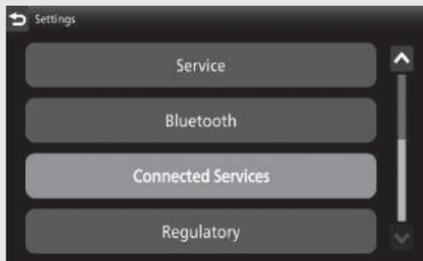

- 2 Select [Android Auto], and then press the **ENT** switch.

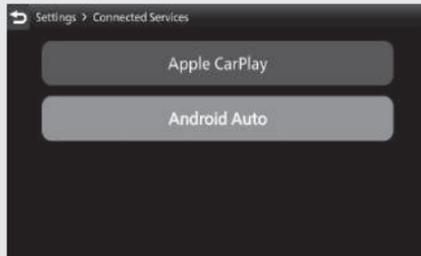


- 3 Select a target device name, and then press the **ENT** switch.

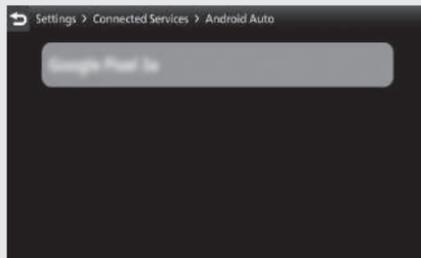

To ask on connection:


- 4 Select [Ask on Connection], and then press the **ENT** switch to [ON] (ask on) the function.

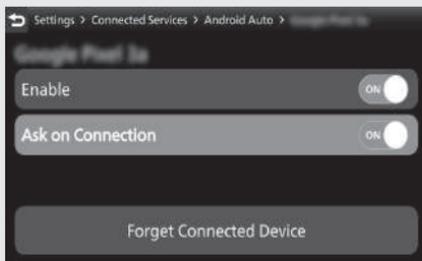

- 5 Return to the riding information, previous screen or Home screen. ➡P.40
You can also perform the above settings by using the touch screen.

To ask off connection:

- 4 Select [Ask on Connection], and then press the **ENT** switch to [OFF] (ask off) the function.

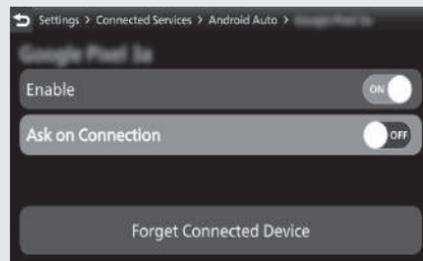

- 5 Return to the riding information, previous screen or Home screen. ➡P.40
You can also perform the above settings by using the touch screen.

Audio System *(Continued)*

To Connect Your Android phone

- Do not leave your device in the vehicle (under the front seat or under the rear seat etc.). High heat will damage it.
- We recommend backing up your data before playing it.
- Android phone can be charged with the USB cable when the ignition switch is in the **I** (On) position. The charging time may be longer than usual.
- We recommend covering your devices with an audio pouch, or soft fabric or cover to protect them from damage.
- Be careful to not get the USB connector wet.
- Do not connect with a hub.
- If the audio system does not recognise the Android phone, try reconnecting it a few times or reboot the device.

To connect your Android phone:




To Disconnect Your Android phone

You can disconnect your Android phone at any time.


Make sure to follow the device's instructions on how to disconnect the device from the cable.

App launcher screen

App launcher screen

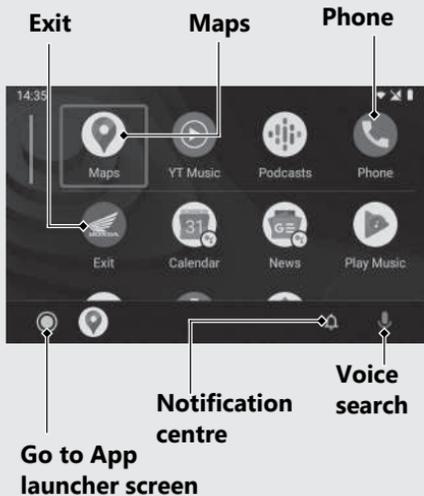

Home screen

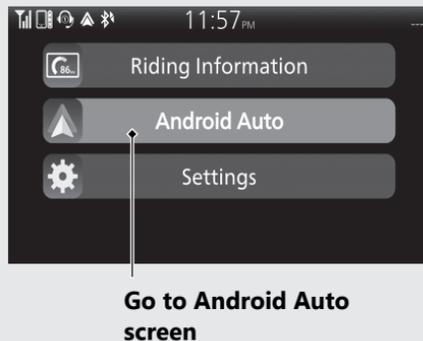

Audio System *(Continued)*

Maps

Display Google Maps and use the navigation function just as you would with your Android phone. When the vehicle is in motion, it is not possible to make keyboard entries. Stop the vehicle in a safe location to undertake a search or provide other inputs.

Phone

Make and receive phone calls as well as listen to voice mail.



Voice search

Operate Voice search.



Notification centre

See recent calls, messages, and alerts.

Go to App launcher screen

The app launcher opens.


Exit

Go back to the Home Screen.

Operating voice search

To activate the voice search, pairing with device such as a headset must be paired.

➔ P.146

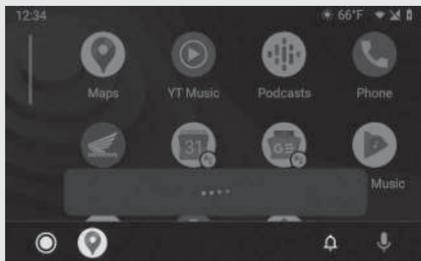

Push forward the  voice control switch on the left handlebar to operate Android Auto with your voice.

You can also activate the voice search by selecting the  icon.

Voice search may not be recognized correctly due to the effect of wind noise

during running or external noise. In that case, try to change the position of the microphone or to adjust the windscreen height.

Below are examples of commands you can give with voice recognition :


- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto homepage.

Starting the Engine

NT1100A

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

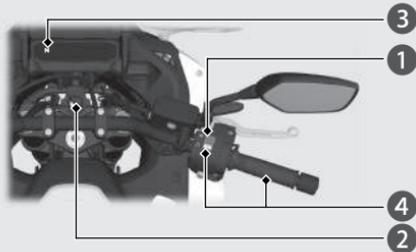


NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the **○** (Off) position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and rewinding the engine can damage the engine and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discoloration.
- The engine will not start if the throttle is fully open.

- 1 Make sure the engine stop switch is in the **○** (Run) position.
- 2 Turn the ignition switch to the **I** (On) position.
- 3 Shift the transmission to Neutral (**N** indicator come on). Alternatively, pull in the clutch lever to start your vehicle with the transmission in gear so long as the side stand is raised.
- 4 Press the **START**  button with the throttle completely closed.
 - ▶ If you cannot start the engine, open the throttle slightly (about 3 mm (0.1 in), without freeplay) and press the **START**  button.

About 3 mm (0.1 in), without freeplay

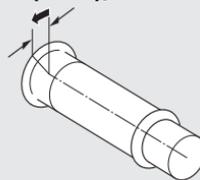

If the engine does not start:


- ① Open the throttle fully and press the **START**  button for 5 seconds.
- ② Repeat the normal starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying steps ① & ② again.

If Engine Will Not Start  **P.265**

Starting the Engine (Continued)

NT1100D

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

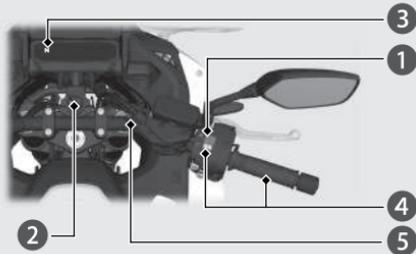


NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the  (Off) position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and rewing the engine can damage the engine, and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discoloration.
- The engine will not start if the throttle is fully open.

- 1 Make sure the engine stop switch is in the  (Run) position.
- 2 Turn the ignition switch to the  (On) position.
- 3 Check the transmission in Neutral ( indicator come on).
- 4 Press the **START**  button with the throttle completely closed.
 - ▶ If you cannot start the engine, open the throttle slightly (about 3 mm (0.1 in), without freeplay) and press the **START**  button.

About 3 mm (0.1 in), without freeplay

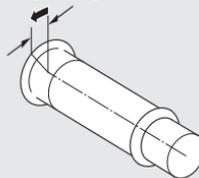

- 5 Make sure the parking brake lever is released before riding. → **P.119**

| If Engine Does Not Start ➡P.201

When you stop the engine

- ① To stop the engine, shift the transmission to Neutral (N indicator comes on).
 - ▶ If you turn the ignition switch to the ○ (Off) position when the vehicle in gear, the engine will shut off with the clutch disengaged.
- ② Turn the ignition switch to the ○ (Off) position.
- ③ Set the parking brake when you park the vehicle. ➡P.119

Shifting Gears

NT1100A

Your vehicle transmission has 6 forward gears in a one-down, five-up shift pattern.



NT1100D

Your vehicle is equipped with an automatically controlled 6-speed transmission. It can be shifted automatically (by AT MODE) or manually (by MT MODE).

If you put the vehicle in gear with the side stand down, the engine will shut off.

Dual Clutch Transmission


NT1100D

In order to respond to rider demands in a broad range of situations, the transmission is equipped with three operating modes, AT MODE (including D mode for regular operation and three levels of S mode for sporty riding); and MT MODE (MT mode for a 6-speed manual operation), which delivers the same shift feel as a manual transmission.

- ▶ Always use the recommended tyres and sprockets to ensure correct Dual Clutch Transmission operation.

The Dual Clutch Transmission system runs a self check immediately after starting the engine.

"—" appears in the gear position indicator window for a few seconds, then goes out. While "—" appears, you cannot shift into gear.

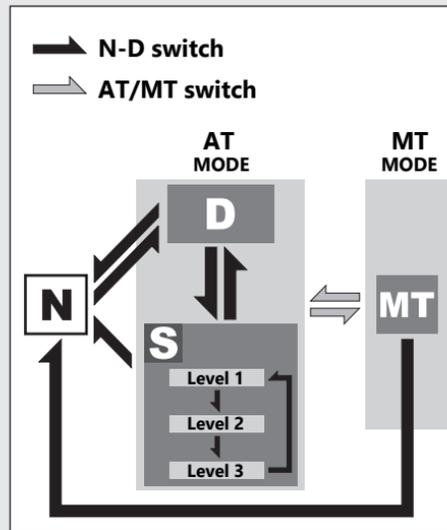

Shifting Gears *(Continued)*

Neutral (N): Neutral is selected automatically when you turn the ignition switch to the **I** (On) position.

If neutral is not selected when you turn the ignition switch to the **I (On) position.**

- ▶ Turn the ignition switch to the **O** (Off) position and then to the **I** (On) position again.
- ▶ If neutral is still not selected after turning the ignition switch to the **O** (Off) position, and then to the **I** (On) position again. **➡ P.271**
You may hear (click) noises when the transmission shifts to Neutral (N). This is normal.

When you can change between N and D

- ▶ Vehicle is stopped and the engine is idling.
- ▶ Throttle is completely closed. It is not possible to change from Neutral to D mode while the throttle is applied.
- ▶ You cannot change between N and D mode while the wheels are rotating.
- ▶ Side stand is raised.

NOTICE

To prevent clutch damage, do not use the throttle to keep the vehicle stopped uphill.

AT MODE: In this mode the gears are shifted automatically according to your riding conditions.

And also using the shift up switch (+) or shift down switch (-), you can temporarily shift up or down in AT MODE by using the shift switch. These switches are convenient when you want to temporarily down-shift in front of a curve, etc. ➔ **P.210**

You can choose between two modes within AT MODE: D mode and S mode.

D mode (AT): This is the standard mode when AT MODE is selected. Select D mode for regular operation and efficient fuel economy.

S mode (AT): Select this mode while riding in AT MODE when you need more power, such as when overtaking, climbing hills, pulling away.

S mode has three levels of adjustment.

MT MODE: MT MODE (6-speed manual operation) You can choose between 6 gears in this mode.

Shifting Gears *(Continued)*

Changing between Neutral and AT MODE/MT MODE

Changing from Neutral (N) to AT MODE

The D mode indicator comes on, D is shown in the gear position indicator and first gear is selected.

Press the **D-S** side of the N-D switch (①).

Changing from AT or MT MODE to Neutral

Press **N** on the N-D switch (②).

Changing between D mode and S mode while in AT MODE


Press the **D-S** side of the N-D switch. The S or D is shown in the gear position indicator. (③, ④).

Changing between AT MODE and MT MODE

Press the AT/MT switch (⑤).

The AT indicator goes out while MT MODE is selected (⑥).


The gear position is displayed on the gear position indicator while MT MODE is selected (⑥).

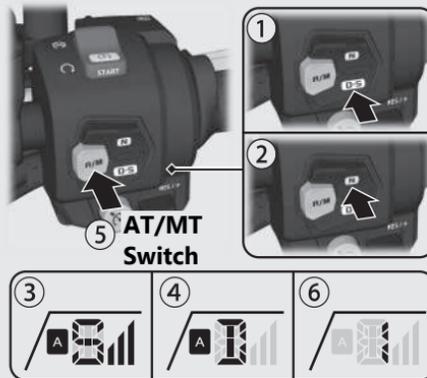

S mode level selecting while in AT MODE

While in S mode, press and hold the **D-S** side of the N-D (1) switch.


- ▶ Close the throttle completely. Then select the desired level of the S mode.

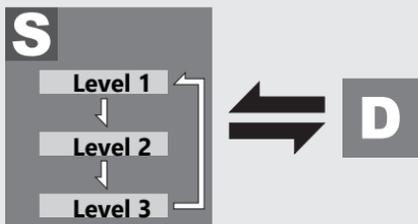

↖ Press and hold the **D-S** side of the N-D switch

➔ Press the **D-S** side of the N-D switch

N-D switch

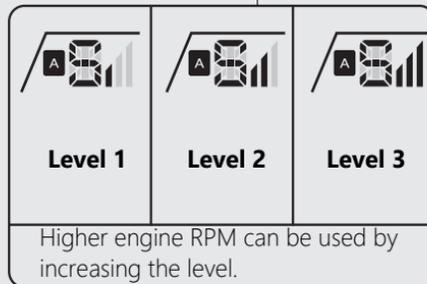

The selected level is maintained even when the ignition switch is turned to the **○** (Off) position, or transmission is switched to out of S mode.

Shifting Gears *(Continued)*

Riding in MT MODE

Shift up and down with the shift up switch (+) and shift down switch (-).

The selected gear is shown on the gear position indicator.

- ▶ If the MT MODE is selected, the transmission does not shift up automatically. Do not allow the engine revs to go into the red zone.
- ▶ The transmission automatically shifts down when you slow down, even in MT MODE.
- ▶ You will start from 1st gear even if MT MODE is selected.

Gear shift operation

Shifting Up:


Press the shift up switch (+) (7).

Shifting Down:

Press the shift down switch (-) (8).

You cannot continue shifting gear by keeping the shift switch pressed.

To continue shifting gear release the switch and press it again.

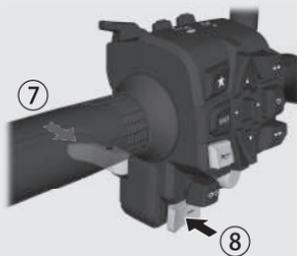

Shift Limit

You cannot downshift if the engine will exceed the rev limit.

Cruise Control

The cruise control system allows you to maintain a steady speed within a specified range.

The available speed setting range and operating gear are listed below:

NT1100A

Available Speed setting range	50 – 160 km/h (30 - 100 mph)
Operating gear	From 4th to 6th gear

NT1100D

Available Speed setting range	50 – 160 km/h (30 - 100 mph)
Operating gear	From 3rd to 6th gear

When cruise control is on, your speed will still vary slightly, particularly going up and down hills.

Cruise control is intended for use only on straight, uncongested highways. Do not use cruise control on city streets, winding roads, during bad weather, or at any other time when you need total control of the throttle.

⚠ WARNING



Improper use of the cruise control can lead to a crash in which you could be seriously hurt or killed.

Use the cruise control only when travelling on open highways in good weather.

Cruise Control *(Continued)*

To Set Cruise Control

- 1 Make sure the traveling speed and operating gear are conformed to the requirements of the system.
Any speed other than the available range will not be memorised.
- 2 Press the  cruise control main switch. (The  cruise control main indicator will come on.)
- 3 Accelerate to the desired speed.
- 4 Push the   cruise control lever to  side. (The  cruise control SET indicator will come on.) Your current travelling speed is memorised.

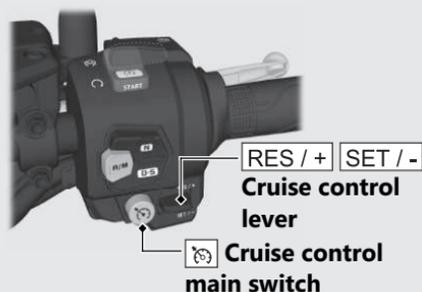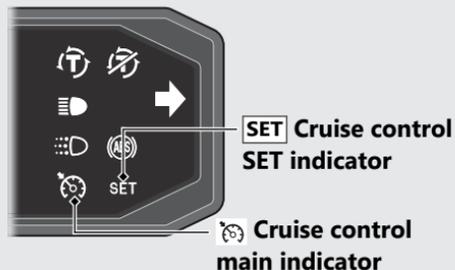

To Change the Set Speed To Fine Tune the Set Speed

- 1 Select the riding information. **→ P.40**
- 2 To increase the set speed: tap the **[RES / +]**
[SET / -] cruise control lever to **[RES / +]**
side.
To decrease the set speed: tap the
[RES / +] **[SET / -]** cruise control lever to
[SET / -] side.
- 3 The set speed is displayed in the multi-
information display.



Cruise control set speed

Each quick tap (brief push and release) on either side will change your speed by 1 km/h or 1 mph (depending on mileage meter set unit).

Any speed other than the possible setting range will not be indicated (stops at the upper or lower limit speed).

To Change the Set Speed Continuously

- To increase the set speed: push and hold the **[RES / +]** **[SET / -]** cruise control lever to **[RES / +]** side.

The system will accelerate your vehicle automatically. When you reach the desired speed, release the **[RES / +]** **[SET / -]** cruise control lever.

If the **[RES / +]** **[SET / -]** cruise control lever is pushed and held to **[RES / +]** side continuously, the set speed indicated in the multi-information display stops at the upper limit of the possible setting range.

Continued 213

Cruise Control *(Continued)*

- To decrease speed: push and hold the **RES / +** **SET / -** cruise control lever to **SET / -** side. The system will automatically slow your vehicle. When you reach the desired speed, release the **RES / +** **SET / -** cruise control lever. If the **RES / +** **SET / -** cruise control lever is pushed and held to **SET / -** side continuously, the set speed indicated in the multi-information display stops at the lower limit of the possible setting range.

To Manually Increase the Set Speed

- 1 Use the throttle to accelerate until you reach the desired speed.
- 2 Push and release the **RES / +** **SET / -** cruise control lever to **SET / -** side.

To Manually Increase Vehicle Speed

- 1 Use the throttle in the normal manner to accelerate.
- 2 To return to the set speed, close the throttle and coast without applying the brakes. The cruise system will maintain the speed you previously set.

To Cancel Cruise Control To Disengage the System

- Press the cruise control main switch. (The  cruise control main indicator goes off and the set speed will be erased from memory.)

To Temporarily Disengage the System

- 1 Perform one of the following operations to disengage the system temporarily. (SET cruise control SET indicator temporarily goes off but the set speed remains in memory.)
 - Apply the brake lever or pedal.
 - Rotate the throttle grip past the automatically closed position in the deceleration direction.
 - **NT1100A**
Disengage the clutch or operate the shift lever.
- 2 To resume cruise control:
 - If you are still over 50 km/h (30 mph), push and release the RES / + SET / - cruise control lever to RES / + side.
 - If you are under 50 km/h (30 mph), use the throttle to increase road speed above 50 km/h (30 mph) and then push and release the RES / + SET / - cruise control lever to RES / + side.

Emergency Stop Signal

Emergency stop signal activates when the system detects hard braking about 50 km/h (31 mph) or above to alert drivers behind you about sudden braking by rapidly flashing both turn signal lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.


The emergency stop signal stops operating when:

- You release the brakes.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.
- You press the hazard switch.

When the system activates:



① Hard braking

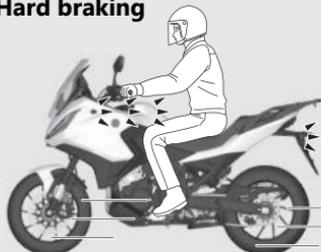

① Brakelight come on

② Both turn signals flash


② Both turn signal indicators blink

- ▶ The emergency stop signal is not a system that can prevent a possible rear-end collision caused by your hard braking. It is always recommended to avoid hard braking unless it is absolutely necessary.
- ▶ The emergency stop signal does not activate with the hazard switch pressed in.
- ▶ If the ABS stops working for a certain period during braking, the emergency stop signal may not activate at all.

DRL (Daytime Running Light)

When the headlight dimmer/passing light control switch is turned to the  position, the headlights and DRL are switched automatically according to the ambient brightness.

When it gets brighter, DRL lights up, and when it gets dark, low beam lights up and DRL decreases to the brightness of the position light.

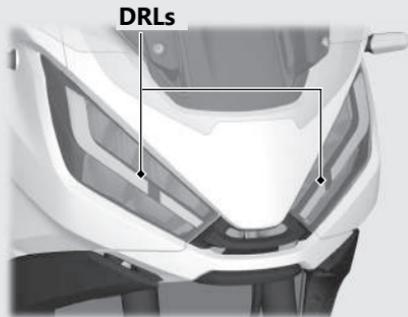

To select the DRL auto and off

Each time the ignition switch is turned to the (On) position, the DRL will automatically be set to on.


- 1 Start the engine.
- 2 Select the DRL of pop-up information using the  function sel switch.
- 3 Push forward or pull backward the  function lever to select the [AUTO] or [Dismiss] of the DRL.



 Push forward the  function lever

 Pull backward the  function lever

Refuelling

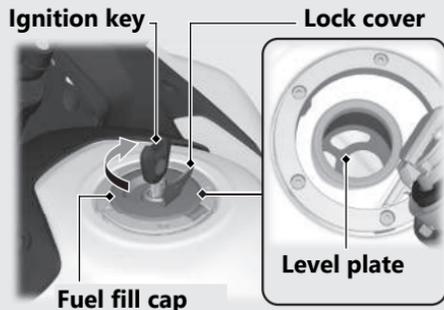

Do not fill with fuel above the level plate.

Fuel type: Unleaded petrol only

Fuel octane number: Your vehicle is designed to use Research Octane Number (RON) 91 or higher.

Tank capacity: 20.4 L (5.39 US gal, 4.49 Imp gal)

Refuelling and Fuel Guidelines ➔ P.16

Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key, and turn it clockwise to open the fuel fill cap.

Closing the Fuel Fill Cap

- 1 After refuelling, push the fuel fill cap closed until it locks.
- 2 Remove the key and close the lock cover.
 - ▶ The key cannot be removed if the fuel fill cap is not locked.

⚠WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flames away.
- Only handle fuel outdoors.
- Wipe up spills immediately.


Accessory Socket

The accessory socket is located in the left side inner panel cover.

Use accessory devices at your own risk. In no event shall Honda be liable for any damages to your accessory device when in use.

Open the cover to access the socket.

Rated capacity is
24 W (12 V, 2 A).

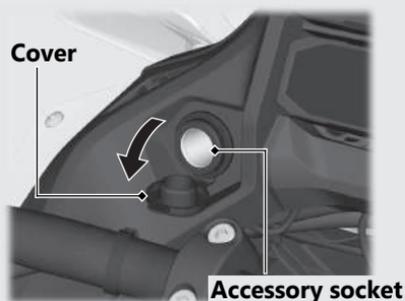

- ▶ To prevent the battery from becoming weak (or dead), keep the engine running while drawing current from the socket.
- ▶ To prevent entry of foreign matter into the socket, be sure to close the cover when the socket is not used.
- ▶ Carefully secure all connected devices, as vibration may cause damage to them or they could shift unexpectedly.

NOTICE

- Using any heat-generating accessory or improperly rated accessory can damage the socket.
- Do not use the socket in wet conditions, when or while washing or any other wet conditions as these will damage the socket.
- Do not allow the accessory's harness to become pinched or trapped.
- Do not allow the accessory's harness to interfere with the steering or controls.

USB Socket

The USB socket is located in the right side inner panel cover.

Use USB devices at your own risk. In no event shall Honda be liable for any damage to your USB device when in use.

Only USB devices within the following specifications can be connected.

Open the cover to access the socket.


Rated capacity is

7.5 W (5 V, 1.5 A).

To connect your USB device


- 1 Open the cover to access the USB socket.

USB socket

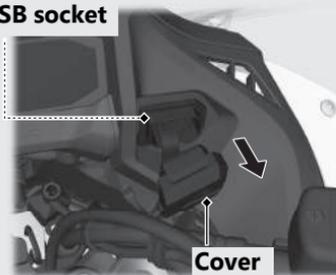

USB Socket *(Continued)*

- 2 Connect a certified USB cable to the socket.
- 3 Route the USB cable along the recess.
- 4 Pass the USB cable through the cover slit and close the cover.

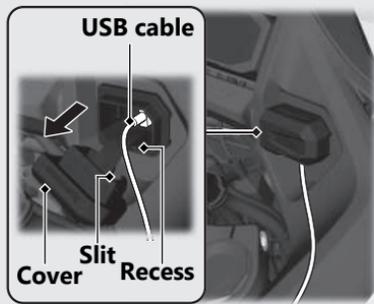

- ▶ To prevent the battery from becoming weak (or dead), keep the engine running while drawing current from the socket.
- ▶ To prevent entry of foreign matter into the socket, be sure to close the cover.
- ▶ Carefully secure all connected devices, as vibration may cause damage to them or they could shift unexpectedly.


NOTICE

- Using any heat-generating USB devices or improperly rated USB devices can damage the socket.
- Do not use the USB socket in wet conditions, when or while washing or any other wet conditions as these will damage the USB socket.
- Do not allow the USB cable to become pinched or trapped.
- Do not allow the USB cable to interfere with the steering or controls.

Storage Equipment

Helmet Holder

A helmet holder is located under the rear seat.

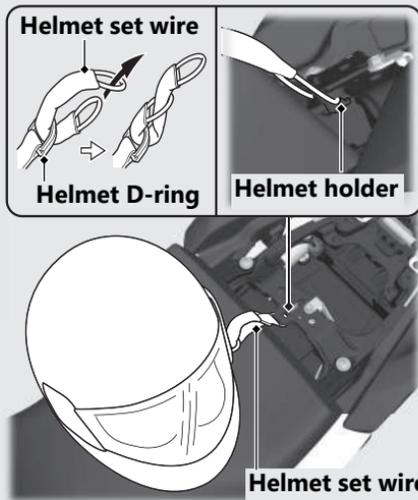

► Use the helmet holder only when parked.

Removing the rear seat ← P.245

⚠ WARNING

Riding with a helmet attached to the holder can interfere with your ability to safely operate the vehicle and could lead to a crash in which you can be seriously hurt or killed.


Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

Storage Equipment *(Continued)*

Helmet Set Wire/Document Bag/Tool Kit

The helmet set wire, document bag and tool kit are located under the front seat.

Document bag

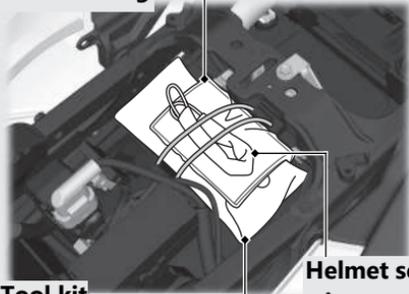

Tool kit

Helmet set wire


Removing the front seat → P.244

Fuse Puller, 5 mm Hex Wrench, Standard/Phillips Screwdriver, Screwdriver Handle

The fuse puller, 5mm hex wrench, standard/phillips screwdriver and screwdriver handle are located on the underside of the rear seat.

Standard/Phillips screwdriver

5 mm Hex wrench

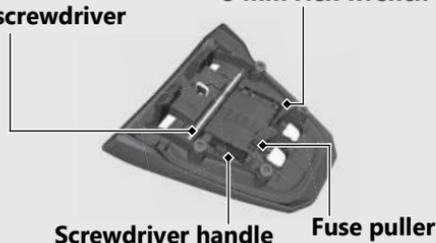

Screwdriver handle

Fuse puller

Removing the rear seat → P.245

Rear Carrier

Never exceed the maximum weight limit.

Maximum Weight: 10 kg (22 lb)

Rear carrier



Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

Importance of Maintenance	P. 227	Clutch	P. 256
Maintenance Schedule	P. 228	Throttle	P. 259
Maintenance Fundamentals	P. 231	Other Adjustments	P. 260
Tool	P. 242	Adjusting the Brake Lever	P. 260
Removing & Installing Body		Adjusting the Front Suspension	P. 261
Components	P. 243	Adjusting the Rear Suspension	P. 262
Battery	P. 243	Adjusting the Windscreen Height	P. 263
Front Seat	P. 244		
Rear Seat	P. 245		
Engine Oil	P. 246		
Coolant	P. 248		
Brakes	P. 250		
Side Stand	P. 254		
Drive Chain	P. 255		

Importance of Maintenance

Importance of Maintenance

Keeping your vehicle well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your vehicle before each ride and perform the periodic checks specified in the Maintenance Schedule.

➤ P. 228

⚠ WARNING

Improperly maintaining your vehicle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Maintenance Safety

Always read the maintenance instructions before you begin each task and make sure that you have the tools, parts, and skills required. We cannot warn of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.

- Stop the engine and remove the key.
- Place your vehicle on a firm, level surface using the side stand, centre stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.

Maintenance Schedule

Maintenance

The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance, and proper emission control.

Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your vehicle is properly maintained.

Make sure that whomever performs the maintenance completes this record.

All scheduled maintenance is considered a normal owner operating cost and will be charged to you by your dealer. Retain all receipts. If you sell the vehicle, these receipts should be transferred with the vehicle to the new owner.

Honda recommends that your dealer should road test your vehicle after each periodic maintenance is carried out.

Maintenance Schedule

Items	Pre-ride Check P. 231	Frequency*1					Annual Check	Regular Replace	Refer to page	
		x 1,000 km	1	12	24	36				48
		x 1,000 mi	0.6	8	16	24				32
Fuel Line	🔧			I	I	I	I	I	-	
Fuel Level	I								219	
Throttle Operation	🔧	I		I	I	I	I	I	259	
Air Cleaner*2	🔧				R		R		-	
Crankcase Breather*3				C	C	C	C		-	
Spark Plug	🔧				I		R		-	
Valve Clearance	🔧				I		I		-	
Engine Oil	I		R	R	R	R	R	R	-	
Engine Oil Filter			R		R		R		-	
Clutch Oil Filter*5			R		R		R		-	
Engine Idle Speed	🔧			I	I	I	I	I	-	
Radiator Coolant*4	I			I	I	I	I	I	3 Years 248	
Cooling System	🔧			I	I	I	I	I	-	
Secondary Air Supply System	🔧				I		I		-	
Evaporative Emission Control System	🔧				I		I		-	

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
- 🔧 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L : Lubricate
- R : Replace
- C : Clean

Maintenance Schedule

Items	Pre-ride Check P. 231	Frequency*1					Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	12	24	36				48
		× 1,000 mi	0.6	8	16	24				32
Drive Chain	☐	Every 1,000 km (600 mi): ☐ ☐							255	
Drive Chain Slider			☐	☐	☐	☐			-	
Brake Fluid*4	☐		☐	☐	☐	☐	☐	2 Years	250	
Brake Pads Wear	☐		☐	☐	☐	☐	☐		251	
Brake System			☐	☐	☐	☐	☐		231	
Brakelight Switch			☐	☐	☐	☐	☐		253	
Brake Lock Operation*5	↗		☐	☐	☐	☐			252	
Headlight Aim			☐	☐	☐	☐	☐		-	
Lights/Horn	☐								-	
Engine Stop Switch	☐								-	
Clutch System*6	☐		☐	☐	☐	☐	☐		-	
Side Stand	☐		☐	☐	☐	☐	☐		254	
Suspension	↗		☐	☐	☐	☐	☐		-	
Nuts, Bolts, Fasteners	↗		☐	☐	☐	☐	☐		-	
Wheels/Tyres	✂	☐	☐	☐	☐	☐	☐		238	
Steering Head Bearings	✂		☐	☐	☐	☐	☐		-	

Notes:

*1: At higher odometer readings, repeat at the frequency interval established here.

*2: Service more frequently when riding in unusually wet or dusty areas.

*3: Service more frequently when riding in rain or at full throttle.

*4: Replacement requires mechanical skill.

*5: NT1100D only

*6: NT1100A only

Maintenance Fundamentals

Pre-ride Inspection

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tyre, can be a major inconvenience.

Check the following items before you get on your vehicle:

- Fuel level - Fill fuel tank when necessary
➤ P. 219
- Throttle - Check for smooth opening and full closing in all steering positions ➤ P. 259
- Engine oil level - Add engine oil if necessary. Check for leaks ➤ P. 246
- Coolant level - Add coolant if required. Check for leaks ➤ P. 248
- Drive chain - Check condition and slack, adjust and lubricate if necessary ➤ P. 255
- Brakes - Check operation;
Front and Rear: check brake fluid level and pads wear ➤ P. 250, ➤ P. 251
- Lights and horn - Check that lights, indicators and horn function properly
- Engine stop switch - Check for proper function ➤ P. 112
- **NT1100A**
Clutch - Check operation;
Adjust freeplay if necessary ➤ P. 256
- Side stand ignition cut-off system - Check for proper function ➤ P. 254
- Wheels and tyres - Check condition, air pressure and adjust if necessary ➤ P. 238


Maintenance Fundamentals

Replacing Parts

Always use Honda Genuine Parts or their equivalents to ensure reliability and safety. When ordering coloured components, specify the model name, colour, and code mentioned on the colour label.

The colour label is attached to the rear fender under the rear seat. ➡ P. 245

Colour label

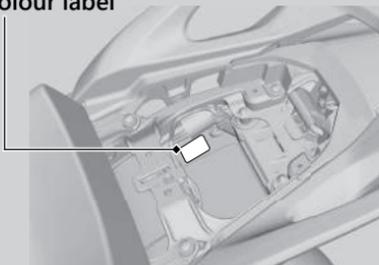

⚠WARNING

Installing non-Honda parts may make your vehicle unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your vehicle.

Maintenance Fundamentals

Battery

Your vehicle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.



This symbol on the battery means that this product must not be treated as household waste.

NOTICE

An improperly disposed of battery can be harmful to the environment and human health. Always confirm local regulations for proper battery disposal instruction.

What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
 - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
 - ▶ Remove affected clothing and wash your skin thoroughly using water.
- Electrolyte splashes into your mouth:
 - ▶ Rinse mouth thoroughly with water, and do not swallow.

⚠ WARNING

The battery gives off explosive hydrogen gas during normal operation.


A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.

Maintenance Fundamentals

Cleaning the Battery Terminals

1. Remove the battery. **▶** P. 243
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.
3. If the terminals are heavily corroded, clean and polish the terminals with a wire brush or sandpaper. Wear safety glasses.

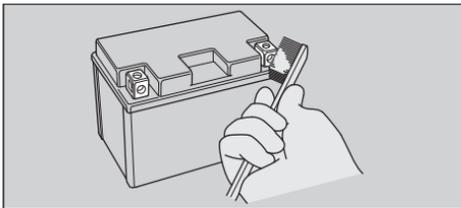

4. After cleaning, reinstall the battery. The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.

NOTICE


Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

Fuses

Fuses protect the electrical circuits on your vehicle. If something electrical on your vehicle stops working, check for and replace any blown fuses. **▶** P. 291

Inspecting and Replacing Fuses

Turn the ignition switch to the **O** (Off) position to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." **▶** P. 317

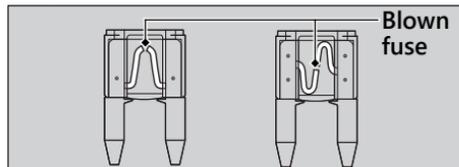

Maintenance Fundamentals

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your vehicle inspected by your dealer.

Engine Oil

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.

Selecting the Engine Oil


For recommended engine oil, see "Specifications."

➤ P. 316


If you use non-Honda engine oil, check the label to make sure that the oil satisfies all of the following standards:

- JASO T 903 standard*1: MA
- SAE standard*2: 10W-30
- API classification*3: SJ or higher

*1. The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MA classification.

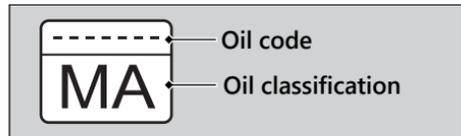

- *2. The SAE standard grades oils by their viscosity.
- *3. The API classification specifies the quality and performance rating of engine oils. Use SJ or higher oils, excluding oils marked as "Energy Conserving" or "Resource Conserving" on the circular API service symbol.

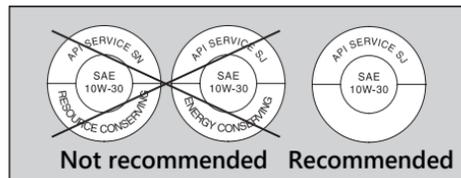

Maintenance Fundamentals

Brake Fluid

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

NOTICE

Brake fluid can damage plastic and painted surfaces.
Wipe up spills immediately and wash thoroughly.

Recommended brake fluid:

Honda DOT 4 Brake Fluid or equivalent

Drive Chain

The drive chain must be inspected and lubricated regularly. Inspect the chain more frequently if you often ride on bad roads, ride at high speed, or ride with repeated fast acceleration. ■ P. 255

If the chain does not move smoothly, makes strange noises, has damaged rollers, has loose pins, has missing O-rings, or kinks, have the chain inspected by your dealer.

Also inspect the drive sprocket and driven sprocket. If either has worn or damaged teeth, have the sprocket replaced by your dealer.



**Normal
(GOOD)**



**Worn
(REPLACE)**



**Damaged
(REPLACE)**

Maintenance Fundamentals

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.

Cleaning and Lubricating


After inspecting the slack, clean the chain and sprockets while rotating the rear wheel. Use a dry cloth with chain cleaner designed specifically for O-ring chains, or neutral detergent. Use a soft brush if the chain is dirty.

After cleaning, wipe dry and lubricate with the recommended lubricant.

Recommended lubricant:

Drive chain lubricant designed specifically for O-ring chains

If not available, use SAE 80 or 90 gear oil.

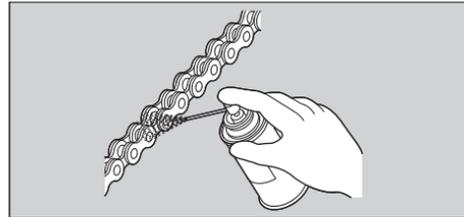

Do not use a steam cleaner, a high pressure cleaner, a wire brush, volatile solvent such as petrol and benzene, abrasive cleaner, chain cleaner or lubricant NOT designed specifically for O-ring chains as these can damage the rubber O-ring seals.

Avoid getting lubricant on the brakes or tyres.

Avoid applying excess chain lubricant to prevent spray onto your clothes and the vehicle.

Maintenance Fundamentals

Recommended Coolant

Pro Honda HP Coolant is a pre-mixed solution of antifreeze and distilled water.

Concentration:

50% antifreeze and 50% distilled water

A concentration of antifreeze below 40% will not provide proper corrosion and cold temperature protection.

A concentration of up to 60% will provide better protection in colder climates.

NOTICE

Using coolant not specified for aluminium engines or tap/mineral water can cause corrosion.

Crankcase Breathers

Service more frequently when riding in rain, at full throttle, or after the vehicle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

If the drain tube overflows, the air filter may become contaminated with engine oil causing poor engine performance.


Tyres (Inspecting/Replacing)

Checking the Air Pressure


Visually inspect your tyres and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tyres look low. Always check air pressure when your tyres are cold.

Maintenance Fundamentals

Even if the direction of the valve stem is changed, do not return it to the original position. Have your vehicle inspected by your dealer.

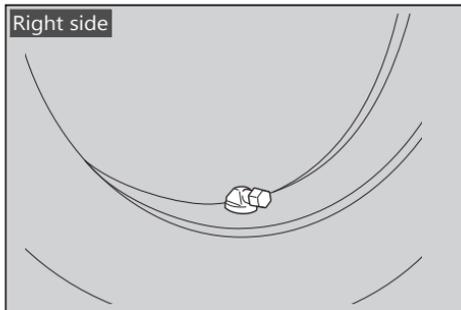


Inspecting for Damage

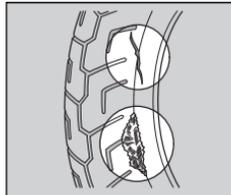

Inspect the tyres for cuts, slits, or cracks that expose fabric or cords, or nails or other foreign objects embedded in the side of the tyre or the tread.

Also inspect for any unusual bumps or bulges in the side walls of the tyres.

Inspecting for Abnormal Wear

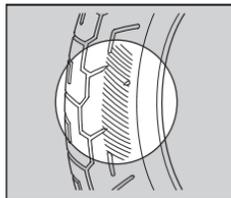


Inspect the tyres for signs of abnormal wear on the contact surface.

Maintenance Fundamentals

Inspecting Tread Depth

Inspect the tread wear indicators. If they become visible, replace the tyres immediately. For safe riding, you should replace the tyres when the minimum tread depth is reached.

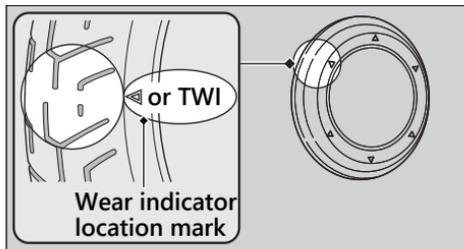

Maintenance

WARNING

Riding on tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Germany

German law prohibits use of tyres whose tread depth is less than 1.6 mm.

Maintenance Fundamentals

Have your tyres replaced by your dealer.
For recommended tyres, air pressure and minimum tread depth, see "Specifications."

➤ P. 316

Follow these guidelines whenever you replace tyres.

- Use the recommended tyres or equivalents of the same size, construction, speed rating, and load range.
- Have the wheel balanced with Honda Genuine balance weights or equivalent after the tyre is installed.
- Do not install a tube inside a tubeless tyre on this vehicle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tyres on this vehicle. The rims are designed for tubeless tyres, and during hard acceleration or braking, a tube-type tyre could slip on the rim and cause the tyre to rapidly deflate.

WARNING

Installing improper tyres on your vehicle can adversely affect handling and stability, and can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tyres recommended in this owner's manual.

Tool

The tool kit and helmet set wire are stored under the front seat. ➤ P. 224

You can perform some roadside repairs, minor adjustments and parts replacement with the provided tools.

- BFR adjuster
- 10 × 14 mm Open end wrench
- 14 × 17 mm Open end wrench
- Helmet set wire


The 5 mm hex wrench, standard/phillips screwdriver, screwdriver handle and fuse puller are located on the underside of the rear seat.

➤ P. 224

- 5 mm Hex wrench
- Standard/Phillips screwdriver
- Screwdriver handle
- Fuse puller

Removing & Installing Body Components

Battery

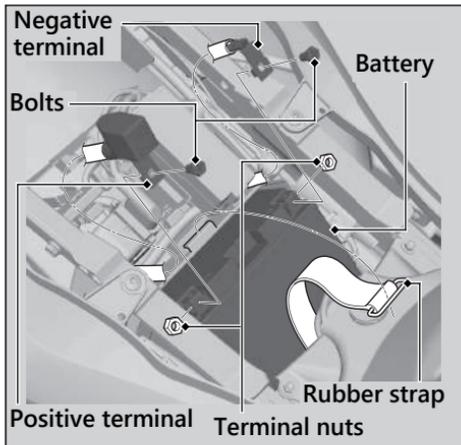

Removal

Make sure the ignition switch is in the  (Off) position.

1. Remove the front seat.  P. 244
2. Unhook the rubber strap.
3. Disconnect the negative \ominus terminal from the battery.
4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery, taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight.


Make sure the clock information is correct after the battery is reconnected.  P. 86

For proper handling of the battery, see "Maintenance Fundamentals."  P. 233
"Battery Goes Dead."  P. 290

Removing & Installing Body Components ► Front Seat

Front Seat

Maintenance

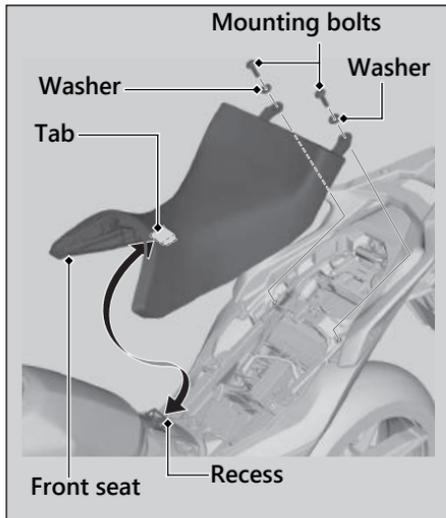

Removal


1. Remove the rear seat. ► P. 245
2. Remove the mounting bolts and washers, and then pull the front seat back and up.

Installation

1. Install the front seat while inserting the tab into the recess.
2. Install the washers and mounting bolts.
3. Tighten the mounting bolts securely. Make sure that the seat is locked securely in position by pulling it up lightly.

Removing & Installing Body Components ► Rear Seat

Rear Seat

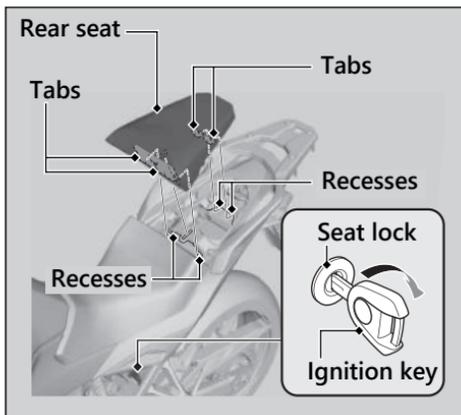

Removal

1. Insert the ignition key into the seat lock.
2. Turn the ignition key clockwise, then push the rear seat forward and up.

Installation

1. Insert the tabs into the recesses.
2. Push down on the front of the rear seat until it locks in place.
 - Make sure that the seat is locked securely in position by pulling it up lightly.


The seat locks automatically when closed. Take care not to lock your key in the compartment under the rear seat.

Engine Oil

Checking the Engine Oil

Maintenance

1. Place your vehicle on its side stand on a firm, level surface.
2. If the engine is cold, idle the engine for 3 to 5 minutes.
3. Turn the ignition switch to the **O** (Off) position and wait for 2 to 3 minutes.
4. Place your vehicle in an upright position on a firm, level surface.
5. Remove the dipstick and wipe it clean.
6. Insert the dipstick until it seats, but don't screw it in.
7. Check that the oil level is between the upper level and lower level marks on the dipstick.
8. Securely install the dipstick.

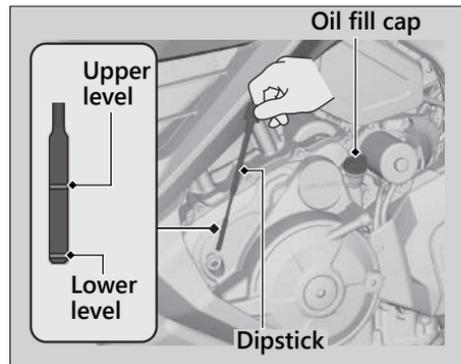

Adding Engine Oil

If the engine oil is below or near the lower level mark, add the recommended engine oil.

► P. 235, ► P. 316

1. Remove the oil fill cap. Add the recommended oil until it reaches the upper level mark.
 - Place your vehicle in an upright position on a firm, level surface when checking the oil level.
 - Do not overfill above the upper level mark.
 - Make sure no foreign objects enter the oil filler opening.
 - Wipe up any spills immediately.

2. Securely reinstall the oil fill cap.

NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil. They may affect lubrication and clutch operation.

For the recommended oil and oil selection guidelines, see “Maintenance Fundamentals.”



► P. 235

Coolant

Checking the Coolant

Check the coolant level in the reserve tank while the engine is cold.

1. Place your vehicle on a firm, level surface.
2. Hold your vehicle in an upright position.
3. Check that the coolant level is between the UPPER level and LOWER level marks on the reserve tank.

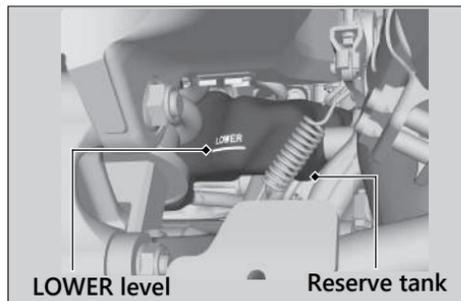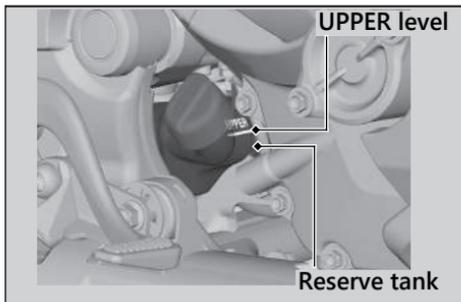

If the coolant level is dropping noticeably or the reserve tank is empty, you likely have a serious leak. Have your vehicle inspected by your dealer.

Adding Coolant

If the coolant level is below the LOWER level mark, add the recommended coolant (P. 238) until the level reaches the UPPER level mark. Add fluid only from the reserve tank cap and do not remove the radiator cap.


Coolant ► Adding Coolant

1. Remove the reserve tank cap and add fluid while monitoring the coolant level.
 - Do not overfill above the UPPER level mark.
 - Make sure no foreign objects enter the reserve tank opening.
2. Securely reinstall the reserve tank cap.

⚠WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, potentially scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

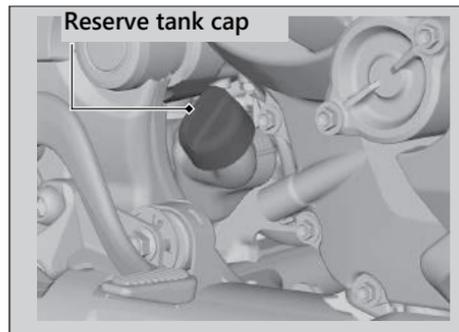


Brakes

Checking Brake Fluid

1. Place your vehicle in an upright position on a firm, level surface.
2. **Front** Check that the brake fluid reservoir is horizontal and that the fluid level is above the LOWER level mark.
Rear Check that the brake fluid reservoir is horizontal and that the fluid level is between the LOWER level and UPPER level marks.

If the brake fluid level in either reservoir is below the LOWER level mark or the brake lever and pedal freeplay becomes excessive, inspect the brake pads for wear. If the brake pads are not worn, you most likely have a leak. Have your vehicle inspected by your dealer.

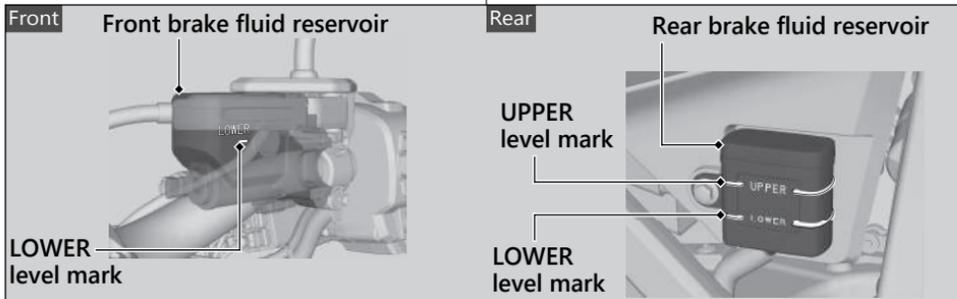


Brakes ► Inspecting the Brake Pads

Inspecting the Brake Pads

Check the condition of the brake pad wear indicators.

Front The pads need to be replaced if a brake pad is worn to the bottom of the indicator.

Rear The pads need to be replaced if a brake pad is worn to the indicator.

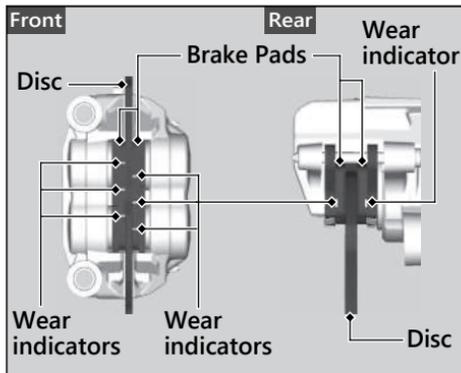

1. **Front** Inspect the brake pads from in front of the brake caliper.
 - Always inspect both left and right brake calipers.
2. **Rear** Inspect the brake pads from the rear right of the vehicle.

If necessary have the pads replaced by your dealer.


Always replace both left and right brake pads at the same time.

Brakes ► Checking the Parking Brake

Checking the Parking Brake

NT1100D

Maintenance

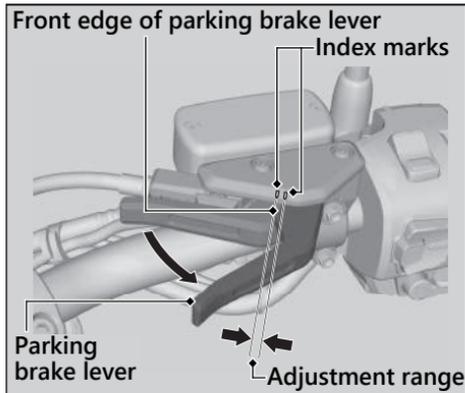


1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.
3. Rotate the rear wheel by hand and slowly pull the parking brake lever.
4. Check that the front edge of the parking brake lever is within the adjustment range (between the index marks), when the brake begins to take hold.

If the brake begins to take hold at out of the adjustment range, have the brake adjusted by your dealer.

Brakes ► Adjusting the Brakelight Switch

Adjusting the Brakelight Switch


Check the operation of the brakelight switch. Hold the brakelight switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

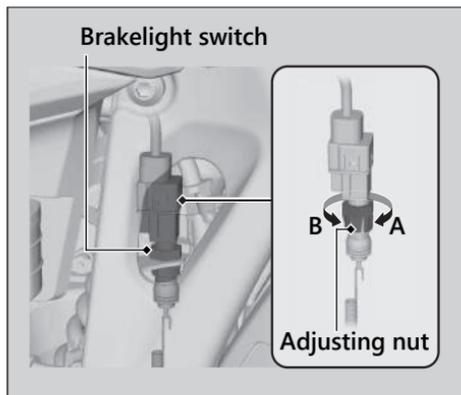

Side Stand

Checking the Side Stand

Maintenance

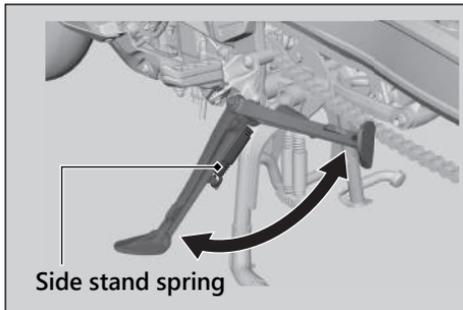

1. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.
2. Check the spring for damage or loss of tension.

3. **NT1100A**
Sit on the vehicle, shift the transmission to Neutral, and raise the side stand.
NT1100D
Sit on the vehicle and raise the side stand.
4. **NT1100A**
Start the engine, pull the clutch lever in, and shift the transmission into gear.
NT1100D
Start the engine and press the **D-S** side of N-D switch to switch the transmission into D mode.
5. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your vehicle inspected by your dealer.

Drive Chain

Inspecting the Drive Chain Slack


Check the drive chain slack at several points along the chain. If the slack is not constant at all points, some links may be kinked and binding. Have the chain inspected by your dealer.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.
3. Push the lower part of the drive chain down and check the chain slack between the drive chain and swing-arm at the end of the drive chain slider.

Drive chain slack:

70 - 75 mm (2.8 - 3.0 in)

- ▶ Do not ride your vehicle if the slack exceeds 80 mm (3.1 in).

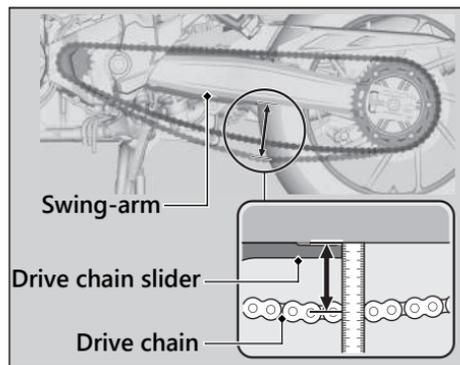

4. Rotate the rear wheel and check that the chain moves smoothly.
5. Inspect the sprockets. ▶ P. 236
6. Clean and lubricate the drive chain. ▶ P. 237

Clutch

Checking the Clutch


NT1100A

Checking the Clutch Lever Freeplay

Check the clutch lever freeplay.

Freeplay at the clutch lever:

10 - 20 mm (0.4 - 0.8 in)

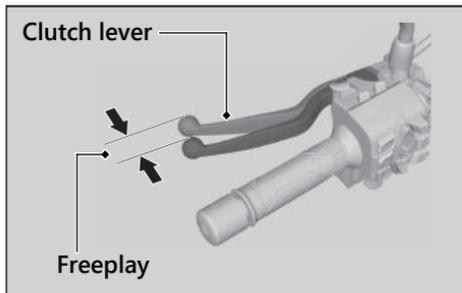

Check the clutch cable for kinks or signs of wear. If necessary have it replaced by your dealer.

Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.

NOTICE

Improper freeplay adjustment can cause premature clutch wear.

Clutch ► Adjusting the Clutch Lever Freeplay


Adjusting the Clutch Lever Freeplay

NT1100A

Upper Adjustment

Attempt adjustment with the upper clutch cable adjuster first.

1. Loosen the upper lock nut.
2. Turn the upper clutch cable adjuster until the freeplay is 10 - 20 mm (0.4 - 0.8 in).
3. Tighten the upper lock nut and check the freeplay again.

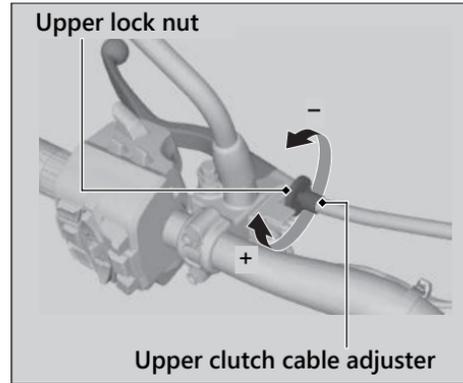


Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower clutch cable adjusting nut.

Clutch ► Adjusting the Clutch Lever Freeplay

1. Loosen the upper lock nut and turn the upper clutch cable adjuster all the way in (to provide maximum freeplay). Tighten the upper lock nut.
2. Loosen the lower lock nut.
3. Turn the lower clutch cable adjusting nut until the clutch lever freeplay is 10 - 20 mm (0.4 - 0.8 in).
4. Tighten the lower lock nut and check the clutch lever freeplay.
5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the vehicle does not creep. Gradually release the clutch lever and open the throttle. Your vehicle should move smoothly and accelerate gradually.

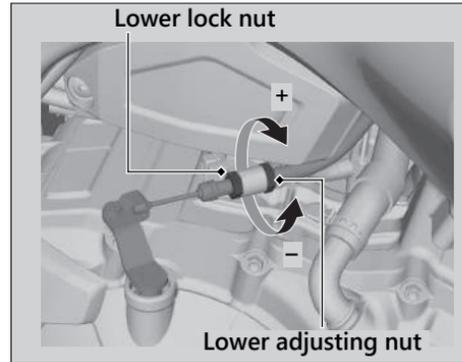


If proper adjustment cannot be obtained or the clutch does not work correctly, see your dealer.

Throttle

Checking the Throttle

With the engine off, check that the throttle rotates smoothly from fully closed to fully open. If the throttle does not move smoothly, close automatically, have the vehicle inspected by your dealer.

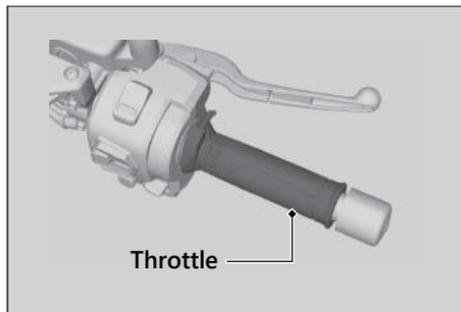

Other Adjustments

Adjusting the Brake Lever


You can adjust the distance between the tip of the brake lever and handle grip.

Adjustment method

Turn the adjuster until the numbers align with the index mark while pushing the lever forward in the desired position. After adjustment, check that the lever operates correctly before riding.

NOTICE

Do not turn the adjuster beyond its natural limit.

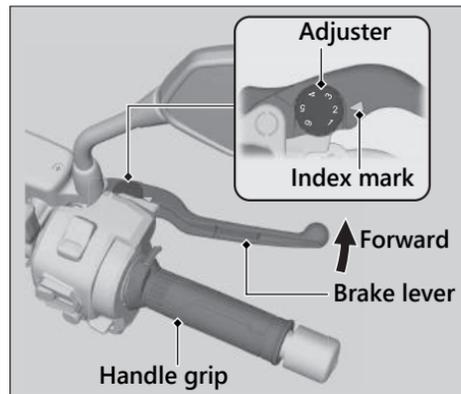

Other Adjustments ► Adjusting the Front Suspension

Adjusting the Front Suspension

I Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn the adjuster using the BFR adjuster provided in the tool kit. ■ P. 242


The spring preload adjuster has 20 turns. Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft).

NT1100A

The standard position is the 7 turns turns from the full soft position.

NT1100D

The standard position is the 10 turns turns from the full soft position.

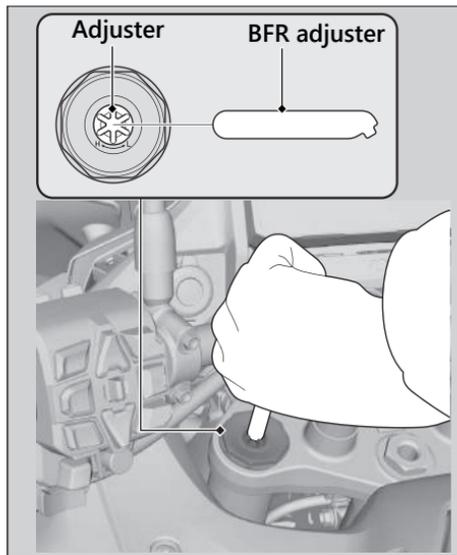

NOTICE

Do not turn the adjuster beyond its limits.

Other Adjustments ► Adjusting the Rear Suspension


Adjusting the Rear Suspension

I Spring Preload

You can adjust the spring preload by the adjuster knob to suit the load or the road surface. The spring preload adjuster has 35 position or more. Turn the clockwise to increase spring preload (high), or turn counterclockwise to decrease spring preload (low).

Turn the adjuster counterclockwise (low) until it will no longer turn (lightly seat). Turn the adjuster clockwise (high) until it clicks. This click is position 0.

The standard position is 7 clicks from the minimum setting.

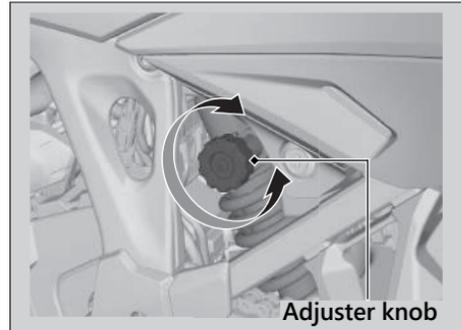

NOTICE

Do not turn the adjuster beyond its limits.

NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.

Other Adjustments ► Adjusting the Windscreen Height


Adjusting the Windscreen Height

You can adjust the windscreen height 1 of 5 positions.

The standard position is 1.

► Do not adjust the windscreen while riding.

1. Grasp the windscreen on both sides.
2. Move the windscreen up or down until it clicks into the desired position.
 - When you move the windscreen, apply the load to the right and left side evenly.

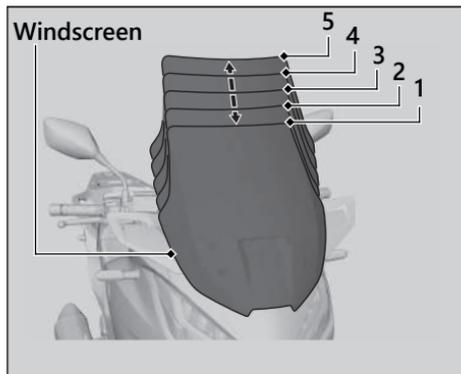

3. Check the windscreen adjustment for smooth operation and check the sliding area for looseness.

If you find the windscreen is significantly loose or you notice that the windscreen is loose while riding, have your vehicle inspected by your dealer.

Troubleshooting

Engine Will Not Start (HISS indicator stays on).....	P. 265
Overheating (Segment H flashes in coolant temperature gauge)	P. 266
Warning Indicators On or Flashing.....	P. 267
Low Oil Pressure Indicator.....	P. 267
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL).....	P. 268
ABS (Anti-lock Brake System) Indicator	P. 269
Torque Control Indicator.....	P. 270
If the “-” Indicator is Blinking in the Gear Position Window While Riding.....	P. 271
Other Warning Indications	P. 272
Fuel Gauge Failure Indication.....	P. 272
Coolant Temperature Gauge Failure Indication	P. 273
Handle Grip Heater Failure Indication	P. 273
Tyre Puncture	P. 274
Audio System Trouble.....	P. 275
Electrical Trouble.....	P. 290
Battery Goes Dead.....	P. 290
Burned-out Light Bulb	P. 290
Blown Fuse.....	P. 291

Engine Will Not Start (HISS indicator stays on)

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence.  P. 200
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.
- Check if the HISS indicator stays on.
 - ▶ Turn the ignition switch to the  (Off) position and remove the key. Reinsert the key and turn the ignition switch to the  (On) position. If the indicator still stays on, check the following:
Check if there is no another HISS key (including spare key) close to the ignition switch.

Check if there are no any metallic seals or stickers on the key.

If the HISS indicator still stays on, have your vehicle inspected by your dealer.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence.  P. 200
- Make sure engine stop switch is in the  (Run) position.  P. 112
- Check for a blown fuse.  P. 291
- Check for a loose battery connection ( P. 243) or battery terminal corrosion ( P. 233).
- Check the condition of the battery.  P. 290

If the problem continues, have your vehicle inspected by your dealer.

Overheating (Segment H flashes in coolant temperature gauge)

The engine is overheating when the following occurs:

- All segments turn red and the segment H flashes in the coolant temperature gauge.
- Acceleration becomes sluggish.

If this occurs, pull safely to the side of the road and perform the following procedure.

Extended fast idling may cause all segments turn red and the segment H to flash.

NOTICE

Continuing to ride with an overheated engine can cause serious damage to the engine.

1. Stop the engine using the ignition switch, and then turn the ignition switch to the **I** (On) position.

2. Check that the radiator fan is operating, and then turn the ignition switch to the **O** (Off) position.

If the fan is not operating:

Suspect a fault. Do not start the engine. Transport your vehicle to your dealer.

If the fan is operating:

Allow the engine to cool with the ignition switch in the **O** (Off) position.

3. After the engine has cooled, inspect the radiator hose and check if there is a leak.

➡ P. 248

If there is a leak:

Do not start the engine. Transport your vehicle to your dealer.

4. Check the coolant level in the reserve tank. ➡ P. 248
 - ▶ Add coolant as necessary.
5. If 1-4 check normal, you may continue riding, but closely monitor the temperature gauge.

Warning Indicators On or Flashing

Low Oil Pressure Indicator

If the low oil pressure indicator comes on, pull safely to the side of the road and stop the engine.

NOTICE

Continuing to ride with low oil pressure can cause serious damage to the engine.

1. Check the engine oil level, and add oil as necessary.  P. 246,  P. 247
2. Start the engine.
 - ▶ Only continue riding if the low oil pressure indicator goes off.

Rapid acceleration may momentarily cause the low oil pressure indicator to come on, especially if the oil is at or near the low level. If the low oil pressure indicator stays on when the oil level is at the proper level, stop the engine and contact your dealer.

If the engine oil level goes down rapidly, your vehicle may have a leak or another serious problem. Have your vehicle inspected by your dealer.

Warning Indicators On or Flashing ► PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

Reasons for the indicator lamp to come on or blink

- Comes on if there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.

What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes with the engine stopped until it cools.

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

NOTICE

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 50 km/h (31 mph) or less. Have your vehicle inspected.

Warning Indicators On or Flashing ► ABS (Anti-lock Brake System) Indicator

ABS (Anti-lock Brake System) Indicator

If the indicator operates in one of the following ways, you may have a serious problem with the ABS. Reduce your speed and have your vehicle inspected by your dealer as soon as possible.

- Indicator comes on or starts flashing while riding.
- Indicator does not come on when the ignition switch is in the **I** (On) position.
- Indicator does not go off at speeds above 10 km/h (6 mph).

If the ABS indicator stays on, your brakes will continue to work as a conventional system, but without the anti-locking function.

The ABS indicator may flash if you turn the rear wheel while the rear wheel is lifted off the ground. In this case, turn the ignition switch to the **O** (Off) position, and then to the **I** (On) position again. The ABS indicator will go off after your speed reaches 30 km/h (19 mph).

Warning Indicators On or Flashing ► Torque Control Indicator

Torque Control Indicator

If the indicator operates in one of the following ways, you may have a serious problem with the Torque Control. Reduce your speed and have your vehicle inspected by your dealer as soon as possible.

- Indicator comes and stays on (solid) while riding.
- Indicator does not come on when the ignition switch is turned to the **I** (On) position.
- Indicator does not go off at speeds above 5 km/h (3 mph).

Even when the Torque Control indicator is on, your vehicle will have normal riding ability without Torque Control function.

- When the indicator comes on while the Torque Control is in operation, you will have to completely close the throttle to regain normal riding ability.

The Torque Control indicator may come on if you rotate the rear wheel while your vehicle is lifted off the ground. In this case, turn the ignition switch to the **O** (Off) position, and then to the **I** (On) position again. The Torque Control indicator will go off after your speed reaches 5 km/h (3 mph).

If the “-” Indicator is Blinking in the Gear Position Window While Riding

NT1100D

If the “-” indicator is blinking while riding, you may have a serious problem with the Dual Clutch Transmission system.

Park your vehicle in a safe place and have your vehicle inspected by dealer immediately. It may be possible to ride your vehicle by following the steps below.

1. Turn the ignition switch to the  (Off) position.
2. Turn the ignition switch to the  (On) position and start the engine.

If you cannot start the engine:

Turn the ignition switch to the  (Off) position and move the vehicle back and forth slightly (to disengage the gears).

Turn the ignition switch to the  (On) position again and start the engine.

If you still cannot start the engine:

Start the engine while applying the brake lever or pressing the brake pedal.

If you can shift from N to D mode:

When a gear position is shown in the gear position indicator, you can ride in that gear. Take your vehicle to your dealer riding at a safe speed.

If you can't shift from N to D mode and the “-” indicator is blinking:


Damage is preventing you from riding. Have your vehicle inspected by your dealer immediately.

Other Warning Indications

Fuel Gauge Failure Indication

If the fuel system has an error, all segments will blink as shown in the illustration.

If these occur, see your dealer as soon as possible.

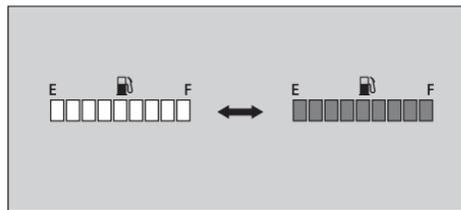


Other Warning Indications ► Coolant Temperature Gauge Failure Indication

Coolant Temperature Gauge Failure Indication


If the cooling system has an error, all segments will blink as shown in the illustration.

If this occurs, see your dealer as soon as possible.

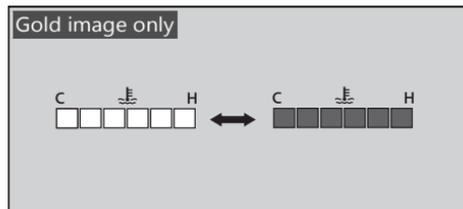

Handle Grip Heater Failure Indication

If the handle grip heater system has an error, the handle grip heater status icon will blink. If these occur, see your dealer as soon as possible.

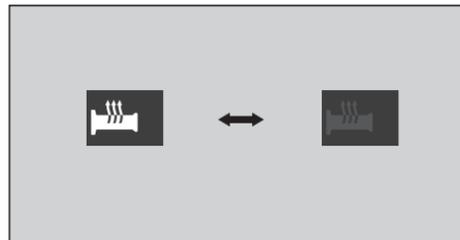

Troubleshooting

Tyre Puncture

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tyre inspected/replaced by your dealer.

Emergency Repair Using a Tyre Repair Kit

If your tyre has a minor puncture, you can make an emergency repair using a tubeless tyre repair kit.

Follow the instructions provided with the emergency tyre repair kit.

Riding your vehicle with a temporary tyre repair is very risky. Do not exceed 50 km/h (30 mph). Have the tyre replaced by your dealer as soon as possible.

⚠ WARNING

Riding your vehicle with a temporary tyre repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tyre repair, ride slowly and carefully and do not exceed 50 km/h (30 mph) until the tyre is replaced.

Audio System Trouble

Symptom	Cause/remedy
Unable to pair <i>Bluetooth</i> ® device	Some <i>Bluetooth</i> ® devices and application software you use may be incompatible with the audio system and/or the operable functions may be limited.
	Check that the audio system and <i>Bluetooth</i> ® device are both in pairing mode. ➤ P. 141 ➤ P. 146
	The audio system may not be properly connected when another <i>Bluetooth</i> ® device is being paired at the same time. Check your surroundings to make sure no other device being paired is present before re-pairing. Presence of a <i>Bluetooth</i> ® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
	When connecting a <i>Bluetooth</i> ® device, make sure no other <i>Bluetooth</i> ® device readied for pairing is present. Presence of a <i>Bluetooth</i> ® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
	When you repeatedly fail in pairing, delete the paired device once, then try pairing again. ➤ P. 141 ➤ P. 146

Audio System Trouble

Symptom	Cause/remedy
Unable to connect <i>Bluetooth</i> ® device	<p>Depending on the <i>Bluetooth</i>® device and application software you use, it may take some time for the audio system to connect to a device and to start playing an audio file.</p> <p>The connection may be temporarily disconnected when starting the engine, which is normal and not a malfunction. The <i>Bluetooth</i>® device will be reconnected after the engine is started.</p> <p>Check that your <i>Bluetooth</i>® device has been paired. Refer to the instruction manual of your <i>Bluetooth</i>® device and check that your <i>Bluetooth</i>® device is in connectable state.</p>

Audio System Trouble

Symptom	Cause/remedy
Unable to connect <i>Bluetooth</i> ® phone device	Some <i>Bluetooth</i> ® devices and application software you use may not connect automatically. For connecting, follow the instructions in the instruction manual of your <i>Bluetooth</i> ® device.
	The <i>Bluetooth</i> ® devices that can be connected at the same time are limited to one <i>Bluetooth</i> ® device and two <i>Bluetooth</i> ® headsets.
	If the problem continues after the above-described inspection, delete the paired device once, then try pairing again. ➤ P. 141 ➤ P. 146
	The <i>Bluetooth</i> ® connection cannot be established while launching Apple CarPlay. Quit Apple CarPlay, then try pairing again. ➤ P. 141 ➤ P. 178
	While connected to Apple CarPlay, <i>Bluetooth</i> ® function is disabled.
	Phone <i>Bluetooth</i> ® connection will automatically be established when Android Auto is launched, and you will not be able to make connection manually.

Audio System Trouble

Symptom	Cause/remedy
<p>Connected, but does not play.</p>	<p>Some <i>Bluetooth</i>® devices and application software you use may be incompatible with the audio system and/or audio files may not be played properly. Check the recommended specifications. ▶ P. 140</p> <p>Depending on the <i>Bluetooth</i>® device and application software you use, an audio file may not play automatically. For playing, follow the instructions in the instruction manual of your <i>Bluetooth</i>® device.</p> <p>Depending on the <i>Bluetooth</i>® device and application software you use, an audio file may not play normally after receiving a telephone call, etc. Check that your <i>Bluetooth</i>® device is in playable state.</p>
<p>Takes some time to start playing after turning the power on or changing the audio mode.</p>	<p>Right after the power is turned on or the audio mode is changed, the audio system may take some time to connect to an audio device and to start playing an audio file. Also, the audio system may not allow any audio control operation while preparing to play an audio file.</p>

Audio System Trouble

Symptom	Cause/remedy
<p>Sounds skip Noises mix</p>	<p>Presence of another <i>Bluetooth</i>® device or a device that emits electromagnetic waves such as communication equipment in the vicinity sometimes affects the communication.</p> <p>Due to the characteristics of <i>Bluetooth</i>®, though in rare cases, the system operation may become unstable. When it remains unstable, turn off the power to the audio system or the device being used, and then turn it on again.</p> <p>The storage location of the <i>Bluetooth</i>® device sometimes affects the audio system and communication. When sounds skip or noises mix, change the location of the device. For example, when the device is kept in a pocket of clothing sandwiched in between the rider and passenger, the communication may be affected. Also, weather, buildings in the vicinity, road conditions, etc. can sometimes affect the communication.</p>

Troubleshooting

Audio System Trouble

Symptom	Cause/remedy
Sounds skip Noises mix	<p>Depending on the <i>Bluetooth</i>® device and application software you use, an audio file may not play normally after receiving a telephone call, etc. Turn off the power to the audio system and then turn it on again. If the skipping of sounds or mixing of noises continues, check the status of your <i>Bluetooth</i>® device.</p> <p>If the skipping of sounds or mixing of noises continues, delete the paired device once, then try pairing again. ▶ P. 149</p> <p>Check the recommended specifications. ▶ P. 140</p>

Audio System Trouble

Symptom	Cause/remedy
Audio volume from headset is low/high.	Adjust the volume while in the individual modes.  P. 91
	Check the volume setting of the <i>Bluetooth</i> ® audio device.
	Check the volume setting of the paired headset.
No or inaccurate display	Depending on the audio device and the audio file, nothing may be displayed or the display may be inaccurate in some cases. Check the information on available tags.  P. 158
	When the information in an audio file such as the artist name and track title is in a non-compliant tag format, it may be indicated by "☒" or no information will be shown.

Audio System Trouble

Symptom	Cause/remedy
<p><i>Bluetooth</i>® handsfree calling cannot be available.</p>	<p>Connected <i>Bluetooth</i>® device may be an unsupported device. Check the supported <i>Bluetooth</i>® version/profiles. ➤ P. 140</p> <p>When the <i>Bluetooth</i>® connection is unstable due to surrounding conditions or radio wave conditions, the handsfree calling functions may not be available.</p> <p>To use <i>Bluetooth</i>® handsfree calling, a headset connection is necessary. Connect a paired headset. ➤ P. 146</p>
<p>During a call, headset volume is low/high.</p>	<p>Adjust the volume during a call. ➤ P. 91</p>
<p>Passenger's headset is no sound</p>	<p>Passenger headset only outputs music. Music playback is interrupted while using the handsfree phone or Siri.</p>

Audio System Trouble

Symptom	Cause/remedy
<i>Bluetooth</i> ® Handsfree Calling	<p>Depending on the connection status, the times displayed in call history on the vehicle side or the phone side may differ.</p> <p>Depending on your mobile carrier plan, available functions may differ.</p> <p>A display delay may occur depending on the number of phone books, call history and music data etc. stored in the connected device.</p>

Troubleshooting

Audio System Trouble

Symptom	Cause/remedy
<p>Apple CarPlay is not be available.</p>	<p>Connected iPhone may be an unsupported model. Check the models compatible with Apple CarPlay. ▶ P. 173</p> <p>Connected iPhone may be an unsupported iOS version. Update the iPhone to the newer version.</p> <p>To use Apple CarPlay, a headset connection is necessary. Connect a paired headset. ▶ P. 146</p> <p>When a mobile network communication is unstable due to surrounding conditions or signal strength conditions, Apple CarPlay functions may not be available.</p>

Audio System Trouble

Symptom	Cause/remedy
Apple CarPlay is not be available.	<p data-bbox="490 246 1159 342">When the paired headset connection is broken due to headset battery depletion or communication failure, Apple CarPlay cannot be used until the connection is restored.</p> <p data-bbox="490 350 1159 443">The screen will not switch to Apple CarPlay automatically, other than when the ignition switch is turned to  (Off) with Apple CarPlay activated.</p> <p data-bbox="490 450 1159 512">Some USB cables may be incompatible with Apple CarPlay. Use certified cable to connect the iPhone.</p> <p data-bbox="490 520 1159 582">You have not agreed to enable Apple CarPlay. Reconnect the iPhone and enable CarPlay on the disclaimer screen.  P. 176</p> <p data-bbox="490 589 1159 682">Apple CarPlay setting on your iPhone may be disabled. Disconnect iPhone and enable the Apple CarPlay setting on your iPhone.</p>

Audio System Trouble

Symptom	Cause/remedy
<p>Android Auto is not be available.</p>	<p>Connected Android phone may be unsupported model. Check the compatible model with Android Auto. ➡ P. 187</p> <p>Connected Android phone may be unsupported Android version. Update the Android phone to the newer version.</p> <p>To use full function of Android Auto, a headset connection is necessary. Connect a paired headset. ➡ P. 146</p> <p>When a mobile network communication is unstable due to surrounding conditions or signal strength conditions, Android Auto functions may not be available.</p>

Audio System Trouble

Symptom	Cause/remedy
<p>Android Auto is not be available.</p>	<p>When the paired headset connection is broken due to headset battery depletion or communication failure, go back to the Home screen, and pair the headset connection again.</p> <p>Some USB cables may be incompatible with Android Auto. For Android Auto, the USB cables should be certified by USB-IF to be compliant with USB 2.0 Standard.</p> <p>You have not agreed to enable Android Auto. Reconnect the Android phone and enable to use Android Auto on the disclaimer screen.  P. 190</p> <p>Android Auto setting on your Android phone may be disabled. Disconnect Android phone and enable the Android Auto setting on your Android phone.</p>

Audio System Trouble

Symptom	Cause/remedy
Connected, but does not operate Apple CarPlay/Android Auto.	You cannot operate Apple CarPlay/Android Auto by the touch panel while the vehicle is in motion. Operate with the left handlebar switches or park your vehicle in a safe place, then operate.
Some functions of Apple CarPlay/Android Auto not available.	Some functions may be limited due to condition of mobile network communication.
Apple CarPlay/Android Auto screen is too dark/bright	Selecting [Background] menu in [Settings], you can select white mode or black mode in the navigation map or an application such as Maps, also adjust backlight brightness by [Brightness] menu in [Settings] ➤ P. 80 ➤ P. 79.
Audio system cannot operate.	Certain manual functions and settings are disabled or inoperable while the vehicle is in motion. You cannot select a greyed-out menu until the vehicle is stopped.

Audio System Trouble

Symptom	Cause/remedy
When turning the ignition switch to ○ (Off) and I (On) continuously.	Since the system restart takes time, it may take time until the screen is appears.
High temperature/ overcurrent protection	To protect the system, some operations may be limited temporarily. The system automatically recovers after the cause is solved.
Software update	The statements in this owner's manual may not match your vehicle's Audio System after performing the software update.

If the problem continues after the above-described inspection, have your vehicle inspected by your dealer.

Electrical Trouble

Battery Goes Dead

Charge the battery using a motorcycle battery charger.

Remove the battery from the vehicle before charging.

Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage. If the battery does not recover after recharging, contact your dealer.

NOTICE

Jump starting using an automobile battery can damage your vehicle's electrical system and is not recommended.

Burned-out Light Bulb


All light bulbs on the vehicle are LEDs. If there is an LED which is not turned on, see your dealer for servicing.

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ▣ P. 234


▣ Fuse Box Fuses & ABS FSR Fuse

1. Remove the front seat. ▣ P. 244
2. Open the fuse box covers.
3. Pull the fuses out with the fuse puller provided on the underside of the rear seat (▣ P. 224) one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall parts in the reverse order of removal.

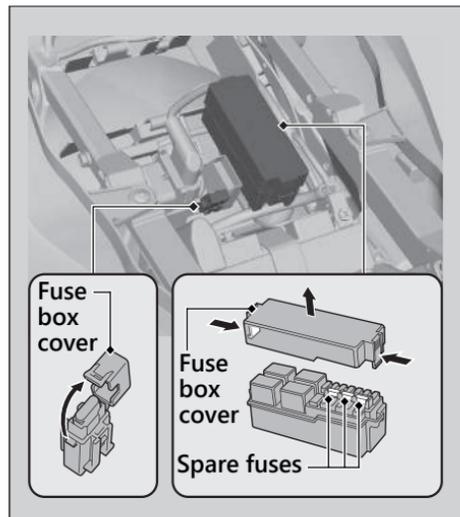

Electrical Trouble ► Blown Fuse

| Main Fuse & ABS Main Fuse

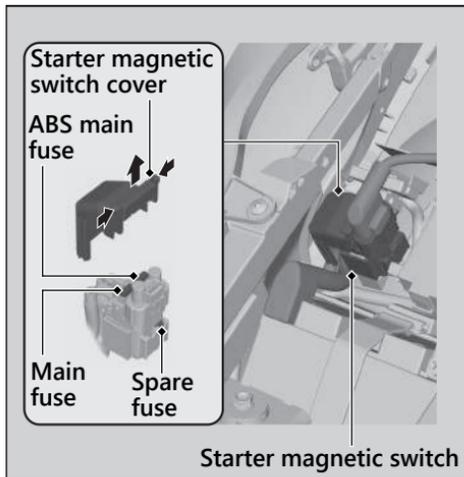


Troubleshooting

1. Remove the front seat. ► P. 244
2. Remove the starter magnetic switch cover.
3. Pull the main fuse and ABS main fuse out with the fuse puller provided on the underside of the rear seat (► P. 224) one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare main fuse and spare ABS main fuse are provided in the starter magnetic switch.
4. Reinstall parts in the reverse order of removal.

Electrical Trouble ► Blown Fuse

| FI Fuse & Main 2 Fuse

NT1100A

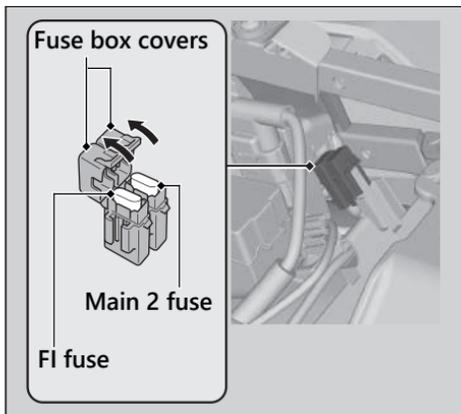

1. Remove the front seat. ► P. 244
2. Open the fuse box covers.
3. Pull the FI fuse and main 2 fuse out with the fuse puller provided on the underside of the rear seat (► P. 224) and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare FI fuse is provided in the fuse box under the front seat. ► P. 244
 - Spare main 2 fuse is provided in the starter magnetic switch.
4. Reinstall parts in the reverse order of removal.


Troubleshooting

Electrical Trouble ► Blown Fuse

FI Fuse & Main 2 Fuse & DCT Main Fuse

NT1100D

Troubleshooting

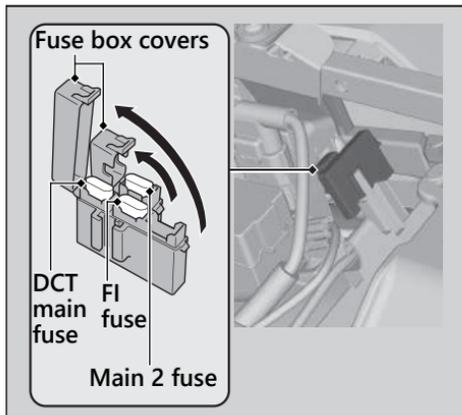

1. Remove the front seat. ► P. 244
2. Open the fuse box covers.
3. Pull the FI fuse, main 2 fuse and DCT main fuse out with the fuse puller provided on the underside of the rear seat (► P. 224) one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare FI fuse is provided in the fuse box under the front seat. ► P. 244
 - Spare main 2 fuse and spare DCT main fuse are provided in the starter magnetic switch.
4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.

Information

Service Diagnostic Recorders.....	P. 296
Keys.....	P. 296
Instruments, Controls, & Other Features...	P. 297
Caring for Your Vehicle.....	P. 301
Storing Your Vehicle.....	P. 305
Transporting Your Vehicle	P. 305
You & the Environment	P. 306
Serial Numbers	P. 307
Fuels Containing Alcohol	P. 308
Catalytic Converter	P. 309
Legal Information on Apple CarPlay/Android Auto	P. 310
Software Upgrades	P. 314

Service Diagnostic Recorders

Service Diagnostic Recorders

Your vehicle is equipped with service-related devices that record information about powertrain performance and riding conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner. However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

Information

Keys

Ignition Key

This vehicle has two ignition keys and a key tag with a key number and a bar code.

The ignition key contains a special coded chip that is recognized by the immobilizer system (HISS) in order to start the engine. Handle the key carefully to prevent damaging the HISS components.

- Do not bend keys or subject them to undue stress.
- Avoid prolonged exposure to sunlight or high temperatures.
- Do not grind, drill or in any way alter their shape.
- Do not expose to strong magnetic objects.

If you lose all ignition keys and the key tag, the PGM-FI unit/ignition control module must be replaced by your dealer. To avoid this, keep a duplicate key.


Instruments, Controls, & Other Features

If you lose a key, make another duplicate key immediately.

To make a duplicate key and register it with your HISS system, take the spare key, the key tag, and the vehicle to your dealer.

- ▶ Store the key tag in a safe location.

A metal key holder may cause damage to the area surrounding the ignition switch.

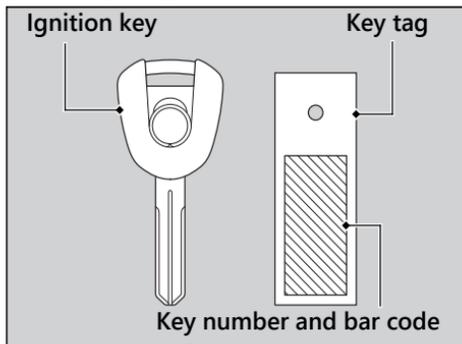

Instruments, Controls, & Other Features

Ignition Switch

Leaving the ignition switch in the **I** (On) position with the engine stopped will drain the battery. Do not turn the key while riding.

Engine Stop Switch

Do not use the engine stop switch except in an emergency. Doing so when riding will cause the engine to suddenly turn off, making riding unsafe.

If you stop the engine using the engine stop switch, turn the ignition switch to the **O** (Off) position. Failing to do so will drain the battery.

Instruments, Controls, & Other Features

Odometer

The display locks at 999,999 when the read-out exceeds 999,999.

Tripmeter

The tripmeters return to 0.0 when each read-out exceeds 9,999.9.

HISS

The Honda Ignition Security System (HISS) immobilizes the engine's ignition system if an improperly-coded key is used to try and start the engine. When the ignition switch is turned to the  (Off) position, the HISS immobilizer system is always alert, even if the HISS indicator is not flashing.

If the ignition switch is turned to the  (On) position with the engine stop switch in the  (Run) position, the HISS indicator turns on and goes off after a few seconds to indicate it is OK to start the engine. **HISS Indicator Does Not Turn off**  P. 265

The HISS indicator starts flashing every 2 seconds for 24 hours after the ignition switch is turned to the  (Off) position. You can turn this feature on or off.  P. 76

EU Directive

This immobilizer system complies with the RE (Radio Equipment) Directive (2014/53/EU).



The declaration of conformity to RE Directive is provided to the owner at the time of purchase. The declaration of conformity should be kept at a safe place. When the declaration of conformity is lost or is not provided, contact your dealer.

Instruments, Controls, & Other Features

Audio system

EU Directive

This audio system complies with the RE (Radio Equipment) Directive (2014/53/EU).



The declaration of conformity to RE Directive is provided to the owner at the time of purchase. The declaration of conformity should be kept at a safe place. When the declaration of conformity is lost or is not provided, contact your dealer.

Document Bag

The owner's manual, registration, and insurance information can be stored in the plastic document bag located on the under the front seat.  P. 244

Ignition Cut-off System

A banking (lean angle) sensor automatically stops the engine and fuel pump if the vehicle falls over. To reset the sensor, you must turn the ignition switch to the  (Off) position and back to the  (On) position before the engine can be restarted.

Information

Instruments, Controls, & Other Features

Assist-slipper Clutch System

NT1100A

The assist-slipper clutch system helps to prevent the rear tyre from locking up when the deceleration of your vehicle produces a strong engine braking effect. It also makes the clutch lever operation feel lighter.

Use only MA classification engine oil for your vehicle. Using engine oil other than MA classification oil could result in damage to the assist-slipper clutch system.


Throttle by Wire System

This model is equipped with a Throttle by Wire System.

Do not put magnetized items or items susceptible to magnetic interference near the right handlebar switches.

DRL, Automatic Brightness Control and Background Control

Ambient brightness is detected by the photosensor.
Do not damage or cover the photosensor.
Otherwise, the DRL, automatic brightness control and background control may not work properly.

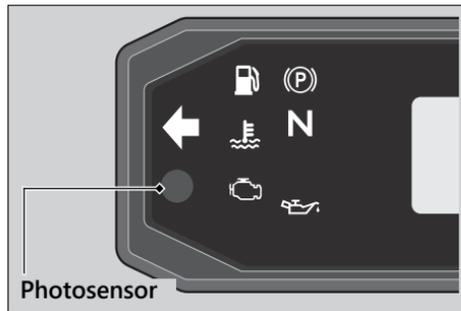

Caring for Your Vehicle

Caring for Your Vehicle

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean vehicle makes it easier to spot potential problems. In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Always wash your vehicle thoroughly after riding on coastal or treated roads.

Washing

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your vehicle thoroughly using a low pressure garden hose to remove loose dirt.
2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
 - ▶ Clean the windscreen, headlight lens, panels, and other plastic components with extra care to avoid scratching them. Avoid directing water into the air cleaner, muffler, and electrical parts.
3. Thoroughly rinse your vehicle with plenty of clean water and dry with a soft, clean cloth.

Caring for Your Vehicle

4. After the vehicle dries, lubricate any moving parts.
 - ▶ Make sure that no lubricant spills onto the brakes or tyres. Brake discs, pads, drum or shoes contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Lubricate the drive chain immediately after washing and drying the vehicle.
6. Apply a coat of wax to prevent corrosion.
 - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your vehicle.
Keep the wax clear of the tyres and brakes.
 - ▶ If your vehicle has any mat painted parts, do not apply a coat of wax to the mat painted surface.

Information

Washing Precautions

Follow these guidelines when washing:

- Do not use high-pressure washers:
 - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
 - ▶ Water in the air intake can be drawn into the throttle body and/or enter the air cleaner.
- Do not direct water at the muffler:
 - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
- Dry the brakes:
 - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
- Do not direct water under the seat:
 - ▶ Water in the under seat compartment can damage your documents and other belongings.

Caring for Your Vehicle

- Do not direct water at the air cleaner:
 - ▶ Water in the air cleaner can prevent the engine from starting.
- Do not direct water near the headlight:
 - ▶ The headlight's inside lens may fog temporarily after washing or while riding in the rain. This does not impact the headlight function.
However, if you see a large amount of water or ice accumulated inside the lens(es), have your vehicle inspected by your dealer.
- Do not use wax or polishing compounds on mat painted surfaces:
 - ▶ Use a soft cloth or sponge, plenty of water, and a mild detergent to clean mat painted surfaces. Dry with a soft clean cloth.

Aluminium Components

Aluminium will corrode from contact with dirt, mud, or road salt. Clean aluminium parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

Panels

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.
- Avoid getting petrol, brake fluid, or detergents on the instruments, panels, or headlight.

Caring for Your Vehicle

Windscreen

Using plenty of water, clean the windscreen with a soft cloth or sponge. (Avoid using detergents or any kind of chemical cleaner on the windscreen.) Dry with a soft, clean cloth.

NOTICE

To avoid possible scratching or other damage, use only water and a soft cloth or sponge to clean the windscreen.

For a dirtier windscreen, use a diluted neutral detergent with a sponge and plenty of water. Make sure to wash off all the detergent. (Detergent residue may cause windscreen cracks.)

Replace the windscreen if scratches cannot be removed and they obstruct clear vision.

Take care to keep battery electrolyte, brake fluid, or other chemical solvents off the windscreen and screen garnish. They will damage the plastic.

Exhaust Pipe and Muffler

The exhaust pipe and muffler are stainless steel but may become stained by mud or dust.

To remove mud or dust, use a wet sponge and a liquid kitchen abrasive, then rinse well with clean water. Dry with chamois or a soft towel.

If necessary, remove heat stains by using a commercially available fine texture compound. Then, rinse by the same manner as removing mud or dust.

When the exhaust pipe and muffler are painted, do not use a commercially available abrasive kitchen cleaning compound. Use a neutral detergent to clean the painted surface on the exhaust pipe and muffler. If you are not sure if your exhaust pipe and muffler are painted, contact your dealer.

NOTICE

Even though the exhaust is made of stainless steel, it can become stained. Remove all marks and blemishes as soon as they are noticed.

Storing Your Vehicle

If you store your vehicle outdoors, you should consider using a full-body cover.

If you won't be riding for an extended period, follow these guidelines:

- Wash your vehicle and wax all painted surfaces (except mat painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Lubricate the drive chain.  P. 236
- Place your vehicle on its centre stand and position a block so that both tyres are off the ground.
- After rain, remove the body cover and allow the vehicle to dry.
- Remove the battery ( P. 243) to prevent discharge. Fully charge the battery and then place it in a shaded, well-ventilated area.
 - ▶ If you leave the battery in place, disconnect the negative \ominus terminal to prevent discharge.

After removing your vehicle from storage, inspect all maintenance items required by the Maintenance Schedule.

Transporting Your Vehicle

If your vehicle needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your vehicle with a wheel or wheels on the ground.

NOTICE

Towing your vehicle with a wheel or wheels on the ground can cause serious damage to the transmission.

You & the Environment

You & the Environment

Owning and riding a vehicle can be enjoyable, but you must do your part to protect the environment.

Choose Sensible Cleaners

Use a biodegradable detergent when you wash your vehicle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.

Information



Recycle Wastes

Put oil and other toxic wastes in approved containers and take them to a recycling centre. Call your local or state office of public works or environmental services to find a recycling centre in your area and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash or pour it down a drain or on the ground. Used oil, petrol, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.

Serial Numbers

Serial Numbers

The frame and engine serial numbers uniquely identify your vehicle and are required in order to register your vehicle. They may also be required when ordering replacement parts. You should record these numbers and keep them in a safe place.

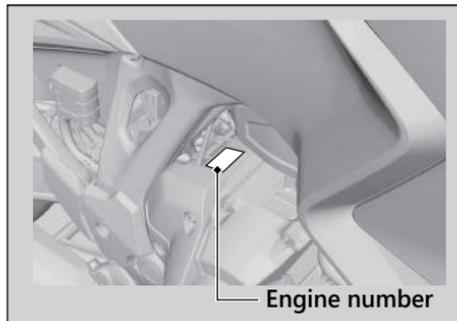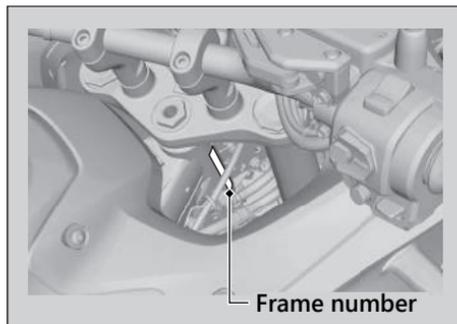

Information

Fuels Containing Alcohol

Fuels Containing Alcohol

Some conventional fuels blended with alcohol are available in some locales to help reduce emissions to meet clean air standards. If you plan to use blended fuel, check that it is unleaded and meets the minimum octane rating requirement.

The following fuel blends can be used in your vehicle:

- Ethanol (ethyl alcohol) up to 10% by volume.
 - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

The use of petrol containing more than 10% ethanol may:

- Damage the painting of the fuel tank.
- Damage the rubber tubes of the fuel line.
- Cause corrosion of the fuel tank.
- Cause poor drivability.

NOTICE

Use of blended fuels containing higher than approved percentages can damage metal, rubber, plastic parts of your fuel system.

If you notice any undesirable operating symptoms or performance problems, try a different brand of petrol.

Catalytic Converter

Catalytic Converter

This vehicle is equipped with two three-way catalytic converters. Each catalytic converter contains precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gases into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your vehicle's catalytic converters.

- Always use unleaded petrol. Leaded petrol will damage the catalytic converters.
- Keep the engine in good running condition.
- Have your vehicle serviced if your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine.

Legal Information on Apple CarPlay/Android Auto

Legal Information on Apple CarPlay/Android Auto

OWNER'S MANUAL LICENSE/LIABILITY STATEMENTS

USE OF APPLE CARPLAY IS SUBJECT TO YOUR AGREEMENT TO THE CARPLAY TERMS OF USE, WHICH ARE INCLUDED AS PART OF THE APPLE iOS TERMS OF USE. IN SUMMARY, THE CARPLAY TERMS OF USE DISCLAIM APPLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT APPLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY APPLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF CARPLAY, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION.

SEE APPLE'S PRIVACY POLICY FOR DETAILS REGARDING APPLE'S USE AND HANDLING OF DATA UPLOADED BY CARPLAY.

Legal Information on Apple CarPlay/Android Auto

USE OF ANDROID AUTO IS SUBJECT TO YOUR AGREEMENT TO THE ANDROID AUTO TERMS OF USE WHICH MUST BE AGREED TO WHEN THE ANDROID AUTO APPLICATION IS DOWNLOADED TO YOUR ANDROID PHONE. IN SUMMARY, THE ANDROID AUTO TERMS OF USE DISCLAIM GOOGLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT GOOGLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY GOOGLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF ANDROID AUTO, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION.

SEE GOOGLE'S PRIVACY POLICY FOR DETAILS REGARDING GOOGLE'S USE AND HANDLING OF DATA UPLOADED BY ANDROID AUTO.

Legal Information on Apple CarPlay/Android Auto

DISCLAIMER OF WARRANTIES; LIMITATION ON LIABILITY

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY OR ANDROID AUTO ("THE APPLICATIONS") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND THAT THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS IS PROVIDED "AS IS" AND "AS AVAILABLE," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND HONDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR

PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY HONDA OR AN AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. AS EXAMPLES, AND WITHOUT LIMITATION, HONDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATIONS, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, GOOGLE, THEIR AFFILIATES, OR THIRD PARTY PROVIDERS; HONDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA, WHICH MAY BE LOST AT ANY TIME; HONDA DOES NOT GUARANTEE THAT THE APPLICATIONS OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION.

Legal Information on Apple CarPlay/Android Auto

FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL HONDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATIONS OR YOUR USE OF OR INABILITY

TO USE THE APPLICATIONS OR INFORMATION ON THE APPLICATIONS, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF HONDA WERE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME REGIONS AND JURISDICTIONS MAY DISALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, SO THESE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

Software Upgrades

Software Upgrades

Upgrades

Honda is continually expanding the scope of the system software. The softwares are updated to correspond with new version releases.

For the software updates, contact your dealer.

Specifications

■ Main Components

Overall length	2,240 mm (88.2 in)	
Overall width	865 mm (34.1 in)	
Overall height	Highest position	1,525 mm (60.0 in)
	Lowest position	1,360 mm (53.5 in)
Wheelbase	1,535 mm (60.4 in)	
Minimum ground clearance	175 mm (6.9 in)	
Caster angle	26° 30'	
Trail	108 mm (4.3 in)	
Curb weight	NT1100A	238 kg (525 lb)
	NT1100D	248 kg (547 lb)
Maximum weight capacity *1	194 kg (428 lb)	
Maximum luggage weight *2	21 kg (46 lb)	
Maximum weight on rear carrier	10 kg (22 lb)	
Passenger capacity	Rider and 1 passenger	
Minimum turning radius	2.76 m (9.1 ft)	
Displacement	1,084 cm ³ (66.1 cu-in)	
Bore x stroke	92.0 x 81.5 mm (3.62 x 3.21 in)	
Compression ratio	10.1:1	
Fuel	Unleaded petrol	
	Recommended: 91 RON or higher	
Fuel containing alcohol	ETHANOL up to 10 % by volume	

Tank capacity	20.4 L (5.39 US gal, 4.49 Imp gal)
---------------	------------------------------------

Battery	YTZ14S
	12 V-11.2Ah (10 HR)/12 V-11.8 (20 HR)

Gear ratios	NT1100A	
	1st	2.866
	2nd	1.888
	3rd	1.480
	4th	1.230
	5th	1.064
	6th	0.972

Gear ratios	NT1100D	
	1st	2.562
	2nd	1.761
	3rd	1.375
	4th	1.133
	5th	0.972
	6th	0.882

Reduction ratios (primary / final)	NT1100A
	1.717 / 2.500

NT1100D

1.863 / 2.500

*1 : Including rider, passenger, all luggage, and accessories

*2 : Includes the weight of the luggage and added accessories

Specifications

■ Service Data

Tyre size	Front	120/70ZR17M/C (58W)
	Rear	180/55ZR17M/C (73W)
Tyre type	Radial, tubeless	
Recommended Tyres	Front	DUNLOP SPORTMAX GPR-300F P METZELER ROADTEC 01 E
	Rear	DUNLOP SPORTMAX GPR-300 P METZELER ROADTEC 01 M
		Normal
	Tyre category of use ^{*1}	Special
Snow		Not Permitted
Moped		Not Permitted
Tyre air pressure (Driver only)	Front	250 kPa (2.50 kgf/cm ² , 36 psi)
	Rear	290 kPa (2.90 kgf/cm ² , 42 psi)
Tyre air pressure (Driver and passenger)	Front	250 kPa (2.50 kgf/cm ² , 36 psi)
	Rear	290 kPa (2.90 kgf/cm ² , 42 psi)
Minimum tread depth	Front	1.5 mm (0.06 in)
	Rear	2.0 mm (0.08 in)
Spark plug	(standard)	SILMAR8A9S (NGK)
Spark plug gap (non-adjustable)	0.8 - 0.9 mm (0.03 - 0.04 in)	
Idle speed	1,250 ± 100 rpm	

*1: EU regulation

Recommended engine oil Honda 4-stroke motorcycle oil API Service Classification SJ or higher, excluding oils marked as "Energy Conserving" or "Resource Conserving," SAE 10W-30, JASO T 903 standard MA

NT1100A

After draining 3.9 L (4.1 US qt, 3.4 Imp qt)

After draining & engine oil filter change 4.0 L (4.2 US qt, 3.5 Imp qt)

After disassembly 4.8 L (5.1 US qt, 4.2 Imp qt)

NT1100D

After draining 4.0 L (4.2 US qt, 3.5 Imp qt)

After draining & engine oil filter change 4.2 L (4.4 US qt, 3.7 Imp qt)

After draining, engine & clutch oil filter change 4.2 L (4.4 US qt, 3.7 Imp qt)

After disassembly 5.2 L (5.5 US qt, 4.6 Imp qt)

Recommended brake fluid Honda DOT 4 Brake Fluid

Cooling system capacity 1.81 L (1.91 US qt, 1.59 Imp qt)

Specifications

Recommended coolant	Pro Honda HP Coolant	
Recommended drive chain lubricant	Drive chain lubricant designed specifically for O-ring chains. If not available, use SAE 80 or 90 gear oil.	
Drive chain slack	70 - 75 mm (2.8 - 3.0 in)	
Standard drive chain	RK525MRO	
	No. of links	122
Standard sprocket size	Drive sprocket	16T
	Driven sprocket	40T

■ **Bulbs**

Headlight	LED
DRL	LED
Brakelight/Taillight	LED
Front turn signal/Position light	LED
Rear turn signal	LED
License plate light	LED

■ **Fuses**

Main fuse	30 A
Other fuse	30 A, 20 A, 15 A, 10 A

Index

A

ABS (Anti-lock Brake System).....	14
ABS (Anti-lock Brake System) Indicator	109, 269
Accessories	18
Accessory Socket	220
Air Temperature Gauge	63
Apple CarPlay	173
AT indicator.....	24
AT MODE.....	24, 25, 31, 205, 207, 208, 209
Automatic Background Control.....	300
Automatic Brightness Control.....	300

B

Battery	233, 243
Bluetooth® Audio	139
Brake Lever.....	260
Brakelight Switch.....	253
Brakes	
Fluid	236, 250, 316
Lever Adjustment.....	260
Pad Wear	251
Parking	119
Braking	13

C

Catalytic Converter.....	309
Coolant.....	248
Coolant Temperature Gauge	29
Crash	5
Cruise Control.....	211
Cruise Control Main Indicator	109
Cruise Control SET Indicator.....	109

D

D Mode	205, 207, 208
Document Bag	224
Drive Chain	236, 255
DRL.....	300
DRL (Daytime Running Light).....	218
DRL Indicator.....	107

E

Electrical Trouble	290
Emergency Stop Signal	216

Engine

Number	307
Oil	235
Overheats	266
Starting	200
Stop Switch	113, 200, 202, 297
Stopping	297
Will Not Start	265

Environment 306**Equipment**

Document bag	224
Fuse Puller	224
Helmet Holder	223
Helmet Set Wire	224
Hex Wrench	224
Rear Carrier	225
Screwdriver handle	224
Standard/Phillips screwdriver	224
Tool kit	224

F

Flooded Engine	200
Frame Number	307
Front Suspension	261

Fuel

Gauge	29, 32, 37
Recommended	219
Remaining	29, 32, 37
Tank Capacity	219

Fuels Containing Alcohol..... 308**Fuses**..... 234, 291**G****Gasohol** 308**Gear Position Indicator**..... 25, 31**H****Handle Grip Heater** 120**Handsfree Calling**..... 162**Helmet Holder**..... 223**High Beam Indicator**..... 107**High Coolant Temperature Indicator** 106**HISS Indicator** 110, 265**Horn Button**..... 114

I**Ignition Cut-off System**

Banking Sensor.....	299
Side Stand	254

Ignition Key	296
---------------------------	-----

Ignition Switch	112, 200, 202, 297
------------------------------	--------------------

Image Labels	7
---------------------------	---

Indicators	106
-------------------------	-----

Instruments	24
--------------------------	----

Instruments, Controls, & Other

Features	297
----------------	-----

L

Labels	7
---------------------	---

Left handlebar switch	114
------------------------------------	-----

Load Limits	19
--------------------------	----

Loading Guidelines	19
---------------------------------	----

Low Oil Pressure Indicator	110, 267
---	----------

M**Maintenance**

Fundamentals.....	231
Importance.....	227
Safety.....	227

Schedule	228
----------------	-----

Maximum Weight Limit	19
-----------------------------------	----

Modifications	18
----------------------------	----

MT MODE	25, 205, 207, 208, 210
----------------------	------------------------

Multi-Information Display	26
--	----

N

N-D Switch	113
-------------------------	-----

Neutral Indicator	108
--------------------------------	-----

O

Odometer	24, 298
-----------------------	---------

Oil

Engine	235, 246
--------------	----------

Overheating	266
--------------------------	-----

P

Parking	15
----------------------	----

Parking Brake	119
----------------------------	-----

Parking Brake Indicator	108
--------------------------------------	-----

Parking Brake Lever	119
----------------------------------	-----

Parts Location	20
-----------------------------	----

Passing Light Control Switch	115
---	-----

Petrol	219
---------------------	-----

PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	106, 268
Protective Apparel	12
R	
Rear Suspension	262
Recommended	
Coolant.....	238
Engine Oil.....	235, 246
Fuel.....	219
Oil.....	235
Refuelling	219
Removal	
Battery	243
Front Seat	244
Rear Seat.....	245
Riding Mode	127, 128
Riding Precautions	13
Right handlebar switch	113
S	
S Indicator	25
S Mode	25, 31, 205, 207, 208, 209
Safety Guidelines	3
Safety Precautions	12
Serial Numbers	307
Service Diagnostic Recorders	296
Shifting Gears	204
Side Stand	254
Side Stand Ignition Cut-off System	254
Side Stand Indicator	62
Software Upgrades	314
Specifications	315
Speedometer	24, 28, 33
Start Button	113, 200, 202
Starting the Engine	200
Steering Lock	118
Stopping Engine	297
Storage	
Equipment	223
Fuse Puller	224
Helmet Holder	223
Helmet Set Wire	224
Hex Wrench	224
Rear Carrier	225
Screwdriver handle.....	224
Standard/Phillips screwdriver	224

Storing Your Vehicle	305	T	
Switch		Tachometer	29, 33, 37
AT/MT Switch	113	Throttle	259
Back Switch.....	117	Tool Kit	224
Cruise Control Main Switch.....	113	Torque Control	17, 123
ENT Switch	117	Torque Control Indicator	107, 270
Favourite Switch.....	114	Torque Control OFF Indicator	107
Function Lever.....	116	Transporting Your Vehicle	305
Function Sel Switch	113	Tripmeter	298
Goes Back Switch.....	117	Troubleshooting	264
Hazard Switch.....	114	Turn Signal Indicators	106, 107
Headlight Dimmer Switch.....	115	Tyres	
Page Switch.....	116	Air Pressure	238
Sel Down Switch.....	117	Puncture.....	274
Sel Left/Right Switch	117	Replacing.....	238, 274
Sel Up Switch	117	U	
Shift Down Switch (-)	114	USB Socket	221
Shift Up Switch (+).....	115	W	
Skip Switch.....	117	Washing Your Vehicle	301
Turn Signal Switch	114	Weight Limit	19, 315
Voice Control Switch.....	116		
Switches	112		