

ROYAL ENFIELD OWNER'S MANUAL

HIMALAYAN

BS VI

Royal Enfield Support

1800-2100-007

1. Road side assistance
2. Product updates
3. Feedback
4. Dealer locator

Dealer details available in our website,
To access dealer details in India, scan the QR Code



FOREWORD

Thank you for choosing the Royal Enfield Himalayan motorcycle. Your new motorcycle is the product born from Royal Enfield's vast experience of riding in the Himalayas since decades, from exhaustive testing in all conditions, and our continuous striving for superior reliability and performance.

Please read this Owner's Manual carefully before riding so that you will be thoroughly familiar with the proper operation of the Himalayan's controls, its features and capabilities.

To ensure a long and trouble-free life for your motorcycle, give it the proper care and maintenance described in this manual. This Owner's Manual should be considered a permanent part of your motorcycle and should remain with it even if your motorcycle is subsequently sold.

TALK TO ROYAL ENFIELD:

Our relationship with you does not end with the purchase of your Himalayan. Your feedback on the buying and ownership experience is very important in helping us better develop our products and services for you. Please help us by registering your email address at your dealership. You will then receive an online customer satisfaction survey invitation to your email address where you can give us this feedback.

Finally, welcome to the Royal Enfield community! Log on to the exciting world of Royal Enfield on www.royalenfield.com to know more about the company, the community and the next big ride on your Himalayan. We look forward to sharing your adventures.

—Team Royal Enfield

NOTICE

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

"© Copyright 2019 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield".

NOTE:
This motorcycle meets Bharat Emission Norms -
Bharat Stage - VI

NOTICE

Disclaimer

1. Wash the motorcycle only with plain water. Do not use any cleaning agents or detergents, especially on painted surfaces, as it will cause discoloration and damage to the paint.
2. Do not polish your motorcycle as it will increase the gloss level and damage the paint.
3. Scratches or marks on painted / plastic surfaces cannot be removed OR touched up.
4. Warranty is not applicable for discoloration of the Silencer & Exhaust pipe, as it is a natural process that will happen during usage.

Part No. RAM00136/A / Qty. 1000 / Dec. '19 / 10134

CONTENTS

Personal and Motorcycle Information	6
Technical Specifications	7
Recommended Lubricants	15
Safety Definitions	17
Motorcycle Identification Numbers	18
Location of Key Parts	19
Operation of Controls	22
Pre-Operational Checks	48
Safe & Happy Riding	50
Cargo & Accessories	55
Rules of the Road	57
Running in Period	60
Warning Indications & Safety Systems	62
Starting	66
Gear Shifting, Riding & Stopping	69
Parking	71

CONTENTS

Periodical Maintenance Chart	73
Tools Kit	79
First Aid Kit	80
Minor Maintenance Tips	81
Long Trip Precautions	108
Shock Absorber	110
Off Roding	111
Washing Procedure	113
Storage Precautions	118
Trouble Shooting	120
Warranty Terms & Conditions	124
Emission Warranty	127
Environment Care	132
Service / Maintenance Record	133
Regional Offices	135
Notes	136

TECHNICAL SPECIFICATIONS

ENGINE

Engine Type	Single Cylinder, 4 Stroke, SOHC, Air cooled, Fuel Injection
Bore	78 mm
Stroke	86 mm
Displacement	411 cc
Compression ratio	9.5:1
Max Power	24.3 bhp (17.88 KW) @ 6500 rpm
Max Torque	32 Nm @ 4250 \pm 250 rpm
Idle RPM	1350 \pm 200 rpm
Starting System	Electric Start
Air filter element	Paper element
Lubrication	Forced Lubrication, Wet sump
Engine oil capacity	2.3 L (Initial fill only), 1.6 - 1.8 L (Subsequent Refills)

TECHNICAL SPECIFICATIONS

Engine oil grade	SAE 15W 50 API SL Grade JASO MA 2 Semi Synthetic
Cooling	Air cooled with Oil cooler

IGNITION SYSTEM

Ignition system	Electronic ECU / Variable
Spark plug	Bosch - UR5CC
Spark plug gap	0.7 to 0.8 mm

TRANSMISSION

Clutch	Wet Multi Plate
Primary drive	Gear
Primary ratio	2.312:1
Gear box	5 Speed, Constant Mesh

TECHNICAL SPECIFICATIONS

Gear Ratios

1st Gear	1 st 2.916:1
2nd Gear	2 nd 1.833:1
3rd Gear	3 rd 1.428:1
4th Gear	4 th 1.173:1
5th Gear	5 th 1.000:1
Secondary Drive	5/8" Chain & Sprocket
Secondary Ratio	2.533:1
Drive Chain links	110 links

TECHNICAL SPECIFICATIONS

CHASSIS

Frame	Half duplex split cradle
Suspension Front	Telescopic, Hydraulic Damping, Front wheel travel: 200 mm
Rear	Swing arm with Linkage type Hydraulic damping Mono shock, Rear wheel travel: 180 mm
Brakes	
Brake system.....	Dual Channel ABS (Switchable to Single channel ABS - Rear Wheel ABS control deactivation)
Front Disc.....	300mm Dia disc.
Rear Disc	240mm Dia disc.
Tyre size Front	90 / 90 - 21
Rear	120 / 90 - 17

TECHNICAL SPECIFICATIONS

Tyre Pressures

Solo	Front	25 PSI / 1.75 Kg/cm ²
	Rear	32 PSI / 2.25 Kg/cm ²

With Pillion

	Front	27 PSI / 1.89 Kg/cm ²
	Rear	34 PSI / 2.39 Kg/cm ²

Steering lock In built

Fuel tank capacity* 15 ± 0.5 litres approx *

Low fuel warning Fuel Gauge (Red zone) 5.5 ± 0.5 litres approx.*

Dead stock (unusable fuel) 0.5 litre approx.*

* The above values are approximate and the actual capacity may vary with each fuel tank.
--

TECHNICAL SPECIFICATIONS

ELECTRICALS

Flywheel magneto	221W @ 1500 rpm
Generation	Alternator, III Phase
System	12V - DC
Battery	12V - 8 AH MF
Head lamp	12V, H4-60/55W - BULB
Tail lamp / Brake lamp	12V - 4/1W LED
Licence Plate illuminator	12V - LED
Front position lamp	12V - LED
Speedometer lamp	12V - LED
Hi beam indicator	12V - LED
Neutral lamp telltale	12V - LED
Turn signal telltale	12V - LED

TECHNICAL SPECIFICATIONS

Turn signal	12V, 10W * 4 Nos.
Horn	12V, 2.5 Amp.
Starter Motor	12V, 0.7 KW
Instrument Cluster	Digital cluster with main and compass LCD
Side Stand Indicator	LCD Indication
Malfunction Indicator	12V - LED
ABS Indicator	12V - LED

WARNING

Using bulbs / electrical gadgets other than specified rating may lead to overloading / erratic behaviour / premature failure of electrical system.

Modifications or fitments which are not approved by Royal Enfield, will seriously affect the performance of the vehicle and will render the warranty void.

TECHNICAL SPECIFICATIONS

DIMENSIONS

Length	2190 mm
Width	840 mm
Height	1360 mm
Wheel base	1465 mm
Ground clearance.	220 mm
Saddle Height	800 mm

WEIGHTS

Kerb weight (90% fuel & oil)	199 Kgs.
Gross Vehicle Weight	365 Kgs.

- Values / Dimensions mentioned above are for reference only.
- In view of continuous improvements being done on our motorcycles, the specifications are subject to change without prior notice.

RECOMMENDED LUBRICANTS

ENGINE OIL	
Grade	SAE 15W 50 API SL Grade JASO MA 2 Semi Synthetic
Capacity	2.3 Ltrs. (First Fill only) 1.6 - 1.8 Ltrs. Approx. (during oil & filter element replacement in periodical maintenance)

NOTE

Oil level should be up to "MAX" level. Do not overfill as it will affect the clutch functioning.

FRONT FORK OIL	
Grade	10W/Fork Oil (Viscosity range 35)
Capacity	455 ml/leg

BRAKE FLUID	
Grade	DOT 4
Capacity	Front / Rear : 100ml

RECOMMENDED LUBRICANTS

CAUTION

Using Non Recommended / In-Correct oils, can cause serious damage to the moving parts, affect performance of the motorcycle AND void the warranty.

NOTE

Recommendation subject to change without notice.

SAFETY DEFINITIONS

The information given under the titles : Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.



WARNING

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

CAUTION

This message if disregarded may result in damage to the motorcycle.

NOTE

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own.

MOTORCYCLE IDENTIFICATION NUMBERS

FRAME NUMBER

Punched on steering head tube right side.



ENGINE NUMBER


Punched on crankcase top side.



CAUTION

It is illegal to tamper with OR alter the VIN / Engine numbers of the motorcycle as it will not only against the law BUT will render the vehicle registration AND warranty VOID.

LOCATION OF KEY PARTS

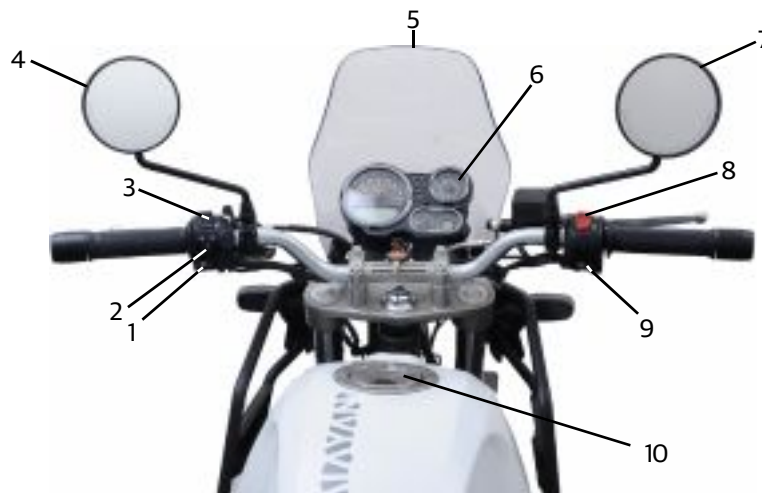

1. Horn Button
2. Turn Signal Switch
3. Head Lamp Dip Switch
4. Rear View Mirror Left Side
5. Wind Shield
6. Instrument Cluster
7. Rear View Mirror Right Side
8. Engine Stop Switch
9. Electric Start Switch
10. Fuel Tank Cap

LOCATION OF KEY PARTS



1. Front Trafficator Right Side
2. Horn
3. Oil Level Window
4. Rear Brake Pedal
5. Rider Foot rest Right Side
6. ABS Module
7. Pillion Foot rest Right Side
8. Rear Trafficator Right Side

LOCATION OF KEY PARTS



1. Front Trafficator Left Side
2. Head Lamp
3. Tail Lamp
4. Rear Trafficator Left Side
5. Licence plate illuminator
6. Pillion Foot rest Left Side
7. Side Stand
8. Center Stand
9. Rider Foot rest Left Side
10. Gear Change Lever
11. ABS Module
12. Canister

OPERATION OF CONTROLS

STEERING LOCK

LOCKING:

- Turn handle bar to extreme left or right position.
- Switch "OFF" ignition, gently depress key and turn anticlockwise further till steering is locked and remove key.



UNLOCKING:

- Insert key, turn clockwise to ignition "OFF" position. If required, gently shake handle bar to help unlock steering easily.

CAUTION

Do not force or attempt to lock / unlock steering if the handle bar is not in extreme left or right side. Failure to adhere to this caution will damage the lock and also cause the key to bend or break.

OPERATION OF CONTROLS

WARNING

After unlocking steering AND before starting engine, check the handle bar free movement by turning to both left and right sides, several times.

Failure to do so may cause unstable riding, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.

FUEL TANK CAP

OPENING:

- Lift flap and insert key.
- Turn key clockwise to enable cap to unlock and spring up.



NOTE

Key CANNOT be removed when fuel tank cap is open.

OPERATION OF CONTROLS

CLOSING:

- Gently depress cap till it is firmly locked in place and key can be removed.
- Remove key and close flap.




WARNING

DO NOT overfill the fuel tank, stop filling when the fuel reaches bottom of anti-splash plate. Because fuel expands when it heats up, heat from engine or the sun can cause fuel spill out of fuel tank.

Petrol is highly explosive. Please ensure there are no open flames or sparks nearby while refueling and fill fuel tank only in a well ventilated area.

Please ensure petrol does not spill on painted surfaces. Wipe immediately incase fuel spills over as otherwise it will leave a permanent stain on the painted surfaces.

Anti splash plate

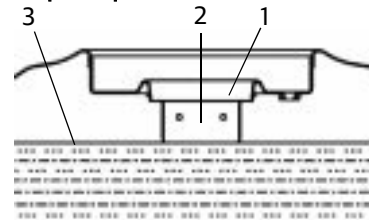

1. Fuel Filler Collar
2. Anti-Splash Plate
3. Maximum Fuel Level

OPERATION OF CONTROLS

IGNITION SWITCH

⊗ OFF ○ ON

NOTE

- Key can be removed only if ignition is in "OFF" or steering is locked.



WARNING

Switch "OFF" ignition switch whenever engine is not running. Failure to do so will cause the battery to discharge as the headlamp will remain continuously "ON" when ignition switch is in "ON" position.

WARNING

DO NOT switch "OFF" ignition while riding the motorcycle. Doing so can cause a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.


OPERATION OF CONTROLS

ENGINE STOP SWITCH



 Engine OFF  Engine ON



E-START SWITCH

 Depress & hold till engine starts.

HAZARD LIGHT SWITCH

 Hazard Light ON  OFF



WARNING

- Turn signals do not work when the hazard light switch is on.
- All the trafficator lamps will flash simultaneously.



OPERATION OF CONTROLS

HORN

 Press



DIMMER SWITCH

 High beam  Low beam



DAY FLASH

Press for Head Light Flash.



OPERATION OF CONTROLS

TURN SIGNAL SWITCH

- ⇐ Left turn signal ON
- ↑ OFF (Push to cancel)
- ⇒ Right turn signal ON



MANUAL BI STARTER (CHOKE)

Depress and hold to stabilise idling RPM in cold condition / first time starting in cold mornings.



OPERATION OF CONTROLS

RIDER & PILLION SEAT

- Locate key on left side & turn clock wise Lift pillion seat and remove.
- Lift front seat from rear & remove.




DOCUMENT HOLDER

- Useful for storing motorcycle documents and owners manual.
- Remove the pillion Seat.
- Gently press on top to release the tabs from the frame and open slightly.
- To completely remove, release the bottom tabs from the frame by pulling out gently.
- When washing the motorcycle, be careful not to flood this area with water.



OPERATION OF CONTROLS


INSTRUMENT CLUSTER

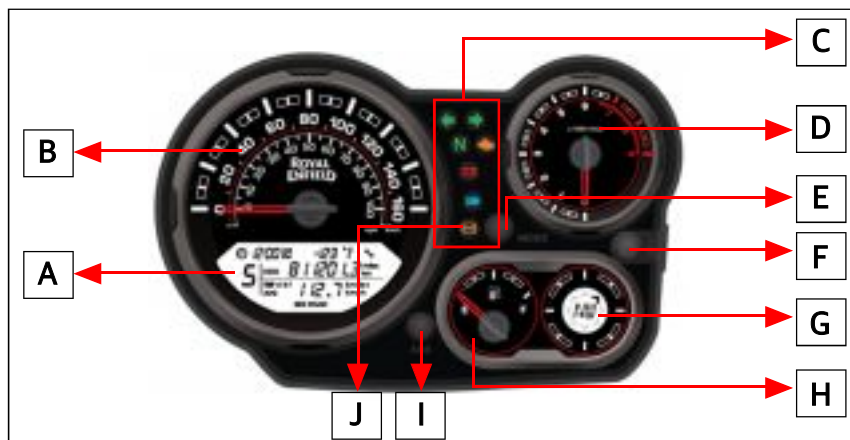

A. Main LCD
B. Speedometer (KM major)
C. Tell tales
D. Tachometer
E. Mode button
F. Select button
G. Compass display
H. Fuel gauge
I. ABS Switch
J. ABS Indicator Lamp

OPERATION OF CONTROLS

A. MAIN LCD



The image shows a motorcycle's main LCD display. Red lines with numbered arrows point to specific features: 1 points to the clock (12:00 AM), 2 points to the ambient temperature (-123 °F), 3 points to the service reminder icon (a wrench), 4 points to the odometer (81120.13 miles/km), 5 points to the trip value and average speed (112.7 miles/kmph), 6 points to the side stand indicator, and 7 points to the gear position indicator (5).

1. Clock
2. Ambient Temperature
3. Service reminder
4. Odometer
5. Trip Value (A/B & F), AVG speed A/B
6. Side Stand indication
7. Gear position indication

OPERATION OF CONTROLS

CLOCK

- Display in 12 hour format with AM/PM indication.
- Will reset to 12:00 AM when battery is disconnected.



OPERATION OF CONTROLS

CLOCK SETTING

Function	Switch	Pressure time (sec)	Action
CLOCK SETTING MODE	SELECT & MODE pressed with No Speed input	≥ 3 sec	In ignition key 'ON' position (when vehicle not running) Enters into clock setting mode and hour digits starts to blink
	SELECT	< 1 sec	Hours value shall increment by 1 accordingly for no of press
	SELECT	≥ 3 sec	Hour value saved and minute digits starts to blink
	SELECT	< 1 sec	Minutes value will increase by 1 by each press of the "Select" button
	SELECT	≥ 3 sec	Minute value save and PM / AM digits starts to blink
	SELECT	< 1 sec	PM / AM is interchangeable by each press of the "Select" button
	SELECT	≥ 3 sec	PM / AM save and exit from clock set mode
	NO ACTION	20 sec	Auto exit without saving changes and continue with previous setting



WARNING

NEVER attempt to operate the select or reset buttons while riding the motorcycle. Failure to do so may cause loss of concentration and unstable riding, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.

OPERATION OF CONTROLS

AMBIENT TEMPERATURE INDICATION

- Ambient temperature display can be changed from Celsius to Fahrenheit and vice versa.
- The temperature indication may increase during vehicle riding / engine "ON" condition due to increase of engine temperature.
- Ambient temperature indication tolerance is $\pm 2^{\circ}\text{C}$.



NOTE

The ambient temperature valve should be referred to only when the engine is switched "OFF" and the engine is in cold condition. The temperature displayed will be higher if the engine is running or immediately after it is switched "OFF" since the sensor will only pick up the higher temperature surrounding it.

OPERATION OF CONTROLS

TEMPERATURE UNIT CHANGEOVER

Temperature sensor push button management.

Required button

- Mode



Function	Button	Pressure time (sec)	Action
TEMPERATURE UNIT CHANGE OVER	MODE	≥10 secs	In ignition key "ON" position, long press and hold "MODE" button for period ≥ 10 secs to reset temperature units from degree Celsius to Fahrenheit and vice versa.

OPERATION OF CONTROLS

I. ABS SWITCH - ACTIVATION PROCEDURE

1. Ignition switch "ON" condition
2. Vehicle stationary
3. Press ABS switch for (3-5 secs)

Single Channel ABS mode is activated (if, enabled): Rear ABS function will not work.
Front wheel ABS will only work.

Procedure to Reset to Dual channel: Ignition switch reset*, vehicle will return to default dual channel ABS mode.

Dual Channel ABS mode (Default): ABS will work on both wheels.

***Ignition key Reset:** Turning ignition switch from "OFF" to "ON".



CAUTION

If Single channel ABS mode enabled, ABS only controls the front wheel. The rear wheel is not controlled by ABS and may lock during braking maneuvers.

OPERATION OF CONTROLS

J. ABS INDICATOR LAMP

- ABS indicator lamp continuously "ON" during initial check up (until or after vehicle running for a particular distance / speed) and will turn "OFF" if system is ok, then will light up again in case of any ABS system malfunction.

- **Single channel mode indication**

Single channel Activation with ignition key reset*: ABS tell tale will blink thrice to indicate activation, followed by ABS tell tale continuous ON, once the vehicle is ride more than 5kmph, ABS tell tale will blink continuously.

Single channel Activation Without ignition key reset*: ABS tell tale will blink continuously.

***Ignition key Reset:** Turning ignition switch from "OFF" to "ON".

CAUTION

- DO NOT run motorcycle incase the ABS Indicator lamp continuously "ON".
- The ABS indicator blink continuously to indicate Single channel ABS mode is enabled.



ABS Indicator lamp lights up is indicate Status or error messages relating to ABS



ABS Indicator lamp

OPERATION OF CONTROLS

SERVICE REMINDER

- Service reminder is provided to remind about service due.
- Spanner symbol will flash till vehicle is serviced at service center.
- Service reminder can be reset ONLY by authorised personnel at service center after service is completed.
- Service reminder symbol will flash on as per below distance input from odometer.
 - i) 1st service – 450 kms
 - ii) 2nd service – 4900 kms
 - iii) from there on for every 5000 kms from previous value (ex: 9900, 14900 etc.)



WARNING

DO NOT use high pressure water jet directly on instrument cluster for cleaning. Use only water spray cleaning and wipe it with soft dry cloth.

OPERATION OF CONTROLS

4. ODOMETER

- Displays the cumulative kilometers the vehicle has covered.



TRIP A/B & AVG SPEED A/B

- Trip A/B indicates distance travelled in particular trip.
- Avg A/B indicates average speed of vehicle in particular trip mode.



OPERATION OF CONTROLS

Function	Switch	Pressure time (sec)	Action
TRIP A	SELECT	<1sec	In ignition key "ON" position, Move to: AVA A
	SELECT	> 2.5 sec	TRIP A/AVG A RESET
AVG A	SELECT	<1sec	Move to: TRIP B
	SELECT	> 2.5 sec	TRIP A/AVG A RESET
TRIP B	SELECT	<1sec	Move to: AVG B
	SELECT	> 2.5 sec	TRIP B/AVG B RESET
AVG B	SELECT	<1sec	Move to: TRIP A
	SELECT	> 2.5 sec	TRIP B/AVG B RESET

OPERATION OF CONTROLS

TRIP "F" MODE

- The word, Trip "F" will flash when the Trip "F" mode is active.
- Trip "F" is provided to measure distance travelled by the vehicle when fuel level in the vehicle is 5.5 ± 0.5 lts. in the fuel tank so that the rider can plan fuel filling accordingly based on his trip requirements, Trip "F" will get activated when needle on fuel gauge enters the red zone.
- Trip "F" mode would come into function automatically.
- Trip "F" mode would de-activate automatically if fuel is filled above 5.5 ± 0.5 lts.
- During Trip "F" mode rider can toggle between Trip A/B but mode will return automatically to Trip "F" after 25 ± 5 secs.



NOTE

- Trip "F" will stop displaying at approximately 90 ± 5 seconds AFTER fuel level in tank is above 5 ± 0.5 litres, side stand is fully retracted AND Ignition is switched "ON".

OPERATION OF CONTROLS

WARNING

NEVER attempt to operate the select or reset buttons while riding the motorcycle. Doing so may cause loss of concentration and unstable riding, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.

6. SIDE STAND INDICATOR

- Indicates when side stand is extended.



OPERATION OF CONTROLS

GEAR POSITION INDICATION

- Displays the gear position in which the vehicle is traveling.
- When in neutral the indication will be "O".
- When in gear the appropriate number between 1 to 5 will be displayed.



C. TELL TALES

1. **Turn Left** : Left turn signal "ON".
2. **Turn right** : Right turn signal "ON".
3. **Neutral** : Transmission is in Neutral.



OPERATION OF CONTROLS

4. **Low Battery Indication:** Indicator will glow continuously if ignition switch is "ON" & engine is not running. Indication will switch off as soon as engine is started. If battery voltage is below 12 V, indicator will glow continuously indicating a low battery.
5. **High Beam Indication:** Head lamp high beam "ON".
6. **EMS Malfunction Indication :**
 - Will be illuminated as soon as ignition & stop switch are "ON" and will go "OFF" after the engine is started.
 - Will remain continuously "ON" incase of any malfunction of the EMS.

CAUTION

DO NOT run motorcycle incase the malfunction remains "ON" continuously as it can cause severe damage to the ECU & Sensors. Please visit the nearest authorised Royal Enfield dealer to diagnose & rectify the defect in the EMS.

OPERATION OF CONTROLS

D. TACHO METER

1. Indicates the RPM at which engine is working.
2. Useful for right selection of gear with respect to engine RPM.



WARNING

- Do not run engine with gears in neutral as RPM will go beyond red zone.
- Do not ride motorcycle in lower gears with high acceleration as it will cause RPM to start to red zone & affect the main parts inside engine.

OPERATION OF CONTROLS

G. COMPASS LCD

- Useful for Navigation during riding.
- Text indicates heading direction of vehicle. (N, S, E, W, NE, NW, SE, SW)
- Arrow will always point to North.
- Eg. if heading Northwest, text will display NW and arrow **will be in top right corner to indicate North.**



CAUTION

1. Avoid using magnetic key chains, magnetic / ferrous materials or electronic components with interference around cockpit area to avoid malfunctioning of digital compass.
2. If compass LCD enters into calibration mode ("CA" flashing) ride vehicle in "8" direction slowly to calibrate the compass or approach nearest authorised service center for assistance and proper calibration.
3. Indication fluctuation during riding is normal operation due to impact of road irregularities.
4. Compass indication tolerance is $\pm 45^\circ$.

OPERATION OF CONTROLS

WARNING

DO NOT focus on the compass while riding. Doing so may cause loss of concentration and unstable riding, leading to a potential accident, resulting in serious injury to both riders & other road users besides causing severe damage to the motorcycle.

H. FUEL GAUGE

- Indicates fuel level in tank.
- The fuel pointer enters red zone, if the fuel level in the fuel tank is approximately 5.5 ± 0.5 litres.



WARNING

Do not use the motorcycle for long duration with the fuel indication in red zone. Refuel at the earliest.

Failure to do so may cause the motorcycle to run out of fuel and get stranded, in addition to causing serious damage to the fuel pump.

PRE OPERATIONAL CHECKS

1. Adequate fuel in fuel tank for the journey planned.
2. Tyres inflated to correct pressure.
3. No side wall cracks, cuts or abrasions in the front and rear tyres.
4. Rear chain for proper tension and sufficiently lubricated.
5. Engine Oil level.
6. Control cables, inner, not damaged, frayed or broken. Clutch and accelerator controls working smoothly.
7. Front and rear brake efficiency and free play in Front and Rear Brake levers.
8. Hydraulic oil level correct in both front and rear master cylinders.
9. Free movement of handle bar to left and right sides.
10. All electrical controls, horn working correctly.

PRE OPERATIONAL CHECKS

- 11. Head lamp, tail lamps, brake lamps and indicator lamps working correctly.
- 12. Front and rear wheel axle nuts tightened properly to torque.
- 13. Front and rear wheel spokes having proper tightness, no loose or broken spokes.
- 14. All fasteners are tight to required torque.
- 15. Engine idling correctly and smooth.
- 16. No abnormal noise / leak from engine.



WARNING

For your personal welfare and safety, these pre-operational checks should be performed periodically. Failure to do so may affect safe operation, damage your motorcycle and could result in an accident causing serious injury.

SAFE & HAPPY RIDING

- Please read this manual carefully to get to know the motorcycle and its maintenance schedules.
- Please exercise utmost caution while refueling. Open the lid carefully and slowly. Refuel only in a well ventilated area with the ignition switched "OFF".
- Gasoline is highly explosive and inflammable. DO NOT smoke or refuel if there are any naked flames or sparks nearby. Switch "OFF" mobile phones and other hand held electronic devices.
- Know and respect the rules of the road. Please be a safe rider for your own safety and for other road users.
- Please ride your motorcycle defensively. Remember a motorcycle does not afford the same protection as an automobile.
- Ride only at moderate speeds and out of traffic until you have become familiar with the handling characteristics of your motorcycle under all conditions.
- DO NOT exceed the legal speed limit. Always reduce speed when poor driving conditions exist. Use extra caution when approaching and passing through intersections, since intersections are the most likely places where accidents happen.

SAFE & HAPPY RIDING

- Ride where other motorists can easily spot you. Please do not ride in another motorist's "blind spot".
- Always signal well in advance before turning or changing lanes. Make sure that other motorists can see your signaling and slow down.
- Never ride under the influence of alcohol or other drugs that might affect your riding skills reflex.
- When carrying a pillion rider, it is your responsibility to instruct them on proper riding procedures and riding gear.
- If you are an inexperienced rider we recommend that you obtain formal training on correct motorcycle riding techniques. New riders should gain experience under various conditions while driving at moderate speeds. Pay strict attention to road surfaces and wind conditions.
- DO NOT allow other individuals, under any circumstances, to operate your motorcycle unless you know they are experienced, licensed riders and are thoroughly familiar with the operating conditions of your motorcycle.

SAFE & HAPPY RIDING

RIDING GEAR

- Motorcycle riding pants and jacket fitted with certified Armour.
- Motorcycle riding boots.
- Motorcycle riding gloves.
- ISI, DOT or SNELL certified helmet as applicable for rider and pillion.
- Wear a brightly colored jacket.
- Never wear loose-fitting clothes; otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
- Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.

CAUTION

Avoid any contact with the exhaust system. The exhaust system gets very hot and remains hot for a long time after parking the motorcycle. Wear clothing that will completely cover the legs while riding. Failure to do so may result in serious burn injuries.

SAFE & HAPPY RIDING

SITTING POSTURE

Correct sitting posture is a must for stable and safe riding.

- Sit with your shoulders completely relaxed.
- Do not lock your elbows and retain them at a slight bend to enable maneuvering.
- Hold the handle grip close to its inner end.
- Lightly grip the fuel tank with your knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

BRAKING

- Apply front and rear brakes gently and simultaneously for maximum braking efficiency.
- Please use utmost caution while applying brakes, especially while riding under wet or bad road conditions.

SAFE & HAPPY RIDING



WARNING

The hydraulic disc brakes fitted on your motorcycle requires very less effort. Applying any one of the brakes suddenly may lock the wheels. Failure to adhere to this warning may cause loss of control on the motorcycle, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.



WARNING

Brake pad wear will be increased if the motorcycle is used frequently off-road. Always inspect the brake pads more frequently if the motorcycle is used off-road & replace the brake pads before they become worn to or beyond the minimum service thickness. Riding the worn brake pads may reduce braking efficiency, leading to loss of motorcycle control and an accident.

DO NOT place the foot on the brake pedal while riding unless braking is required. Because this will lead to premature wear of brake pad.

CARGO & ACCESSORIES

LOADING

- Please do not fit Non OE or Non genuine accessories as they may cause damage to the motorcycle and also affect the riding and handling of the motorcycle.
- Please ensure cargo is securely strapped to the rear and sides of the motorcycle and do not become loose or shift while riding.
- Ensure the weight is distributed evenly on both sides of the motorcycle.
- Do not carry excessively heavy or huge cargo on the motorcycle.
- The permissible weight of the cargo that can be strapped to the luggage carrier is 3.5 Kgs.
- Do not hang any items on the handle bar and luggage carrier while riding which will lead to damage for the parts nearby.



WARNING

Please exercise utmost caution while carrying cargo or luggage on the motorcycle. Failure to adhere to the above precautions can cause loss of control on the motorcycle, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.

Total weight of the rider and any passenger, accessories and luggage must not exceed the maximum load limit.

CARGO & ACCESSORIES

CAUTION

Exhaust gases contains poisonous carbon monoxide and chemicals, known to cause Cancer, Birth defects or other reproductive defects. Please park the motorcycle only in a well ventilated area and do not stay in the same place where the motorcycle is parked, especially when the engine and exhaust system are hot.



WARNING

DO NOT tow a disabled motorcycle. The steering and handling of the motorcycle will be impaired due to the force of the towline. Towing a motorcycle can cause loss of control on the motorcycle, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.



WARNING

DO NOT attach a trailer to the motorcycle Attaching a trailer can cause loss of control on the motorcycle, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.



WARNING

Max load on grab rail not to exceed 5 Kg.

RULES OF THE ROAD

- Be sure your number plate is installed in the position specified by law and is clearly visible at all times.
- Ride at a safe speed that is consistent with the type of road surface you are on. Pay strict attention to whether the surface is :
 - Dry
 - Oily
 - Icy
 - Wet
- Watch for loose debris, such as leaves, slippery substances or loose gravel that can hamper the stability of your vehicle.
- DO NOT exceed the legal speed limit or drive too fast for existing conditions. Always reduce speed when poor driving conditions exist. High speed increases the influence of any other condition affecting stability and increases the possibility of loss of control.
- Keep to the correct side of the road center line when meeting oncoming vehicle.

RULES OF THE ROAD

- Always sound your horn, actuate your turn signals and exercise caution when passing other vehicles going in the same direction. Never try to pass another vehicle going in the same direction at street intersections, on curves, or when going up/or down a hill.
- At street intersection give the right-of-way to the vehicle on your left or right. DO NOT presume you have the right-of-way.
- Always signal when preparing to stop, turn or pass.
- While turning either right or left, watch for pedestrians, animals, as well as vehicles.
- All traffic signs, including manual controls at intersections, should be obeyed promptly. SLOW DOWN at traffic signs near schools and CAUTION signs at railroad crossings.
- When intending to turn, signal at least 100 feet (30.5 meters) before reaching the turning. Be close to the center line (unless local rules require otherwise), slow down and then turn carefully.
- Never jump a traffic light. When a change is imminent from GO to STOP (or vice versa) at intersections, slow down and wait for the light to change to green. Never run through a yellow or red traffic light.
- DO NOT leave the curb or parking area without signaling. Be sure your way is clear to enter moving traffic. A moving line of traffic always has the right-of-way.



RULES OF THE ROAD

- Park your motorcycle on a firm and flat surface to prevent it from falling over.
- Protect your motorcycle against theft. After parking your motorcycle, remove Ignition key from switch and lock the steering head.

SIDE VIEW MIRRORS

Your motorcycle is equipped with convex mirrors and have a curved surface. This type of mirror is designed to give a much wider view to the rear than a flat mirror; however, cars and other objects seen in this type of mirror will look smaller and farther away than when seen in a flat mirror.

Use care when judging the size or distance of objects seen in these mirrors.



NOTE

To help you establish the relative distance of vehicles behind your motorcycle, adjust each mirror in such a way, that a small portion of your shoulder is visible and a large portion behind your motorcycle is seen clearly.

CAUTION

DO NOT high pressure water jet on mirror use only water spray cleaning and wipe with clean dry cloth.

RUNNING IN PERIOD

The Himalayan Motorcycle is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to achieve optimum performance subsequently.

1. During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
2. Do not exceed maximum specified pay load.
3. Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
4. Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
5. Avoid sudden accelerations and racing starts.
6. Avoid prolonged full-throttle operation. Vary speed occasionally.

RUNNING IN PERIOD

Gear	Motorcycle Speed	First 500 kms	501 - 2000 kms
1		15 KMPH	20 KMPH
2		25 KMPH	30 KMPH
3		30 KMPH	40 KMPH
4		45 KMPH	55 KMPH
5		60 KMPH	80 KMPH

WARNING INDICATIONS & SAFETY SYSTEMS

1. ENGINE MALFUNCTION INDICATOR LAMP

A Malfunctioning Indicator Lamp (MIL) is provided in the small meter.

When both the Ignition & Engine kill switch is "ON" and after vehicle is started, the MIL will glow for few seconds and switch "OFF", this indicates that all the functions of Electronic fuel injection (EFI) system is functioning normally.

In the event of any malfunction in the EFI System the MIL will glow continuously. It is recommended to take the motorcycle to a nearest Royal Enfield Authorized service station for a detailed inspection and correction of the EFI system.



WARNING INDICATIONS & SAFETY SYSTEMS

2. ANTI-LOCK BRAKING SYSTEM (ABS)

Anti-Lock Braking System (ABS) will help prevent the brakes from locking the wheels, during sudden application of the brakes at high speeds. This will help the rider to have better traction and control over the motorcycle and prevent the motorcycle from skidding which can cause a accident.

In the event of sudden and hard application of the brakes by the rider, the sensors in the braking system will signal the ABS moderator to momentarily and continuously reduce the hydraulic pressure and thereby prevent the brakes from locking the wheels while reducing the speed of the vehicle. This will help the rider to control the motorcycle.

An ABS indicator lamp is provided in the console (as shown in adjacent image) to warn the rider in the event of any malfunction of the ABS.

When the ignition and kill switch are switched "ON", the ABS sign light up and remain "ON" till the motorcycle attains a speed of 5 Kmph (3MPH) and switch "OFF". This indicates the ABS is working properly. In the event the lamp does not switch "OFF" and remains continuously "ON" at higher speeds, it is recommended not to drive the motorcycle and get the brake system inspected and corrected through a nearest authorized Royal Enfield Distributor. Failure to do so can result in a serious injuries and loss of life.



WARNING INDICATIONS & SAFETY SYSTEMS

CAUTION (ABS)

ABS is a safety feature to help prevent locking of wheels during sudden application of brakes. It is by no means a substitute for good riding practices and anticipatory braking.

Please ride carefully and apply brakes cautiously, especially while cornering. ABS cannot estimate the "weight shifts" and momentum of the motorcycle while negotiating a corner and therefore prevent skidding due to loss of traction.

Please anticipate the stopping distance required for the speed of travel and apply brakes well in advance so as to bring the motorcycle to a safe stop.

Please apply both brakes to stop - front brake momentarily earlier, followed by rear brake, to have better traction and control of the motorcycle.

Always ensure that you ride well within the legal speed limits.

Failure to adhere to the above can cause an accident resulting in serious injuries and loss of life.

The control function causes a slight pulsing of the hand and foot brake levers.

WARNING INDICATIONS & SAFETY SYSTEMS

DO'S & DON'TS : (ABS)

Do's	Don'ts
<ul style="list-style-type: none">■ While starting the engine do check the ABS indicator comes "ON" and switches "OFF" when the vehicle speed exceeds 5 km/h (3.1 mph).	<ul style="list-style-type: none">■ DO NOT RELEASE the brake lever / pedal when pulsations are felt during hard application of the brakes in an emergency situation. The pulsations only indicate that the ABS is activated.
<ul style="list-style-type: none">■ Please check the brake fluid at "MAX" level in the front and rear brake master cylinders and there is no leak in the brakes systems.	
<ul style="list-style-type: none">■ Apply both the brakes simultaneously for better efficiency while braking.	<ul style="list-style-type: none">■ DO NOT APPLY only the front OR rear brake as it can lead to inefficient braking.
<ul style="list-style-type: none">■ In the event of the ABS indicator remaining continuously "ON" please take the motorcycle to a nearest authorized Royal Enfield service station to inspect the brakes system control of the vehicle.	
<ul style="list-style-type: none">■ ABS switch need to activate only on vehicle static condition.	<ul style="list-style-type: none">■ Don't try to activate switchable ABS on vehicle running condition.

STARTING

- Ensure Gear is in Neutral position and the Neutral lamp is glowing in the Instrument Cluster. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.

CAUTION

Do not attempt to shift gears when engine is "OFF" and rear wheel is stationary as it will cause damage to gear shift mechanism. Please move motorcycle back and forth while simultaneously shifting gears.

- Switch "ON" Ignition and the Stop Switch to "RUN" Position.



STARTING

- Depress Clutch Lever fully.



- Press starter button and hold till engine starts.



CAUTION

In case engine does not start, do not keep starter button pressed continuously as it will drain the battery. Release button and restart after a few minutes to allow battery to recoup.

STARTING

CAUTION

Never accelerate the engine immediately after a cold start. The engine should be allowed to run slowly for 15 to 30 seconds. This will allow the engine to warm up and let oil reach all surfaces needing lubrication. Failure to adhere in damage to the engine.

- Manual Bi-Starter

NOTE

It is mandatory, necessary to depress and hold the Manual Bi-starter for a minimum of one minute when starting the engine for the first time in cold morning, every time when the temperatures are below 10 deg C, and at higher altitudes to keep the engine idling RPM steady.

As soon as the engine sufficiently warms up then Manual Bi-starter should be released.



GEAR SHIFTING, RIDING & STOPPING

- Warm up engine for 2 minutes - until idling is consistent.

GEAR SHIFT PATTERN

1—N—2—3—4—5

- Press clutch lever towards the hand grip.
- Press gear pedal with toe to engage 1st gear.
- Gently open throttle and release clutch simultaneously. If clutch is released suddenly, the engine may stall and cause a jerky start.



CAUTION

The clutch must be fully disengaged before attempting a gear shift. Failure to fully disengage the clutch may cause a jerky start OR stalling the engine besides causing damage to transmission parts.

GEAR SHIFTING, RIDING & STOPPING

- Lift gear lever with toe to engage 2nd and subsequent gears.



NOTE

Always start the engine with gear in neutral position.

Always move the motorcycle in first gear position only.

The motorcycle may begin to slow down and show lack of power while climbing steep hills. In that case, you should shift to a lower gear so that engine will be operating in normal power range which will prevent the motorcycle from losing momentum. The engine may be used for braking by shifting to a lower gear while riding down to steep hill.

PARKING

PARKING MOTORCYCLE ON SIDE STAND

- Select a firm, flat surface.
- Extend side stand. Tilt the motorcycle to the left, till it is supported firmly.



CAUTION

When Side stand is in "ON" position.

- a) Engine will start if vehicle is in neutral, but will cut-off (ignition and fuel) when gear is engaged.
- b) Engine will not start if gear is engaged already.

PARKING



WARNING

- Ensure side stand is retracted fully before riding the motorcycle.
- Please exercise extreme care while parking and ensure it is parked firmly to avoid the motorcycle from falling over and causing injury to you or to others and damage to the motorcycle parts.
- Do not ride motorcycle with the side stand extended. Doing so can cause the side stand to touch the ground while cornering and result in instability & loss of control on the motorcycle leading to a potential accident result in serious injury to both sides and other road users besides causing severe damage to the motorcycle.

NOTE

The Side stand is only designed for the weight of the motorcycle. Do not sit on the motorcycle when it is resting on the side stand. The side stand or frame may become damaged and the motorcycle may fall over.

PERIODICAL MAINTENANCE

The Periodical maintenance schedule detailed below is based upon average riding conditions and indicates the Intervals at which regular inspections, adjustments, replacements and lubrications must be carried out to help maintain your Himalayan motorcycle meticulously. If in case the motorcycle is used frequently in very dusty environment / severe climatic conditions / Poor Roads / stagnant water etc., the maintenance will need to be done earlier as may be required.

Contact a nearest Royal Enfield Authorised Dealer / Service Center to carry out the periodical maintenance and for any expert advice.

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE						
		whichever is earlier										
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
1	Engine Oil (Level check / Replace)	R	I	R	I	R	I	R	I	R	I	R
	Check level at every 1000 Kms or earlier as required											
2	Engine Oil Filter Element	R		R		R		R		R		R
3	Engine oil strainer on crankcase LH	C		C		C		C		C		C
4	Inlet / Exhaust Tappet setting	I&A	I&A	I&A	I&A	I&A	I&A	I&A	I&A	I&A	I&A	I&A
5	Rubber hose, Inlet manifold *	I	I	I	I	I	I	I	I	R	I	I

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE						
		whichever is earlier										
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
6	Oil cooler inlet & outlet pipes *	I	I	I	I	I	I	I	I	I	I	I
7	Spark plug	C&A	C&A	C&A	R	C&A	C&A	R	C&A	C&A	R	C&A
8	HT leads for crack	I	I	I	I	I	I	I	I	I	I	I
9	Fuel Hose & Clip	I	I	I	I	I	I	I	I	R	I	I
10	Fuel Pump (under tank) Mounting	Check for screw tightness in all services										
		C	C	R	C	R	C	R	C	R	C	R
11	Air filter element	Clean/ Replace more frequently if motorcycle always used in dusty / off Road conditions.										
12	Accelerator Cable	I&A	I&A	I&A	I&A	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R
13	Rubber Hose, Air fitler to Throttle body	I	I	I	I	I	I	I	I	R	I	I

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE							
		whichever is earlier											
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50	
	Months	1.5	6	12	18	24	30	36	42	48	54	60	
14	PAV pipes & Hose clip	I	I	I	I	I	I	I	I	R	I	I	
15	Evaporative Emission Equipment rubber hoses*	I	I	I	I	I	I	I	I	R	I	I	
16	Throttle body- Cleaning spray*	Carbo cleaner / carb click / or Fuel line cleaner spray every 5000 Km or 6 months whichever is earlier											
17	Clutch Cable	I&A	I&A	I&A	I&A	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R
18	Clutch free play	Adjust every 1000 Kms or earlier as required											
19	Clutch no slippage	I	I	I	I	I	I	I	I	I	I	I	I
20	Steering head bearings #	I & A	Inspect,adjust & lubricate for every 5000 km or earlier as required. Replace if necessary										

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE							
		whichever is earlier											
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50	
	Months	1.5	6	12	18	24	30	36	42	48	54	60	
21	Front Fork oil / leak	I	I	I	I	R	I	I	I	R	I	I	
22	Rear Wheel Drive Chain#	I&A	Clean, Lubricate & Adjust every 1000 Kms or earlier as required										
23	Battery terminals (apply petroleum jelly)	C	C	C	C	C	C	C	C	C	C	C	
24	Earth wire eyelet Tightness			I		I		I		I		I	
25	Hydraulic Brake Fluid - Front & Rear #	I	I	I	I	R	I	I	I	R	I	I	
26	Hydraulic brake hose & Washers - Front & Rear #	I	I	I	I	I	I	I	I	I	I	I	
27	Brake Pads - Front & Rear #	I	I	I	I	I	I	I	I	I	I	I	
28	Tyre wear pattern (Front & Rear) # (1)	I	I	I	I	I	I	I	I	I	I	I	
29	Spokes tightness / Wheel rim run out front & rear #	I	I	I	I	I	I	I	I	I	I	I	

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE						
		whichever is earlier										
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
30	Front & Rear wheel bearings for play #	I	I	I	I	I	I&R	I	I	I	I	I&R
31	Swingarm Pivot Bearings #	I	Inspect & If required lubricate for every 5000 km or earlier as required. Replace if necessary									
32	Rear Suspension Linkages #	I	Inspect & If required lubricate for every 5000 km or earlier as required. Replace if necessary									
33	Rear Brake Pedal Pivot	L	L	L	L	L	L	L	L	L	L	L
34	Rear Brake Pedal free play	Adjust every 1000 Kms or earlier as required										
35	Rear wheel cush rubbers #	I	I	I	I	I&R	I&R	I&R	I&R	I&R	I&R	I&R
36	All Mounting Fasteners in vehicle for tightness #	I&T	I&T	I&T	I&T	I&T	I&T	I&T	I&T	I&T	I&T	I&T

PERIODICAL MAINTENANCE

[illegible]

A : Adjust C : Clean I : Inspect (Clean, Adjust, Lubricate or Replace if necessary)

T: Re-tighten (2) L: Lubricate R: Replace

* Refer Service Manual. # Service more frequently when ridden in unusually wet or dusty areas.

Service more frequently when riding in rain or at full throttle.


(1) Tyre to be replaced if the tyre wear identification mark reached (2) To be done at authorised Royal Enfield Dealer / Service Center

For maintenance after 50,000 Kms., please repeat same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

TOOLS KIT

The tool kit is strapped underneath the Pillion seat.

S.No.	Tool Description	Purpose	Qty.
1	Allen Key 4 mm	To remove side panels LH & RH	1
2	Allen Key 6 mm	To Loosen / tighten pinch bolt on fork end	1
3	Tool Spark Plug	To Loosen / tighten Spark plug	1
4	Screw Driver	To Loosen / tighten screws of housing	1
5	Extension Tube	Additional leverage for loosening tightening wheel axle nuts	1
6	Combination Spanner Open end 17 * 13 mm	To Loosen / tighten hex nuts	1
7	Combination Ring Spanner 24 * 14 mm	To Loosen / tighten wheel axle nuts	1
8	D.E. Spanner 10 * 12 mm	To Loosen / tighten hex nuts	1
9	Tool wallet	For storing tools	1

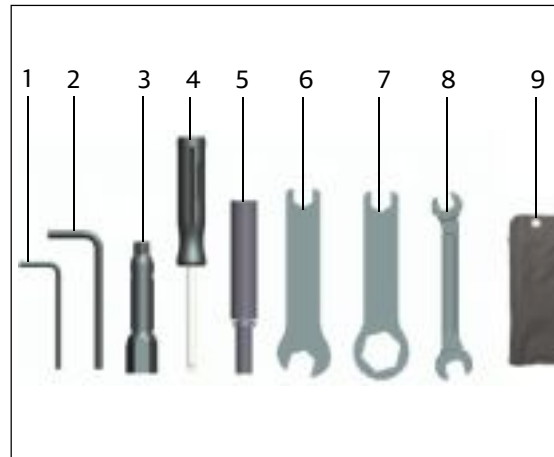


FIRST AID KIT

A first aid kit is provided with the motorcycle for any emergency requirements.

Please inspect the kit regularly and replace materials upon expiry.

S.No.	Description	Qty.
1.	Antiseptic cream 5 gms	1
2.	Wash proof plaster 1.9 cm x 7.2 cm	2
3.	Gauze bandage 5 cm x 2 cm	1
4.	Sterilized Gauze Swab 5 cm x 5 cm	2
5.	Sterilized elastic plaster 7 cm x 6 cm	1
6.	Elastic Gauze bandage 8 cm x 1 mtr.	1
7.	First aid kit pouch	1

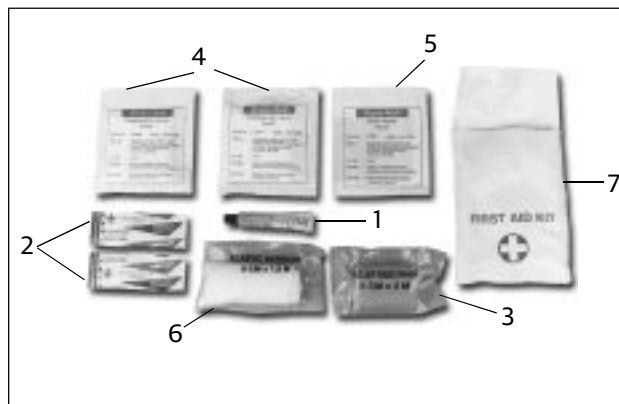

MINOR MAINTENANCE TIPS

The following simple maintenance activities will help in maintaining your motorcycle. However if you are in experienced or feel it is best done by an experienced person, we recommend you to get in touch with a Royal Enfield Authorised Dealer / Service Center.

HAND LEVER PIVOTS

Wipe the area free of dirt / grease.

Apply a few drops of oil on the pivots.



SIDE STAND PIVOTS

Apply a few drops of oil on the pivots after cleaning the area of dirt.



MINOR MAINTENANCE TIPS

PERIODICAL MAINTENANCE

- Lubricate the centre stand pivot periodically for smoother operation of centre stand.



MINOR MAINTENANCE TIPS

DRIVE CHAIN

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.



OIL LEVEL INSPECTION

- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.
- The level is correct if the oil level is in the middle of the oil level window.
- Top up only with recommended Engine oil.



CAUTION

Using Non Recommended / In-Correct oils, can cause serious damage to the moving parts, affect performance of the motorcycle AND void the warranty.

MINOR MAINTENANCE TIPS

SPARK PLUG

CLEANING AND ADJUSTING PLUG GAP

- Remove the spark plug cap from the spark plug.
- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Clean & adjust electrode gap every 500 km if required and replace every 15,000 kms.
- Refit the spark plug on the cylinder head.
- Refit the spark plug cap on the spark plug.
- Make sure the spark plug, spark plug cap and HT cable are proper fitment.

Gap 0.7 to 0.8 mm



MINOR MAINTENANCE TIPS

BRAKE FLUID

- Check fluid level is between "MIN & MAX".
- Top up with DOT 4, if required.
- Do not overfill.
- DO NOT mix DOT 4 with other brake fluids.



FRONT BRAKE



REAR BRAKE

MINOR MAINTENANCE TIPS

CAUTION

Brake fluid is highly corrosive and can cause damage to painted parts. Please ensure brake fluid does not spill on any part of the motorcycle. In the event of a spill, please clean the area immediately with a soft cloth (preferably a wet cloth) to avoid damage.

INSPECTION OF TYRES AND RIMS

- Periodically inspect :
 - Rims for spokes breakage wheel rim and run-out.
 - Tyres for proper seating of the beading on the rims.
- Check and remove stone, splinters, nails or other sharp particles embedded in the tyre.
- Replace tyres if
 - Side wall cracks, cuts or damages, uneven lugs wear etc.
 - Tyre lugs work out upto the "wear indicator" symbol on the side wall.



MINOR MAINTENANCE TIPS

- Use only recommended tyres & tubes, inflated to correct air pressure.

	Front	Rear
Solo	1.75 kg/cm ² (25 PSI)	2.25 kg/cm ² (32 PSI)
With Pillion	1.89 kg/cm ² (27 PSI)	2.39 kg/cm ² (34 PSI)

WARNING

Dismantling and reassembly of the wheel should be done ONLY by an experienced technician.

Failure to do so may cause loss of control on the motorcycle, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.

MINOR MAINTENANCE TIPS

FRONT WHEEL REMOVAL

- Support front end of engine suitably such that the front wheel is off the ground.
- Loosen pinch bolt on right fork end with 6 mm Allen key.
- Hold spindle on right side and remove spindle nut and washer from left side.
- Support wheel and pull out spindle from right side.
- Remove wheel along with wheel speed sensor and spacer.
- Remove speedo sensor.

CAUTION

Do not press the brake lever when wheel is removed as this will result in the brake pads coming out too far from the brake caliper.

- Place a suitable spacer of 4 mm thickness, between the brake pads to avoid accidental compression of the brake lever.



MINOR MAINTENANCE TIPS

FRONT WHEEL REASSEMBLY

- Remove the spacer placed between the brake pads.
- Locate wheel speed sensor lugs on the hub slot carefully.
- Position wheel along with wheel speed sensor and spacer on left side between the front fork legs, ensuring the brake disc is located between the brake pads.
- Insert wheel spindle from right fork end.
- Position wheel speed sensor such that it is parallel to ground.
- Hold spindle on right side, locate washer and nut on spindle on left side and tighten firmly.
- Tighten pinch bolt on right fork end.
- Rotate wheel and check for smooth rotation.
- Press brake lever and check front brake for efficiency.



MINOR MAINTENANCE TIPS


REAR WHEEL REMOVAL

- Ensure the motorcycle is on a firm, flat surface and the rear wheel is off the ground.
- Gently remove the brake hose along with its rubber grommets from the locating clips on the swing arm.
- Loosen rear axle nut on the right side and remove along with washer.
- Pull out the wheel axle from the left side, taking care not to drop the wheel spacers.
- Remove the brake caliper assembly from the slot in the swing arm along with ABS wheel speed sensor and support it suitably to avoid damage to the brake hose and ABS wheel speed sensor.
- Slide out the rear wheel from the swing arm, taking care not to drop the spacers on the wheel hub.

CAUTION

Do not press the brake pedal when wheel is removed as this will result in the brake pads coming out too far from the brake caliper.

* Place a suitable spacer of 4 mm thickness, between the brake pads to avoid pads compression in the event the brake pedal is pressed accidentally.



MINOR MAINTENANCE TIPS

REAR WHEEL REASSEMBLY

- Ensure the cush rubbers are in place in the wheel hub.
- Insert the wheel assembly between the swing arms and position the cush rubbers on the rear sprocket lugs correctly.
- Remove the spacer between the brake pads and locate the caliper such that the brake disc is between the brake pads.
- Locate the caliper bracket slot on the lug in the swing arm.
- Position the respective spacers on the left and right side of the wheel hub.
- Ensure the axle mounting hole in the swing arm, wheel hub and caliper bracket are aligned.
- Insert the wheel axle from the left side of the swing arm and gently tap it in.



MINOR MAINTENANCE TIPS

CAUTION

- Do not force the spindle through as it will cause damage to the threaded end.
- Ensure correct chain tension and rear wheel alignment with front wheel by adjusting the adjusters on both left and right side of swing arm.
- Assemble washer and wheel axle nut on right side and tighten to correct torque.
- Fix the brake hose pipe in swing arm clips properly.



CAUTION

- Please ensure the brake hose is correctly positioned on the clips, without any twist, sharp kinks or damage as it will seriously affect the performance of the rear brake.
- Check rear brake for effectiveness and correct functioning before using the motorcycle.




MINOR MAINTENANCE TIPS

DRIVE CHAIN TENSION (FREE PLAY 20-30mm)

- Measure the drive chain free play on the top run of the chain.
- The recommended free play is 20 to 30 mm.

To adjust the chain tension and free play:

- Loosen rear wheel spindle nut.
- Loosen lock nuts of the chain adjuster on both ends of the swing arm.
- Tighten / loosen the adjuster nut on left swing arm end, to reduce / increase chain tension.
- Ensure the ground is level & firm and place the motorcycle in its centre stand.
- Rotate wheel slowly and check chain free play at the top run to be between 20 - 30 mm.

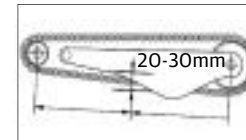

WARNING

Please follow instructions as per periodical maintenance.

MINOR MAINTENANCE TIPS

- Tighten / loosen adjuster nut on right side to align the front and rear wheels and also to align the reference marks on both left and right side of the swing arm.
- Tighten the lock nuts against the adjuster nuts, taking care not to disturb the adjuster nut settings.
- Tighten rear wheel spindle nut to a specified torque.



WARNING

Chain slackness beyond 30mm will lead to chain slippage.

Maintain drive chain slackness within the specified limits at every 1000 kms interval.

Please Check the front and rear wheels are correctly aligned, after the chain adjustment.


If the Engine / Rear sprocket are worn, replace the Engine / Rear sprocket & Rear chain as a kit.

MINOR MAINTENANCE TIPS

ADJUSTMENTS - CLUTCH LEVER FREE PLAY

Clutch Lever (free play 2 - 3 mm)


- Loosen the cable outer lock nut (A).
- Turn the Nut (B) Clockwise to reduce the play or Anticlockwise to increase the free play.
- Check free play 2 to 3 mm at Clutch lever pivot on handle bar end.
- Tighten lock nut (A) after adjustment is done.

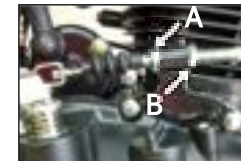

ADJUSTMENT - REAR BRAKE PEDAL FREE PLAY

Rear brake pedal free play 7 to 11 mm.

- Loosen the lock nut in master cylinder push rod assembly.
- Rotate the master cylinder push rod anti clockwise to reduce the rear brake pedal free play.
- Rotate the master cylinder push rod clockwise to increase the rear brake pedal free play.
- After adjustment tighten the lock nut in master Cylinder push rod assembly.

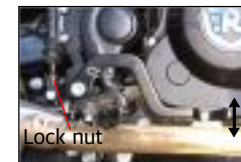



MINOR MAINTENANCE TIPS

BATTERY & MAINTENANCE

- The Motorcycle is provided with 12V - 8 AH MF battery.
- The battery must be periodically checked for corrosion free terminals.

REMOVAL OF BATTERY FROM THE MOTORCYCLE

- Remove the side panel on the right side by unscrewing the hex socket button head screws.
- Ensure motorcycle is parked on its center stand, in a well ventilated area.
- Ensure the ignition switch and engine stop switch are in "OFF" position.
- Disconnect the Harness connectors around the battery located area.
- Unlock (turn the key clockwise) and remove the pillion seat.
- Remove front seat.
- Remove the Battery carrier bracket by loosening the hex bolt.
- Disconnect both the Battery terminals wires (negative first and positive next respectively).
- Take out the battery.



MINOR MAINTENANCE TIPS

- Remove the battery carrier bracket by loosening the hex bolt.
- Remove the battery.



WARNING

Always disconnect the Black negative (-) battery cable first and then the Red positive (+) cable while removing the battery connections.

REASSEMBLY OF BATTERY ON MOTORCYCLE

- Position the battery in the battery carrier such that the terminals are facing inside.
- Ensure ignition switch is in "OFF" condition.
- Connect the red wire to the positive terminal of the battery first.
- Next, connect the black wire to the negative terminal of the battery.
- Smear the terminals with petroleum jelly. (Do not use grease in the battery terminals).



MINOR MAINTENANCE TIPS

- Place the terminal boot / cap properly.
- Refit the battery bracket.
- Reconnect the harness connector to the respective couplers on the battery located area.
- Refit the right side panel.
- Reassemble rider seat & Pillion seat.

NOTE

- Clean the wire terminals free of corrosion and keep the terminals coated with petroleum jelly.
- It is not necessary to check the battery electrolyte level or add distilled water as the battery is a maintenance free (Sealed type).
- Your Battery is a maintenance free type and can be permanently damaged if the cap strip is removed.

CAUTION

Keep the +ve and -ve cables firmly conneted to the respective battery terminals. Failure to do so may result in damage to the motorcycle electrical system.

MINOR MAINTENANCE TIPS



WARNING

Always disconnect the negative (-) battery cable first and then the positive (+) cable while removing the battery connections. If the positive (+ve) battery cable should contact terminal with the negative (-ve) cable installed, the resulting sparks may cause a battery explosion which could result in serious injury.



WARNING

Battery terminals and internals contain lead and lead components, known to cause cancer and birth defects or other reproductive harm. Always wear approved protective face shield, rubberized gloves and protective clothing when working with batteries. KEEP BATTERIES AND ACID OUT OF REACH OF CHILDREN.

NOTE

Usage of frequency for motorcycle is very important for battery to be in good performance condition. If the motorcycle is being used very rarely or sparingly and the terminals are not disconnected the battery is bound to lose its charge and result in a dead battery.

MINOR MAINTENANCE TIPS

CHANGING ELECTRICAL COMPONENTS

HEADLAMP BULB DISMANTLING

- Remove the 2 screws holding the head lamp rim to the housing.
- Gently pull out the head lamp rim along with reflector assembly.
- Disconnect head lamp coupler.



MINOR MAINTENANCE TIPS

- Remove the protective rubber cap over the bulb.
- Gently press the bulb holding clip and release it from the slot in the reflector.
- Remove the bulb from the reflector.



NOTE

Never touch the bulb with your fingers. Finger prints will etch the glass and decrease bulb life.
Always hold the bulb with clean dry cloth during handling.
Don't disturb the vent cap provided in the inner body mould.



MINOR MAINTENANCE TIPS

HEAD LAMP BULB REPLACEMENT

- Locate the 3 lugs in the bulb correctly in the reflector.
- Locate the bulb holding clip over the bulb and lock it in the slot in the reflector.
- Put the protective rubber cap over the bulb correctly such that the vent pipe is facing downwards.
- Connect head lamp coupler on the bulb terminals correctly.



MINOR MAINTENANCE TIPS


- Locate the head lamp rim in the housing correctly such that it locks in place and the 2 mounting holes of the rim are aligned with the holes in the housing.
- Assemble the 2 screws and tighten firmly.



TAIL LAMP

The tail lamp has a LED lighting system. In the event of failure, the entire tail lamp assembly should be replaced.

Contact an Authorised Royal Enfield Dealer / Service Center to replace the same.

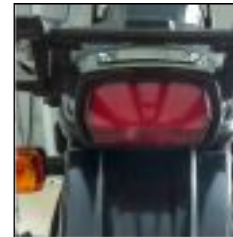

MINOR MAINTENANCE TIPS

TRAFFICATOR BULB REPLACEMENT

- Remove the screw from the trafficator housing back side.
- Remove outer lens.
- Remove the fused bulb by pushing and turning in anticlockwise direction.
- Position the new bulb inside the holder, ensuring that the pins in the bulb, match with slots in the holder.
- Push the bulb and turn clockwise direction to lock the bulb in the holder.
- Refit the trafficator cover with reflector and tighten the screw.





NOTE

Do not over tighten the screw.

MINOR MAINTENANCE TIPS

FUSE & CARRIER

- The fuse carrier is located under the rider seat.
- Remove pillion seat & rider seat.
- Open the fuse carrier lid & replace fuse as indicated inside the lid.
- Replace the required fuse with the spare fuse available in the fuse carrier.

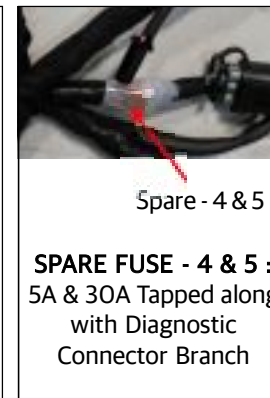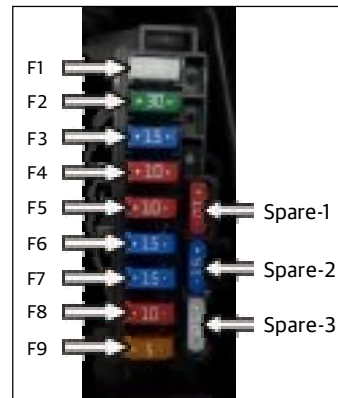

SPARE FUSE - 4 & 5 :
5A & 30A Tapped along
with Diagnostic
Connector Branch

NOTE

Please ensure to replace a spare fuse in the holder at the earliest opportunity.

MINOR MAINTENANCE TIPS

BLADE FUSE USAGE LIST

ID No.	Function	Rating
F1	CHARGING FUSE	25A
F2	MAIN FUSE	30A
F3	IGNITION - EFI FUSE	15A
F4	SIGNALLING FUSE	10A
F5	HORN FUSE	10A
F6	LIGHTING FUSE	15A
F7	ABS MAIN-1 FUSE	15A

ID No.	Function	Rating
F8	ABS MAIN-2 FUSE	10A
F9	ABS ECU	5A
SPARE-1	SPARE FUSE 1	25A
SPARE-2	SPARE FUSE 2	15A
SPARE-3	SPARE FUSE 3	10A
SPARE-4	SPARE FUSE 4	5A
SPARE-5	SPARE FUSE 5	30A



WARNING

Please get the electrical system of your Motorcycle checked thoroughly and get the faults corrected immediately after experiencing any fuse failure. Not doing this can result in to repeated fuse failures.

Usage of fuses other than specified rating will damage the complete electrical system.

MINOR MAINTENANCE TIPS

WINDSHIELD CLEANING

Wipe the windshield with a soft cloth. Do not wipe vigorously as it will cause scratches on the windshield.

Use a mild detergent and lukewarm water to remove any hard coating, insect hits etc from the windshield.

Rinse well with water and use a soft dry and lint free cloth to wipe off the water.



CAUTION

Use of any hard cleaning substances such as stain removers, water repellent compounds, petroleum products, solvents and alcohol based material will seriously affect the windshield transparency.

Scratches, cloudiness, cuts and abrasions on the windshield cannot be polished or removed. The windshield must only be replaced if damaged.



WARNING

Never attempt to clean the windshield while riding. Failure to do so may cause loss of control on the motorcycle, leading to a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.

LONG TRIP PRECAUTIONS

CHECKS PRIOR TO THE COMMENCEMENT OF LONG JOURNEY

- Service the motorcycle at a Royal Enfield Authorised Dealer / Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

CHECKS AFTER EVERY 1500 KMS OF RUN

- Any loose fasteners.
- Condition of the tyres.
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

LONG TRIP PRECAUTIONS

ITEMS TO BE CARRIED

- Tool kit.
- First aid kit.
- Bulbs for Headlight, Trafficator light, Fuse.
- Accelerator, Clutch cables.
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap.

SHOCK ABSORBER

SPRING PRELOAD & SHOCK ABSORBER SETTINGS

INCREASING THE PRELOAD


- To increase spring preload, turn preload adjuster in the clockwise direction.

REDUCING THE PRELOAD

- To decrease the spring preload, turn preload adjuster in the anti-clockwise direction.

CAUTION

It is recommended to visit Authorised Dealer for adjusting spring preload and shock absorber settings.

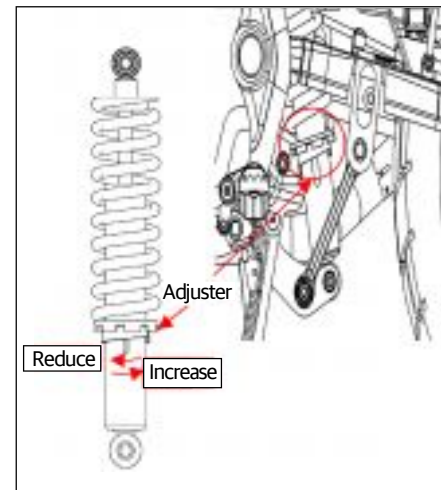

OFF ROADING

AFTER OFF ROADING

It is recommended to check the following after off roading :

TYRE PRESSURE

- Tyre pressure needs to be optimal for effective riding on surfaced roads.
- Always check the tyre pressures are correct.

BRAKES

- Riding on dirty & muddy roads brakes may not be effective immediately because of dirt & moisture on the disc pads.
- Apply the brakes in good time until the brakes have been cleaned.

RIMS

- It is recommended to check the rims & wheels for damage after off roading.

OFF ROADING

SPRING PRELOAD & SHOCK ABSORBER SETTINGS

- The off road settings of spring & shock absorber settings will impair the motorcycle's handling characteristics on surfaced roads.
- Remember to correct the spring & shock absorber settings before returning to surfaced roads.

AIR FILTER ELEMENT

- Cleaning of air filter element is recommended for effective utilisation of air filter element in returning to surfaced roads.
- Check for any damages or clog in air filter and replace if required.

WASHING PROCEDURE

PRECAUTIONS

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- DO NOT spray water directly on the steering stem area as it will damage the bearings and cause the handle bar movement to become sticky.
- Never spray water with great force on head lamp, speedometer, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, spark plug, battery, side mirrors, steering stem, etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.
- Use luke warm water and mild detergent on the painted components to remove dirt, etc.
- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the hard to reach areas of the motorcycle, electrical connections etc.

WASHING PROCEDURE

- No direct jet at the edges of decal, electrical parts, coupler joints, silencer tail pipe, radiator lubrication points like steering cone kit, brake pedal, wheel bearings, chain, brake cam & swing arm bushes to be washed in spray mode only (not in jet mode).
- Once the motorcycle has been ridden in salty conditions or near coastal areas it is recommended to wash your motorcycle with cold water. Please do not use warm water for washing as it may damage the motorcycle due to chemical reaction with the salt. After washing process once the motorcycle is completely dry it is recommended to apply anti corrosion spray on all the metal and chrome plated areas to protect the parts from corrosion.
- It is recommended not to apply the anti-corrosion spray on the brake discs.

AFTER WASHING

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivot and rear chain with lube oil.
- Polish the painted (**except Stone Black Colour / Matt paint finish**) and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake shoes.





WASHING PROCEDURE

Location	Do's	Don'ts
Steering 'T' Stem Mounting area	<p>Wipe Steering area with Cotton Cloth</p> 	<p> WARNING</p> <p> Do not spray high pressure water on top & bottom dust seal area, as shown. Wet a small piece of cloth and gently rub on required areas, to clean the steering tube area.</p> 

NOTE

High pressure water Jet should not directly Shown on the above mentioned Locations.







WASHING PROCEDURE

Location	Do's	Don'ts
Oil Cooler Fins Damage	Use protector to cover the fins Location 	Don't use High pressure water jet on Oil Cooler 
Instrument Cluster	Wipe Head lamp glass with Cotton Cloth 	Don't use High pressure Water on Head lamp Front & back 

NOTE

High pressure water Jet should not directly Shown on the above mentioned Locations.

WASHING PROCEDURE

Location	Note		
Stickers on Front Mudguard & Rear Mudguard	High pressure water Jet should not directly Shown on these Locations.		 
			 

STORAGE PRECAUTIONS

In case your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle serviced through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank and fuel line.
- Spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a chain lube.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum jelly to terminals.
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.

STORAGE PRECAUTIONS

- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free of moisture and dust.
- For re-use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.
- If the motorcycle is not used for a month or longer, It is advised to disconnect battery terminals and remove the battery. Before refitting the battery in the motorcycle, check the battery voltage is within specification, if not, recharge it from authorized service workshop / battery dealer.

TROUBLESHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer / Service Center to rectify the problem and to ensure trouble free performance.

Symptom	Observations	Check for / Remedy
Engine Does not start	1. Ignition / Engine stop switch is in 'OFF' position	Switch 'ON' Ignition / Engine stop switch.
	2. Very low / No fuel in the fuel tank.	Fill fuel.
	3. Lights / horn very dim	Weak / Discharged battery. Replace Battery.
	4. Electricals not working	1. Battery completely dead. Replace battery. 2. Fuse Blown. Replace appropriate fuse. Note: If fuse blows again, contact Authorised Service Center.

TROUBLESHOOTING

Symptom	Observations	Check for / Remedy
Engine Does not start	5. Engine Cranking but not starting	<p>Spark plug Cap / wire disconnected. Reconnect. Check if SIDE STAND is ON / SIDE STAND SWITCH MALFUNCTION.</p> <p>Check if gear is engaged and the side stand is down.</p> <p>If the ambient Temperature is low use Manual Bi-starter.</p>
Engine Starts BUT shuts off immediately	Engine shuts off as soon as throttle is closed.	<p>Idling RPM set too low / setting disturbed. Contact Authorised Service Center for resetting the Idling RPM.</p> <p>Check if the MIL Lamp is glowing; If yes, Contact Authorised Service Center.</p>

TROUBLESHOOTING

Symptom	Observations	Check for / Remedy
Engine Misfires & Runs Erratically / Stops	1. Typically happens after a Refill / Adulterated / Water in Fuel.	Drain out entire fuel and Refill with fresh fuel from a reputed filling station.
	2. Motorcycle driven in Low gear / High RPM / Crowded places for long time.	Excessive Engine temperature. Switch OFF Engine and allow to cool down. Check if the MIL Lamp is glowing; If yes, Contact Authorized Service Center.

TROUBLESHOOTING

Symptom	Observations	Check for / Remedy
Poor Pickup	Engine RPM raises disproportionately to motorcycle speed.	Clutch is Slipping. Check for sticky clutch / clutch not having any free play.
	Rear Chain excessively loose causing chain to slip on Sprocket.	Adjust Rear chain to correct tension. Check if the MIL Lamp is glowing; If yes, Contact Authorized Service Center.
ABS (Anti lock Braking system)	ABS lamp continuously ON.	Take the vehicle to service center for diagnosis.

WARRANTY TERMS & CONDITIONS

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 3 Years / 30,000 kms from the date of sale, whichever is earlier.
2. In order to avail warranty benefits by second or subsequent owner, the second / subsequent owner should inform the nearest Royal Enfield Service Center about the purchase of the bike and shall fill in the requisite details in the form as requested by Royal Enfield.
3. The warranty shall be applicable only if all the services are availed in the respective period / kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
5. Consumables like Oil, Oil Filter, Fuel etc. used during warranty repair / replacement are not covered and chargeable to the customer.

WARRANTY TERMS & CONDITIONS

6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in referring such claims on the respective manufacturer.
7. Warranty shall not apply to:
 - (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.
 - (b) Components like fuel filter, oil filter, air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, steering ball races, electrical equipment, wiring harness etc., which are subjected to normal wear and tear.
 - (c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.
 - (d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.
 - (e) Damages to engine management system parts (like ECU, Throttle body, Sensors, etc.) due to tampering which affects the performance of the motorcycle.
 - (f) Parts damaged due to accidents, collision, abuse etc.

WARRANTY TERMS & CONDITIONS

- (g) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration. Oil leakage, discoloration of exhaust pipe bend and cat region / silencer / soft or hard shock absorber etc.
 - (h) Warranty is not applicable for discoloration of Exhaust Pipe & Silencer, as it is a natural process that will happen during usage.
 - (i) Defects arising from fitment of unauthorised or additional electrical loads.
 - (j) Motorcycle serviced or repaired at unauthorised service centers.
 - (k) Motorcycle used for competitions / racing / Stage Rallying etc.
 - (l) Electrical component like bulbs, fuses etc. and electronic components failure due to repairs by arc welding.
 - (m) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.
 - (n) Oxidization of buffed/painted/powder coated items etc.
8. Use only Royal Enfield approved parts and accessories. Use of certain other manufacturer's performance parts will void your new motorcycle warranty.
 9. RE reserves the right to finally decide on all warranty claims.
 10. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.

EMISSION WARRANTY

In compliance with the provisions of Rule 115(2) of the Central Motor Motorcycle Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warrants that if on examination by its Authorised Dealer / Service Center, the motorcycle fails to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Enfield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the part/s is/are not established, Royal Enfield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc. shall be chargeable to the customer as per actuals.

EMISSION WARRANTY

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable. Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs.

Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

Royal Enfield will not be responsible for any penalties that may be charged by statutory authorities on account of failure to comply with the in-use emission standards.

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

EMISSION WARRANTY

THE WARRANTY SHALL APPLY IF THE CUSTOMER

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest RE Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Vehicles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle is specified in the owner's manual from the date of original purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

EMISSION WARRANTY

THE EMISSION WARRANTY SHALL NOT APPLY IF

- A valid "Pollution Under Control" certificate is not produced.
- The motorcycle is not serviced by RE Authorised Dealer / Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.
- Replacement parts not specified and approved by Royal Enfield have been used.
- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and rallies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's Manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.

EMISSION WARRANTY

- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

TIPS TO BE ON THE RIGHT SIDE OF LAW

- Always get your motorcycle checked to meet the emission regulations through an authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale).

TIPS TO REDUCE POLLUTION

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the Owner's Manual.

ENVIRONMENT CARE

BE AN ENVIRONMENTALLY CONSCIOUS RIDER

Swachh Bharat is Sachh Bharat. Being a Royal Enfield rider help the nation and the future generation for a cleaner environment.

Engine oil, oil filter, petrol, Battery, tyres, tubes, electrical & electronic parts replaced on your vehicle are to be disposed off in a proper way without polluting the environment. When your vehicle is attended in a Royal Enfield workshop our dealers do take care of that aspect. If you are getting it attended elsewhere please ensure that items are segregated and kept in a suitable container or bag without allowing them to get into soil, water or sewerage line, drains, water bodies like lake, canal, river. Sea etc. We strongly recommend that they are disposed off, in accordance to the applicable law, through Pollution Control Board approved agencies in the locality.

CLEANING OR WASHING YOUR ROYAL ENFIELD

Please ensure that the effluents are not discharged into the environment. Please promote dry washing which helps the nation to conserve water too.

This note does not constitute legal advice; please contact your local authorities or your nearest Royal Enfield Service Centre for further guidance.

SERVICE / MAINTENANCE RECORD

S. No.	Type of Service	Schedule	Date	Job Card No.	KMS	Dealer Code	Brief details of service
1.	1st Free Service*	500 Kms / 45 Days					
2.	2nd Free Service*	5000 Kms / 6 Months					
3.	3rd Free Service*	10000 Kms / 12 Months					
4.	4th Free Service*	15000 Kms / 18 Months					
5.	5th Paid Service	20000 Kms / 24 Months					
6.	6th Paid Service	25000 Kms / 30 Months					
7.	7th Paid Service	30000 Kms / 36 Months					

NOTE

Cost of parts, lubricants, filters and other consumables are chargeable to the customer on their respective service activities. Refer the Periodic maintenance Chart for the respective service activities.

* Labour is free for this services alone.

SERVICE / MAINTENANCE RECORD

S. No.	Type of Service	Schedule	Date	Job Card No.	KMS	Dealer Code	Brief details of service
8.							
9.							
10.							
11.							
12.							
13.							
14.							

NOTE

Cost of parts, lubricants, filters and other consumables are chargeable to the customer on their respective service activities.
Refer the Periodic maintenance Chart for the respective service activities.

* Labour is free for this services alone.

REGIONAL & AREA OFFICES

EAST E1 - Jharkhand Royal Enfield (A Unit of Eicher Motors Ltd) Maple Plaza, Gate No. 2 , 3rd Floor, Ashok Nagar, Ranchi (Jharkhand)-834002 E2 - West Bengal ROYAL ENFIELD A Unit of Eicher Motors Ltd Shrichi Tower, 686, Anandapur, 3rd Floor, Kolkata - 700 107 Phone No : 033- 40461000 E3 - Assam Royal Enfield, Office Number- 501, 5th floor, Sri Kamakhya Tower, Christian Basti, G.S. Road, Assam, Guwahati- 781005 North N1 - J&K, Punjab, Chandigarh Royal Enfield (A unit of EICHER Motors Ltd) SCO.369, 1st Floor, Sector 8 Panchkula - 134113 (Haryana)	N2 - Haryana Royal Enfield (A unit of EICHER Motors Ltd) Eicher Engineering Components, Plot No.7, HSIDC Industrial Area, Sector - 18, Palam Gurgaon Road, Gurgaon - 122 015, Haryana. Ph : 0124-4278138, 4278139. N3 - Rajasthan Royal Enfield (A Unit of Eicher Motors Limited) G-5, 6, 7 Gitanjali Towers, Ajmer Road. Jaipur - 302006 Rajasthan N4 - UP Royal Enfield (A Unit of Eicher Motors Ltd.) Office Space #502, 5th Floor Cyber Heights, Vibhuti Khand, Gomti Nagar, Lucknow -226010, UP, India	N5 - Uttarkhand Royal Enfield (A Division of Eicher Motors Limited) Doon Express Business Park Opp Transport Nagar, Saharanpur Road, Majra Dehradun -248001 India SOUTH S1 - Telangana Royal Enfield, (A Unit of Eicher Motors Ltd) Ground Floor, No:8-3-166/B to F, Erragadda Main Road, Beside Gokul Theatre Erragadda, Hyderabad-500018. S2 - Karnataka Royal Enfield (A Division of Eicher Motors Limited) Door No. 2067/1, 2068/2, East End - 'A' Main, 9th Block, Jayanagar, Bangalore - 560069 S3 - Tamilnadu Royal Enfield (A unit of EICHER Motors Ltd) Plot No.9&10, OMR Road, Palavakkam (Opp. to Apollo Hospital) Chennai - 600096	S4 - Tamilnadu 2 Royal Enfield (A Unit of Eicher Motors Ltd) Regional Office, Mosika Towers, 4th floor, Plot no. 583, Ward No.8, Anna Nagar 2nd Main Road, Madurai-625 020. S5 - Kerala Royal Enfield (A Division of Eicher Motors Limited) 25/85A, Opp. Indian oil Petrol Pump, Koonamthal, Edappally Post, Cochin - 24. PH - 07702302220 WEST W1 - Gujarat Royal Enfield (A Division of Eicher Motors Limited) 103 Safal Prelude, Opposite Parsavanath Esquire cross Road, Corporate Road, Prahlad Nagar, Ahmedabad - 380015, India	W2 - Madhyapradesh Royal Enfield (A Unit of Eicher Motors Ltd.) Block no 11,12,13,14 3rd floor, Maple high street, Opp -Aashima Mall, Hoshnagabad Road, Bhopal - 462026 W3 - Maharashtra Royal Enfield (A Unit of Eicher Motors Ltd.) Office No : 1402, The Affaires, Plot No 9, Sector 17 Landmark - Near Moraj Residency, Palm beach road, Sanpada Navi Mumbai - 400705 W4 - Maharashtra 2 Royal Enfield (A Unit of Eicher Motors LTD) Vascon Eco Tower, Office No. 402, 4th Floor, Eco Tower, Behind Symantec, Baner Road, Baner, Pune, Maharashtra – 411045.
---	---	---	--	---

NOTES

Royal Enfield recommended lubricants



Royal Enfield recommended add ons to maintain your vehicle.





ROYAL ENFIELD

Part No. RAM00136/A

ROYALENFIELD.COM